



Address C:\Program Files\Accessories\HyperTerminal

GM862-GSM-GPRS - HyperTerminal



GM862-GS...

at  
OK  
at&v

DTE SPEED  
DTE FORMAT  
GSM DATA MODE  
AUTOBAUD  
COMMAND ECHO  
RESULT MESSAGES  
VERBOSE MESSAGES  
EXTENDED MESSAGES  
LINE SPEED  
CONSTANT DTE SPEED  
FLOW CONTROL OPTIONS  
ERROR CORRECTION MODE  
CTS (C106) OPTIONS  
DSR (C107) OPTIONS  
DTR (C108) OPTIONS  
DCD (C109) OPTIONS  
RI (C125) OPTIONS  
C108/1 OPERATION  
POWER SAVING ON DTR  
DEFAULT PROFILE

GM862-GSM-GPRS Properties

Connect To Settings



GM862-GSM-GPRS

Chan

Country code: Germany (49)

Enter the area code without the long-dista

Area code: 06103

Phone number:

Connect using: Direct to Com1

Configure...

- Use country code and area code
- Redial on busy

OK

: +CFUN:1=NU  
: &Y0=user profile 1

COM1 Properties

Port Settings

Bits per second: 57600

Data bits: 8

Parity: None

Stop bits: 1

Flow control: None

**If you are using GPRS please use Flow control "ON" regardless if you are using a PC or a Micro Controller. To check connectivity please use Carrier Detect.**

Advanced...

Restore Defaults

OK

Cancel

Apply