

User Manual

Rev. 1.05 – 16 April, 2009



Revision

Date	Version	Changes
16 April, 2009	1.05	Minor edits
12 March, 2009	1.04	Updated product name
06 March, 2009	1.03	Minor edits
20 February, 2009	1.02	DVI output information updated
24 December, 2008	1.01	Update LVDS jumper settings
31 October 2008	1.00	Initial release

Copyright

COPYRIGHT NOTICE

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

TRADEMARKS

All registered trademarks and product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

Packing List



NOTE:

If any of the components listed in the checklist below are missing, please do not proceed with the installation. Contact your sales representative.

The items listed below should all be included in the KINO-945GSE package.

- 1 x KINO-945GSE Mini-ITX Motherboard
- 1 x Dual RS-232 cable
- 2 x SATA cable
- 1 x I/O shielding
- 1 x Mini jumper pack
- 1 x Utility CD
- 1 x QIG (quick installation guide)

Images of the above items are shown in **Chapter 3**.

Table of Contents

1 INTRODUCTION.....	1
1.1 INTRODUCTION.....	2
1.2 KINO-945GSE OVERVIEW	2
1.2.1 Overview Photo.....	2
1.2.2 Peripheral Connectors and Jumpers	3
1.2.3 Technical Specifications.....	4
2 DETAILED SPECIFICATIONS	7
2.1 DIMENSIONS.....	8
2.1.1 Board Dimensions.....	8
2.1.2 External Interface Panel Dimensions	9
2.2 DATA FLOW	10
2.3 EMBEDDED INTEL® ATOM™ PROCESSOR	11
2.3.1 Overview	11
2.3.2 Features	11
2.3.3 Front Side Bus (FSB).....	12
2.4 INTEL® 945GSE NORTHBRIDGE CHIP	13
2.4.1 DDR2 Controller.....	13
2.4.2 Graphics.....	14
2.4.2.1 Analog CRT (VGA)	15
2.4.2.2 LVDS	15
2.4.2.3 TV Out	15
2.4.2.4 SDVO and DVI.....	16
2.5 INTEL® ICH7M SOUTHBRIDGE CHIPSET	16
2.5.1 Audio Codec '97 Controller.....	18
2.5.2 IDE Interface	18
2.5.2.1 IDE Connector	18
2.5.2.2 CompactFlash® Slot.....	19
2.5.3 Low Pin Count (LPC) Interface.....	20
2.5.4 PCI Bus	20
2.5.4.1 PCI Expansion Card Slot	21

2.5.5	<i>PCIe Bus</i>	21
2.5.5.1	<i>PCIe GbE Ethernet</i>	21
2.5.5.2	<i>PCIe Mini Card</i>	23
2.5.6	<i>Real Time Clock</i>	23
2.5.7	<i>SATA Controller</i>	24
2.5.8	<i>USB Controller</i>	24
2.6	LPC BUS COMPONENTS	25
2.6.1	<i>BIOS Chipset</i>	26
2.6.2	<i>iTE IT8718F Super I/O chipset</i>	26
2.6.2.1	<i>LPC Interface</i>	27
2.6.2.2	<i>16C550 UARTs</i>	27
2.6.2.3	<i>Digital Input/Output</i>	27
2.6.2.4	<i>Enhanced Hardware Monitor</i>	27
2.6.2.5	<i>Fan Speed Controller</i>	27
2.6.2.6	<i>Keyboard/Mouse Controller</i>	28
2.6.2.7	<i>Parallel Port</i>	28
2.6.3	<i>Fintek F81216D LPC Serial Port Chipset</i>	28
2.7	ENVIRONMENTAL AND POWER SPECIFICATIONS	28
2.7.1	<i>System Monitoring</i>	28
2.7.2	<i>Operating Temperature and Temperature Control</i>	29
2.7.3	<i>Power Consumption</i>	30
3	UNPACKING	31
3.1	ANTI-STATIC PRECAUTIONS	32
3.2	UNPACKING	32
3.2.1	<i>Unpacking Precautions</i>	32
3.3	UNPACKING CHECKLIST	33
3.3.1	<i>Package Contents</i>	33
3.3.2	<i>Optional Items</i>	34
4	CONNECTORS	35
4.1	PERIPHERAL INTERFACE CONNECTORS	36
4.1.1	<i>Layout</i>	36
4.1.2	<i>Internal Peripheral Interface Connectors</i>	36
4.1.3	<i>External Interface Panel Connectors</i>	37

KINO-945GSE Motherboard

4.2 INTERNAL PERIPHERAL CONNECTORS	38
4.2.1 ATX Power Connector	38
4.2.2 Battery Connector.....	39
4.2.3 CompactFlash® Socket	40
4.2.4 Digital I/O Connector.....	42
4.2.5 Fan Connector	43
4.2.6 Front Panel Connector	44
4.2.7 IDE Connector.....	45
4.2.8 Infrared Interface Connector	47
4.2.9 LCD Backlight Inverter Connector.....	48
4.2.10 LVDS LCD Connector	49
4.2.11 PCIe Mini Card Slot.....	50
4.2.12 SATA Drive Connectors	52
4.2.13 Serial Port Connectors (RS-232).....	53
4.2.14 Serial Port Connectors (RS-422/485).....	54
4.2.15 TV Out Connector	55
4.2.16 USB Connectors.....	56
4.3 EXTERNAL PERIPHERAL INTERFACE CONNECTOR PANEL	57
4.3.1 Audio Connector	58
4.3.2 Keyboard/Mouse Connector	58
4.3.3 DVI Connector.....	59
4.3.4 LAN Connectors.....	60
4.3.5 Serial Port Connectors	61
4.3.6 USB Connectors.....	62
4.3.7 VGA Connector.....	62
5 INSTALLATION	64
5.1 ANTI-STATIC PRECAUTIONS	65
5.2 INSTALLATION CONSIDERATIONS.....	66
5.2.1 Installation Notices	66
5.2.2 Installation Checklist	67
5.3 UNPACKING.....	67
5.4 SO-DIMM INSTALLATION	68
5.5 CF CARD INSTALLATION	69
5.6 JUMPER SETTINGS	70

5.6.1 AT/ATX Selection	70
5.6.2 Clear CMOS Jumper	71
5.6.3 CF Card Setup	73
5.6.4 COM3 RS-232/422/485 Selection Jumper	73
5.6.5 LCD Panel Type Selection	74
5.6.6 LVDS Voltage Selection.....	76
5.7 CHASSIS INSTALLATION.....	77
5.7.1 Airflow.....	77
5.7.2 Motherboard Installation.....	78
5.8 INTERNAL PERIPHERAL DEVICE CONNECTIONS.....	78
5.8.1 ATA Flat Cable Connection	78
5.8.2 SATA Drive Connection	79
5.8.3 Dual RS-232 Cable with Slot Bracket.....	79
5.8.4 USB Cable (Dual Port) with Slot Bracket	80
5.9 EXTERNAL PERIPHERAL INTERFACE CONNECTION	81
5.9.1 LAN Connection (Single Connector)	81
5.9.2 PS/2 Y-Cable Connection.....	81
5.9.3 Serial Device Connection	82
5.9.4 USB Connection (Dual Connector).....	82
5.9.5 VGA Monitor Connection	83
6 BIOS SETUP	84
6.1 INTRODUCTION.....	85
6.1.1 Starting Setup.....	85
6.1.2 Using Setup	85
6.1.3 Getting Help.....	86
6.1.4 Unable to Reboot After Configuration Changes.....	86
6.1.5 BIOS Menu Bar.....	86
6.2 MAIN.....	87
6.3 ADVANCED	88
6.3.1 CPU Configuration.....	90
6.3.2 IDE Configuration	91
6.3.2.1 IDE Master, IDE Slave	93
6.3.3 Super IO Configuration	98
6.3.4 Hardware Health Configuration.....	101



KINO-945GSE Motherboard

6.3.5 Power Configuration.....	105
6.3.5.1 APM Configuration.....	106
6.3.6 Remote Configuration.....	109
6.3.7 USB Configuration.....	113
6.4 PCI/PNP.....	114
6.5 BOOT.....	117
6.5.1 Boot Settings Configuration.....	118
6.5.2 Boot Device Priority.....	120
6.6 SECURITY.....	120
6.7 CHIPSET.....	121
6.7.1 Northbridge Chipset Configuration.....	123
6.7.2 Southbridge Configuration.....	126
6.8 EXIT.....	127
7 SOFTWARE INSTALLATION.....	129
7.1 AVAILABLE SOFTWARE DRIVERS.....	130
7.2 STARTING THE DRIVER PROGRAM.....	130
7.3 CHIPSET DRIVER INSTALLATION.....	130
7.4 VGA DRIVER INSTALLATION.....	134
7.5 LAN DRIVER INSTALLATION.....	138
7.6 AUDIO DRIVER INSTALLATION.....	141
A BIOS OPTIONS.....	144
B TERMINOLOGY.....	148
C DIGITAL I/O INTERFACE.....	152
C.1 INTRODUCTION.....	153
C.2 DIO CONNECTOR PINOUTS.....	153
C.3 ASSEMBLY LANGUAGE SAMPLES.....	154
C.3.1 Enable the DIO Input Function.....	154
C.3.2 Enable the DIO Output Function.....	154
D WATCHDOG TIMER.....	155
E ADDRESS MAPPING.....	158
E.1 DIRECT MEMORY ACCESS (DMA).....	159
E.2 INPUT/OUTPUT (IO).....	159

E.3 INTERRUPT REQUEST (IRQ)..... 161

E.4 MEMORY 162

F HAZARDOUS MATERIALS DISCLOSURE..... 163

F.1 HAZARDOUS MATERIALS DISCLOSURE TABLE FOR IPB PRODUCTS CERTIFIED AS
ROHS COMPLIANT UNDER 2002/95/EC WITHOUT MERCURY 164




List of Figures

Figure 1-1: KINO-945GSE	2
Figure 1-2: KINO-945GSE Overview	3
Figure 2-1: KINO-945GSE Dimensions (mm).....	8
Figure 2-2: External Interface Panel Dimensions (mm).....	9
Figure 2-3: Data Flow Block Diagram.....	10
Figure 2-4: Intel® Atom™ N270 CPU.....	11
Figure 2-5: Front Side Bus.....	12
Figure 2-6: Intel® 945GSE Northbridge Chip.....	13
Figure 2-7: DDR2 SO-DIMM Socket.....	14
Figure 2-8: Graphics.....	15
Figure 2-9: Intel® ICH7M Southbridge Chipset	17
Figure 2-10: IDE Connector	18
Figure 2-11: CompactFlash® Slot.....	20
Figure 2-12: PCI Edge Connector	21
Figure 2-13: Realtek PCI GbE Controllers.....	22
Figure 2-14: PCIe Mini Card Slot.....	23
Figure 2-15: SATA Connectors	24
Figure 2-16: Onboard USB Implementation.....	25
Figure 2-17: LPC Bus	26
Figure 4-1: Connector and Jumper Locations [Front Side]	36
Figure 4-2: ATX Power Connector Pinout Locations.....	39
Figure 4-3: Battery Connector Location.....	40
Figure 4-4: CF Card Socket Location	41
Figure 4-5: Digital I/O Connector Locations	43
Figure 4-6: CPU Fan Connector Location	44
Figure 4-7: Front Panel Connector Pinout Locations.....	45
Figure 4-8: IDE Device Connector Locations	46
Figure 4-9: Infrared Connector Pinout Locations	47
Figure 4-10: LCD Backlight Connector Pinout Locations	48
Figure 4-11: LVDS LCD Connector Pinout Locations.....	49

Figure 4-12: PCIe Mini Card Slot Location	51
Figure 4-13: SATA Drive Connector Locations	53
Figure 4-14: RS-232 Connector Pinout Locations.....	54
Figure 4-15: RS-422/485 Connector Pinout Locations.....	55
Figure 4-16: TV Connector Pinout Locations	56
Figure 4-17: USB Connector Pinout Locations	57
Figure 4-18: KINO-945GSE External Peripheral Interface Connector	58
Figure 4-19: Audio Connector	58
Figure 4-20: PS/2 Pinouts	59
Figure 4-21: RJ-45 Ethernet Connector.....	61
Figure 4-22: RS-232 Serial Port Pinout Locations.....	62
Figure 4-23: VGA Connector	63
Figure 5-1: SO-DIMM Installation	68
Figure 5-2: AT/ATX Power Selection Jumper Location	71
Figure 5-3: Clear CMOS Jumper	72
Figure 5-4: CF Card Setup Jumper Location	73
Figure 5-5: COM3 RS-232/422/485 Selection Jumper Location	74
Figure 5-6: LCD Panel Type Selection Jumper Pinout Locations	75
Figure 5-7: LVDS Voltage Selection Jumper Pinout Locations	77
Figure 7-1: Chipset Driver Welcome Screen.....	131
Figure 7-2: Chipset Driver License Agreement	131
Figure 7-3: Chipset Driver Read Me File	132
Figure 7-4: Chipset Driver Setup Operations	133
Figure 7-5: Chipset Driver Installation Finish Screen.....	133
Figure 7-6: VGA Driver Read Me File.....	134
Figure 7-7: VGA Driver Setup Files Extracted	135
Figure 7-8: VGA Driver Welcome Screen	135
Figure 7-9: VGA Driver License Agreement.....	136
Figure 7-10: VGA Driver Read Me File.....	136
Figure 7-11: VGA Driver Setup Operations	137
Figure 7-12: VGA Driver Installation Finish Screen	138
Figure 7-13: LAN Driver Welcome Screen	139
Figure 7-14: LAN Driver Welcome Screen	139
Figure 7-15: LAN Driver Installation	140
Figure 7-16: LAN Driver Installation Complete.....	140

KINO-945GSE Motherboard

Figure 7-17: Audio Driver Options	141
Figure 7-18: AC'97 Driver Installation Welcome Screen	142
Figure 7-19: AC'97 Driver Installation Verification.....	142
Figure 7-20: AC'97 Driver Installation Complete	143

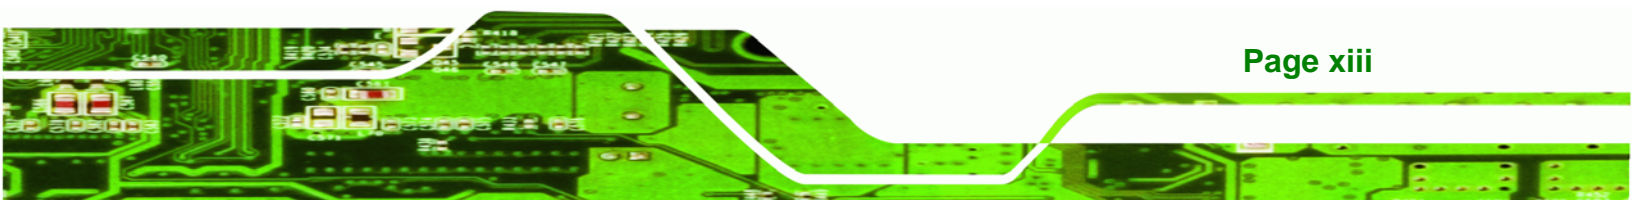

List of Tables

Table 1-1: Technical Specifications.....	6
Table 2-1: Supported HDD Specifications	19
Table 2-2: Power Consumption.....	30
Table 3-1: Packing List.....	34
Table 3-2: Power Consumption.....	34
Table 4-1: Peripheral Interface Connectors	37
Table 4-2: Rear Panel Connectors	38
Table 4-3: ATX Power Connector Pinouts	39
Table 4-4: Battery Connector Pinouts	40
Table 4-5: CF Card Socket Pinouts.....	42
Table 4-6: DIO Connector Pinouts	43
Table 4-7: CPU Fan Connector Pinouts	44
Table 4-8: Front Panel Connector Pinouts.....	45
Table 4-9: IDE Connector Pinouts.....	47
Table 4-10: Infrared Connector Pinouts	48
Table 4-11: LCD Backlight Connector Pinouts.....	49
Table 4-12: LVDS LCD Port Connector Pinouts	50
Table 4-13: PCIe Mini Card Slot Pinouts	52
Table 4-14: SATA Drive Connector Pinouts.....	53
Table 4-15: RS-232 Connector Pinouts	54
Table 4-16: RS-422/485 Connector Pinouts	55
Table 4-17: TV Port Connector Pinouts.....	56
Table 4-18: USB Port Connector Pinouts.....	57
Table 4-19: PS/2 Connector Pinouts.....	59
Table 4-20: DVI Connector Pinouts.....	60
Table 4-21: LAN Pinouts	60
Table 4-22: RJ-45 Ethernet Connector LEDs	61
Table 4-23: RS-232 Serial Port Pinouts	61
Table 4-24: USB Port Pinouts.....	62
Table 4-25: VGA Connector Pinouts.....	63



KINO-945GSE Motherboard

Table 5-1: Jumpers70

Table 5-2: AT/ATX Power Selection Jumper Settings.....71

Table 5-3: Clear CMOS Jumper Settings.....72

Table 5-4: CF Card Setup Jumper Settings73


Table 5-5: COM3 RS-232/422/485 Selection Jumper Pinouts.....74

Table 5-6: LCD Panel Type Selection Jumper Settings75

Table 5-7: LVDS Voltage Selection Jumper Settings.....76

Table 5-8: Provided Cables.....78

Table 6-1: BIOS Navigation Keys86

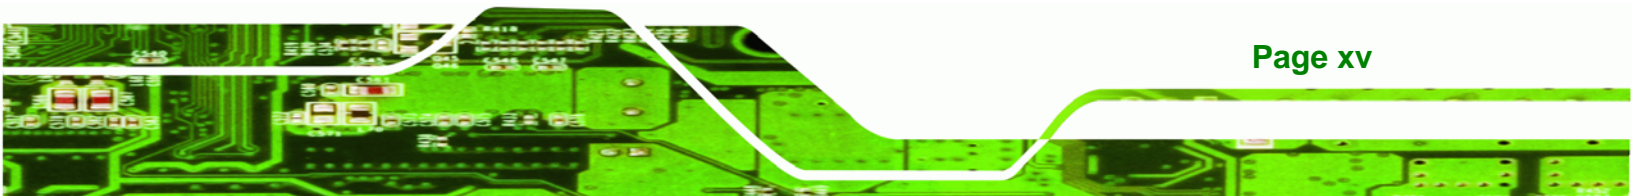

BIOS Menus


BIOS Menu 1: Main	87
BIOS Menu 2: Advanced	89
BIOS Menu 3: CPU Configuration	90
BIOS Menu 4: IDE Configuration	91
BIOS Menu 5: IDE Master and IDE Slave Configuration	93
BIOS Menu 6: Super IO Configuration	98
BIOS Menu 7: Hardware Health Configuration	101
BIOS Menu 8: Power Configuration	105
BIOS Menu 9: Advanced Power Management Configuration	106
BIOS Menu 10: Remote Access Configuration	109
BIOS Menu 11: USB Configuration	113
BIOS Menu 12: PCI/PnP Configuration	115
BIOS Menu 13: Boot	117
BIOS Menu 14: Boot Settings Configuration	118
BIOS Menu 15: Boot Device Priority Settings	120
BIOS Menu 16: Security	121
BIOS Menu 17: Chipset	122
BIOS Menu 18: Northbridge Chipset Configuration	123
BIOS Menu 19: Southbridge Chipset Configuration	126
BIOS Menu 20: Exit	127



Chapter

1

Introduction

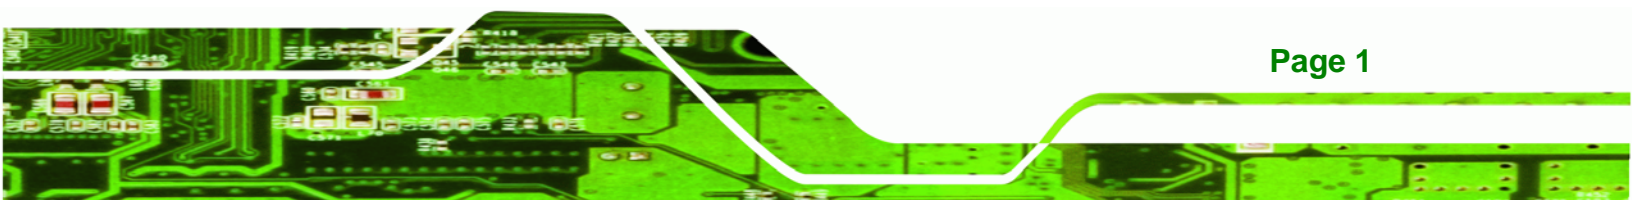

1.1 Introduction



Figure 1-1: KINO-945GSE

The KINO-945GSE Mini-ITX motherboards are embedded 45 nm Intel® Atom™ processor platforms. The embedded Intel® Atom™ N270 processor has a 1.60 GHz clock speed, a 533 MHz FSB and a 512 KB L2 cache. The KINO-945GSE also supports one 200-pin 533 MHz 2.0 GB (max.) DDR2 SDRAM SO-DIMM. The board comes with VGA, DVI, HDTV and 18-bit dual-channel LVDS video outputs. The KINO-945GSE also comes with two PCI Express (PCIe) Gigabit Ethernet (GbE) connectors, onboard AC'97 audio, three RS-232 serial ports, one RS-232/422/485 serial port, a CompactFlash® slot, six USB 2.0 ports, IDE connector and PCI expansion card slot.

1.2 KINO-945GSE Overview

1.2.1 Overview Photo

The KINO-945GSE has a wide variety of peripheral interface connectors. Figure 1-2 is a labeled photo of the peripheral interface connectors on the KINO-945GSE.

KINO-945GSE Motherboard

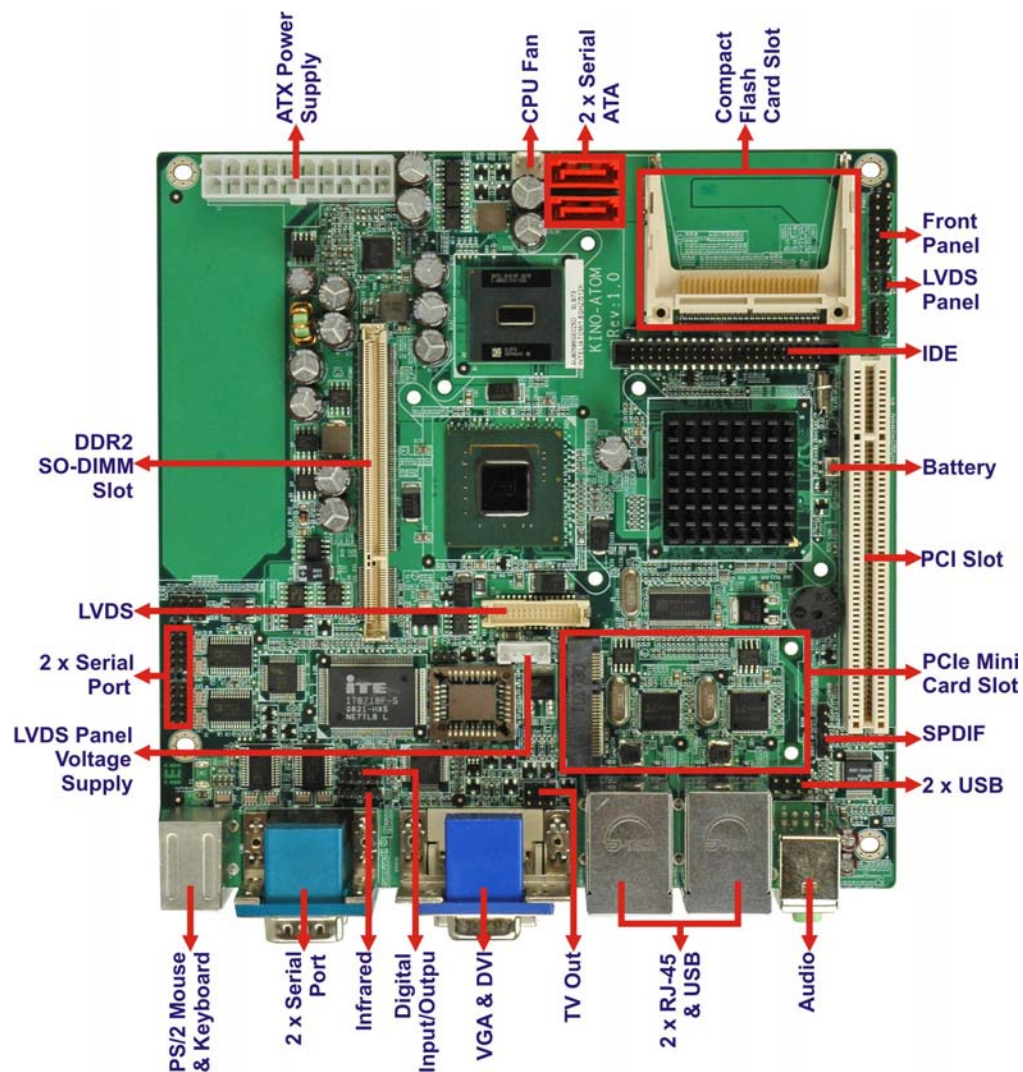


Figure 1-2: KINO-945GSE Overview

1.2.2 Peripheral Connectors and Jumpers

The KINO-945GSE has the following connectors on-board:

- 1 x ATX power connector
- 1 x Battery connector
- 1 x CompactFlash® slot
- 1 x DDR2 SO-DIMM memory socket
- 1 x Digital I/O connector
- 1 x Fan connector

- 1 x Front panel connector
- 1 x IDE connector (44-pin)
- 1 x Infrared connector
- 1 x LCD backlight inverter connector
- 1 x LVDS connector
- 1 x PCIe Mini slot
- 2 x RS-232 connectors
- 1 x RS-422/485 connector
- 2 x SATA connectors
- 1 x TV output connector
- 1 x USB 2.0 connector (2 ports)

The KINO-945GSE has the following external peripheral interface connectors on the board rear panel.

- 1 x Audio stereo output
- 1 x DVI
- 2 x LAN
- 1 x Microphone input
- 1 x PS/2 keyboard connector
- 1 x PS/2 mouse connector
- 2 x RS-232 serial ports
- 4 x USB 2.0
- 1 x VGA

The KINO-945GSE has the following on-board jumpers:

- ATX power control
- Clear CMOS
- CompactFlash® card setup
- LCD panel type selector
- LCD voltage selector

1.2.3 Technical Specifications

KINO-945GSE technical specifications are listed in Table 1-1. See **Chapter 2** for details.



KINO-945GSE Motherboard

Specification	KINO-945GSE
Form Factor	Mini-ITX
System CPU	45 nm 1.60 GHz Intel® Atom™ N270
Front Side Bus (FSB)	533 MHz
System Chipset	Northbridge: Intel® 945GSE Southbridge: Intel® ICH7M
Memory	One 200-pin SO-DIMM socket supports one 533 MHz 2.0 GB (max.) DDR2 SDRAM SO-DIMM
CompactFlash®	One CompactFlash® socket
Super I/O	iTE IT8718F
Display	VGA DVI (through Silicon Image Sil1362) LVDS HDTV
BIOS	AMI BIOS label
Audio	Realtek ALC655 AC'97 codec
LAN	Two Realtek RTL8111C PCIe GbE controllers
COM	Three RS-232 serial ports (one internal, two external) One RS-232/422/485 serial port (internal)
USB2.0	Six USB 2.0 devices supported (two internal, four external)
Hard Drives	One 44-pin IDE connector
SATA	Two 1.5 Gb/s SATA drives supported
Keyboard/mouse	Two external PS/2 connectors
Digital I/O	One 8-bit digital input/output connector; 4-bit input/4-bit output through the iTE IT8718F super I/O
Watchdog Timer	Software programmable 1-255 sec. through the iTE IT8718F super I/O

KINO-945GSE Motherboard

Specification	KINO-945GSE
Infrared	One infrared connector supports Serial Infrared (SIR) Amplitude Shift Keyed IR (ASKIR)
Power Supply	ATX power supported
Power Consumption	5 V @ 2.89 A 12 V @ 0.04 A (with 2.0 GB DDR2 memory)
Temperature	0°C – 60°C (32°F - 140°F)
Humidity (operating)	5%~95% non-condensing
Dimensions (LxW)	170 mm x 170 mm
Weight (GW/NW)	1100 g / 370 g


Table 1-1: Technical Specifications



Chapter

2

Detailed Specifications

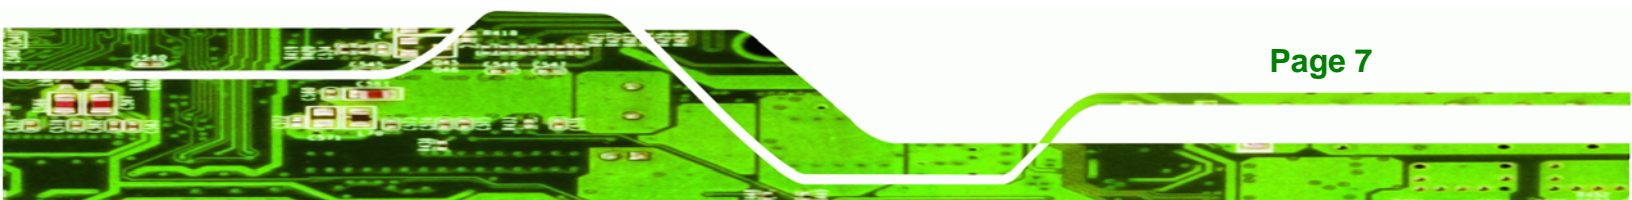

2.1 Dimensions

2.1.1 Board Dimensions

The dimensions of the board are listed below:

- Length: 170 mm
- Width: 170 mm

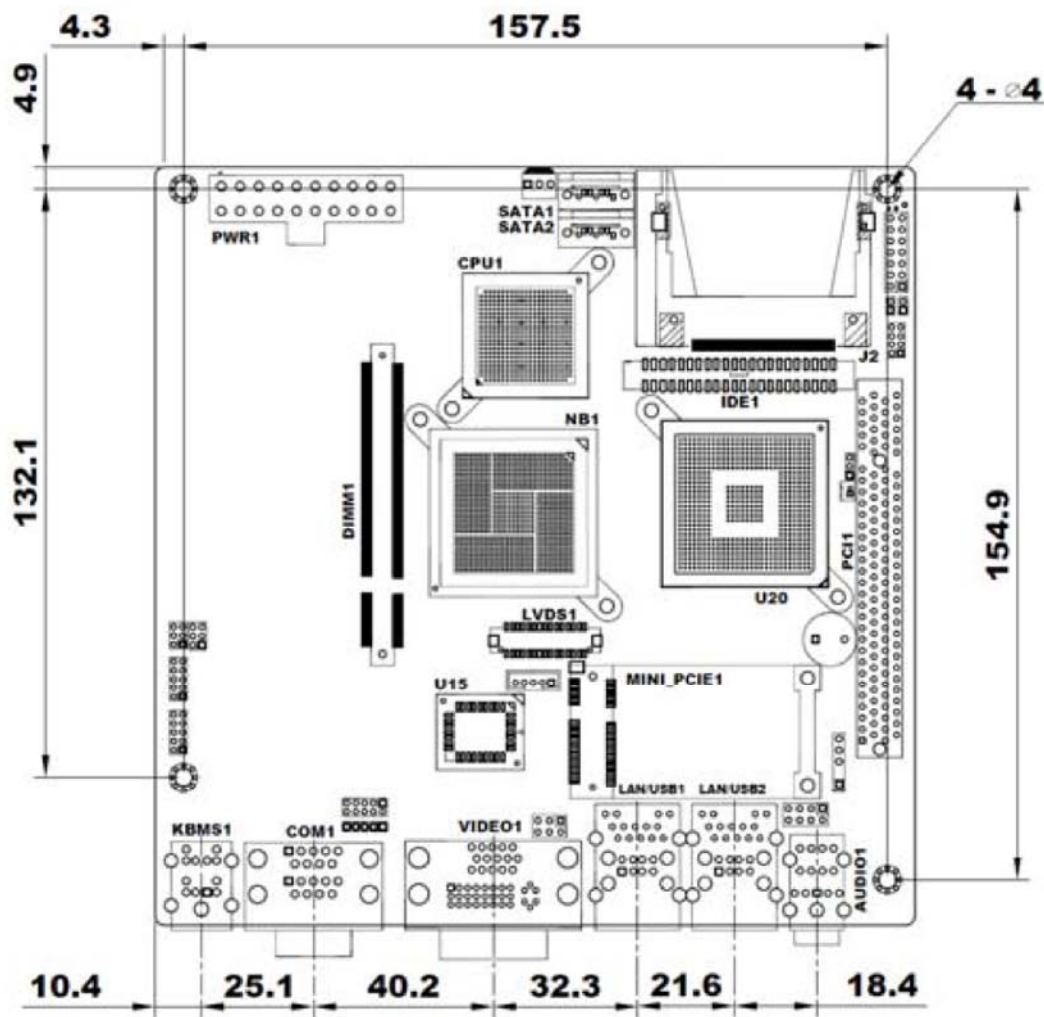


Figure 2-1: KINO-945GSE Dimensions (mm)

KINO-945GSE Motherboard

2.1.2 External Interface Panel Dimensions

External peripheral interface connector panel dimensions are shown in Figure 2-2.

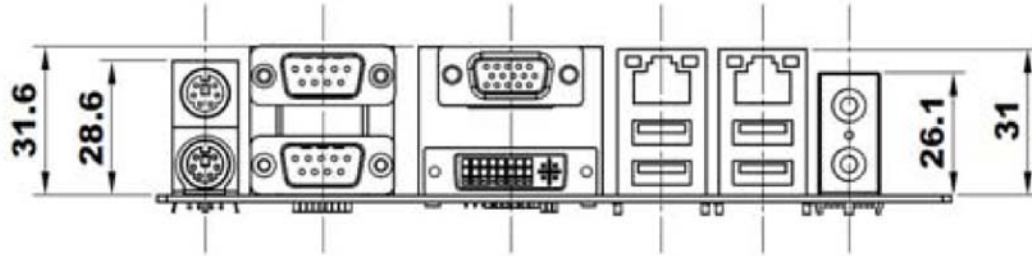


Figure 2-2: External Interface Panel Dimensions (mm)

2.2 Data Flow

Figure 2-3 shows the data flow between the two on-board chipsets and other components installed on the motherboard and described in the following sections of this chapter.

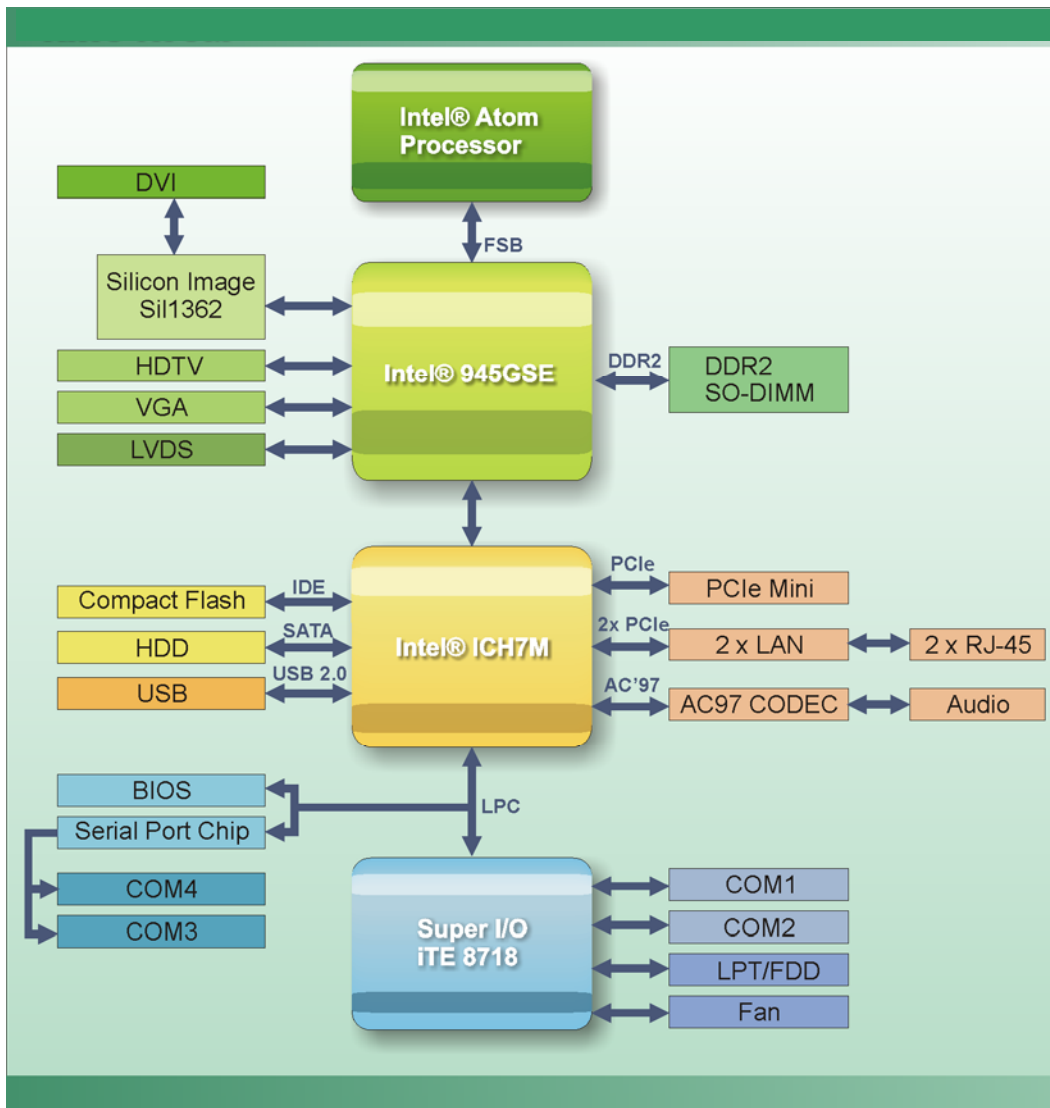


Figure 2-3: Data Flow Block Diagram

2.3 Embedded Intel® Atom™ Processor

2.3.1 Overview

The KINO-945GSE comes with an embedded 45 nm 1.60 GHz Intel® Atom™ N270 processor. The processor supports a 533 MHz FSB and has a 512 KB L2 cache. The low power processor has a maximum power of 2.5 W. The processor is shown in Figure 2-4 below.

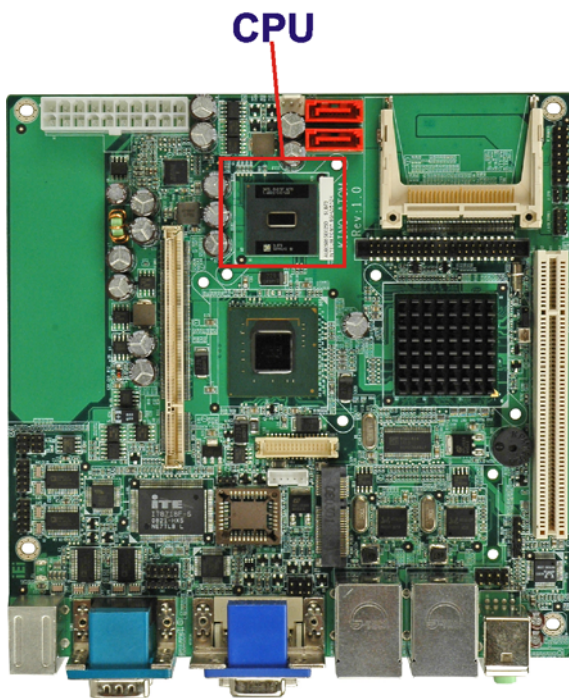


Figure 2-4: Intel® Atom™ N270 CPU

2.3.2 Features

Some of the features of the Intel® Atom™ N270 are listed below

- On-die, primary 32-kB instructions cache and 24-kB write-back data cache
- 533 MHz source-synchronous front side bus (FSB)
- 2-Threads support
- On-die 512-kB, 8-way L2 cache
- Support for IA 32-bit architecture

- Intel® Streaming SIMD Extensions-2 and -3 (Intel® SSE2 and Intel® SSE3) support and Supplemental Streaming SIMD Extension 3 (SSSE3) support
- Micro-FCBGA8 packaging technologies
- Thermal management support via Intel® Thermal Monitor 1 and Intel Thermal Monitor 2
- FSB Lane Reversal for flexible routing
- Supports C0/C1(e)/C2(e)/C4(e)
- L2 Dynamic Cache Sizing
- Advanced power management features including Enhanced Intel SpeedStep® Technology
- Execute Disable Bit support for enhanced security

2.3.3 Front Side Bus (FSB)

The Intel® Atom™ processor on the KINO-945GSE is interfaced to the Intel® 945GSE Northbridge through a 533 MHz front side bus (FSB). The FSB is shown in Figure 2-5 below.

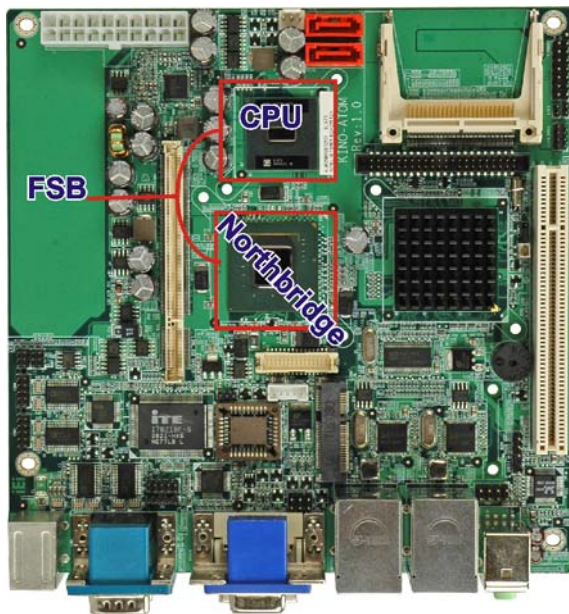


Figure 2-5: Front Side Bus

2.4 Intel® 945GSE Northbridge Chip

The Intel® 945GSE Graphics and Memory Controller Hub (GMCH) supports the embedded Intel® Atom™ N270 processor. The Intel® 945GSE is interfaced to the processor through a 533 MHz FSB.

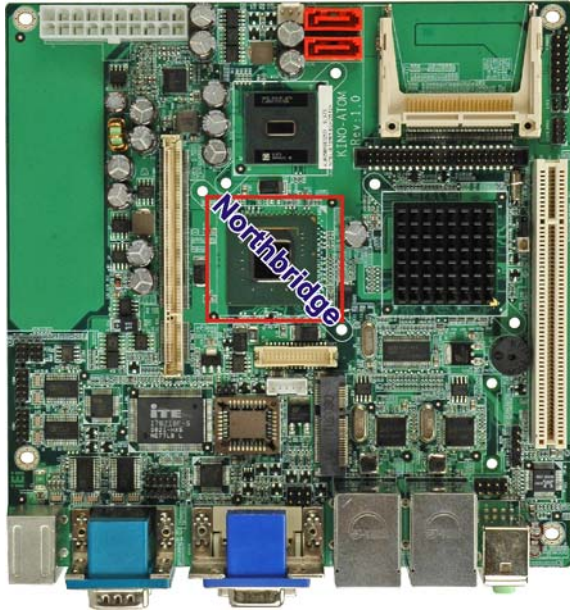


Figure 2-6: Intel® 945GSE Northbridge Chip

2.4.1 DDR2 Controller

There is one 200-pin DDR2 SO-DIMM socket on the KINO-945GSE. The socket supports DDR2 SO-DIMM with the following specifications:

- Maximum Memory supported 2 GB (1 GB per rank)
- Support for DDR2 at 400 MHz and 533 MHz
- No support for Dual-Channel Interleaved mode of operation
- Enhanced Addressing support (Swap only)

The SO-DIMM socket is shown in Figure 2-7 below.

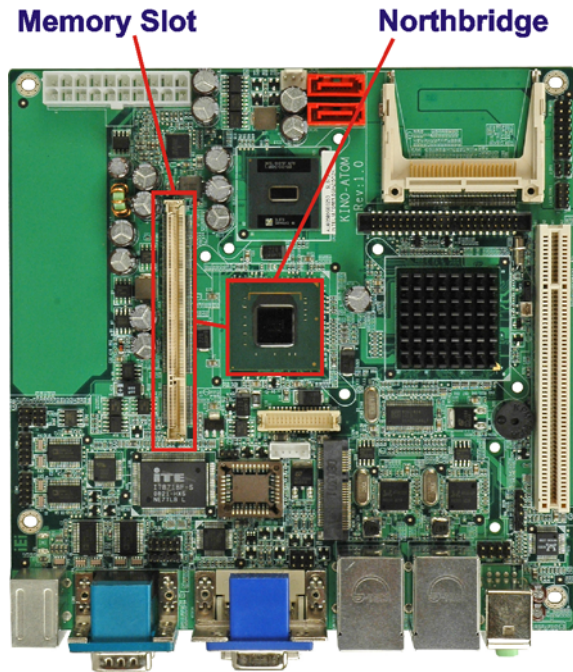


Figure 2-7: DDR2 SO-DIMM Socket

2.4.2 Graphics

The Intel® 945GSE Northbridge chipset has an Intel® Gen. 3.5 integrated graphics engine that supports the following display devices:

- Analog CRT
- LVDS
- TV-Out
- SDVO ports

KINO-945GSE Motherboard

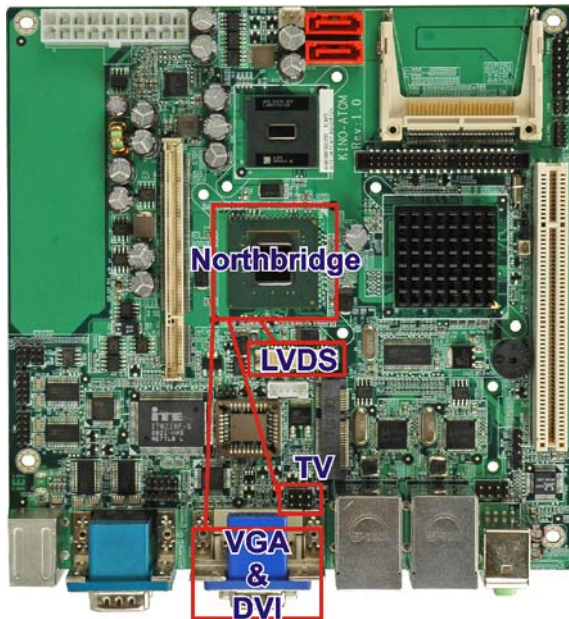


Figure 2-8: Graphics

2.4.2.1 Analog CRT (VGA)

A DB-15 VGA connector on the external peripheral interface connector panel is interfaced to the Intel® 945GSE graphics engine. The Intel® 945GSE internal graphics engine, with an integrated 400 MHz RAMDAC and hot plug CRT support, supports analog CRT monitors up to QXGA.

2.4.2.2 LVDS

A 30-pin LVDS crimp connector is interfaced to the Intel® 945GSE graphics engine. The Intel® 945GSE internal graphics engine supports LVDS displays with the following features:

- Up to UXGA monitors with a maximum resolution of 1600 x 1200
- 18-bit 25 MHz to 112 MHz single-channel or dual-channel LVDS screens
- CPIS 1.5 compliant LVDS screens

2.4.2.3 TV Out

An external 7-pin DIN TV output connector is interfaced to the Intel® 945GSE graphics engine. The Intel® 945GSE internal graphics engine has the following TV output features:

- Three integrated 10-bit DACs
- Macrovision support
- Overscaling
- NTSC and PAL formats supported
- Supports RCA or S-VIDEO connectivity
- Supports HDTV with the following resolutions:
 - 480p
 - 720p
 - 1080i
 - 1080p


2.4.2.4 SDVO and DVI

The SDVO is connected to the DVI output through the Silicon Image Sil1362. The Intel® 945GSE internal graphics engine has the following SDVO output features:

- Concurrent operation of PCIe x 1 with SDVO
- Two SDVO ports supported
 - SDVO is muxed onto the PCIe pins
 - DVI 1.0 support for external digital monitor
 - Only Downstream HDCP support
 - Supports TV and DVD formats
 - Display hot plug support

2.5 Intel® ICH7M Southbridge Chipset

The Intel® ICH7M Southbridge chipset is connected to the Intel® 945GSE Northbridge GMCH through the chip-to-chip Direct Media Interface (DMI). Some of the features of the Intel® ICH7M are listed below.

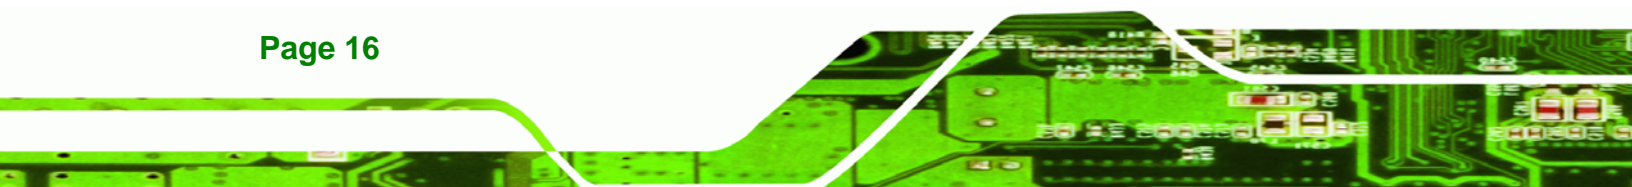

KINO-945GSE Motherboard

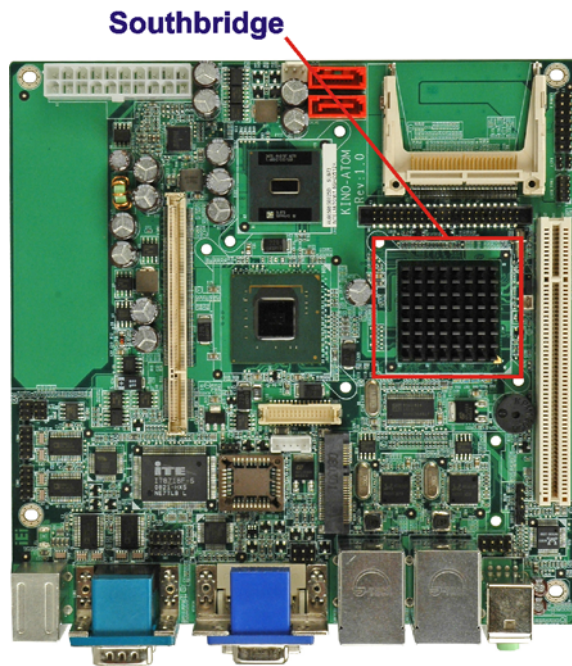


Figure 2-9: Intel® ICH7M Southbridge Chipset

- Complies with PCI Express Base Specification, Revision 1.0a
- Complies with PCI Local Bus Specification, Revision 2.3 and supports 33 MHz PCI operations
- Supports ACPI Power Management Logic
- Contains:
 - Enhanced DMA controller
 - Interrupt controller
 - Timer functions
- Integrated SATA host controller with DMA operations interfaced to two SATA connectors on the KINO-945GSE
- Integrated IDE controller supports Ultra ATA 100/66/33
- Supports the four USB 2.0 devices on the KINO-945GSE with four UHCI controllers and one EHCI controller
- Complies with System Management Bus (SMBus) Specification, Version 2.0
- Supports Audio Codec '97 (AC'97) Revision 2.3
- Supports Intel® High Definition Audio
- Contains Low Pin Count (LPC) interface
- Supports Firmware Hub (FWH) interface
- Serial peripheral interface support

2.5.1 Audio Codec '97 Controller

The Audio Codec '97 (AC'97) controller integrated into the Intel® ICH7M complies with AC'97 Component Specification, Version 2.3. The AC'97 controller is connected to the following audio jacks on the external connector panel.

- Stereo output
- Microphone input

2.5.2 IDE Interface

The IDE interface connects with

- 2.5.2.1 IDE Connector 18
- 2.5.2.2 CompactFlash® Slot 19

2.5.2.1 IDE Connector

The IDE connector on the Intel® ICH7M Southbridge connects to an IDE hard disk or other IDE device. The IDE connector is shown in Figure 2-10 below.

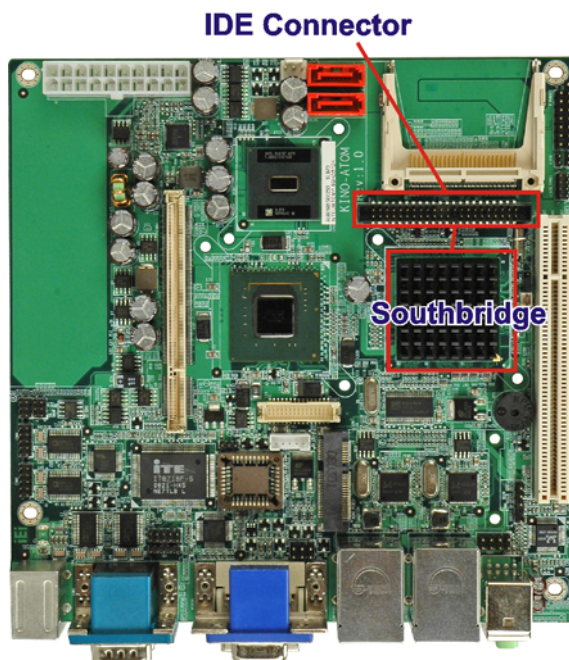


Figure 2-10: IDE Connector

KINO-945GSE Motherboard

PIO IDE transfers up to 16 MB/s and Ultra ATA transfers of 100 MB/s. The integrated IDE interface is able to support the following IDE HDDs:

- **Ultra ATA/100**, with data transfer rates up to 100 MB/s
- **Ultra ATA/66**, with data transfer rates up to 66 MB/s
- **Ultra ATA/33**, with data transfer rates up to 33 MB/s

Specification	Ultra ATA/100	Ultra ATA/66	Ultra ATA/33
IDE devices	2	2	2
PIO Mode	0 – 4	0 – 4	0 – 4
PIO Max Transfer Rate	16.6 MB/s	16.6 MB/s	16.6 MB/s
DMA/UDMA designation	UDMA 5	UDMA 4	UDMA 2
DMA/UDMA Max Transfer	100 MB/s	66 MB/s	33 MB/s
Controller Interface	5 V	5 V	5 V

Table 2-1: Supported HDD Specifications

2.5.2.2 CompactFlash® Slot

The CompactFlash® slot on the KINO-945GSE is interfaced through the IDE interface on the Intel® ICH7M Southbridge. The CompactFlash® slot is shown in Figure 2-10 below.

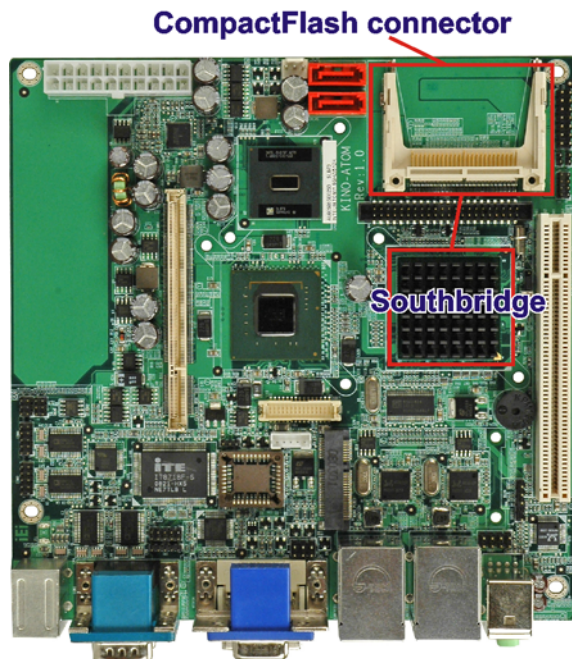


Figure 2-11: CompactFlash® Slot

2.5.3 Low Pin Count (LPC) Interface

The Intel® ICH7M LPC interface complies with the LPC 1.1 specifications. The LPC bus from the Intel® ICH7M is connected to the following components:

- BIOS chipset
- Super I/O chipset

2.5.4 PCI Bus

The PCI interface on the Intel® ICH7M is compliant with the PCI Revision 2.3 implementation. Some of the features of the PCI interface are listed below.

- PCI Revision 2.3 compliant
- 33 MHz
- 5 V tolerant PCI signals (except PME#)
- Integrated PCI arbiter supports up to seven PCI bus masters

KINO-945GSE Motherboard

2.5.4.1 PCI Expansion Card Slot

The PCI interface is connected directly to the PCI expansion card slot on the KINO-945GSE. The location of the PCI expansion card slot is shown in Figure 2-12 below.

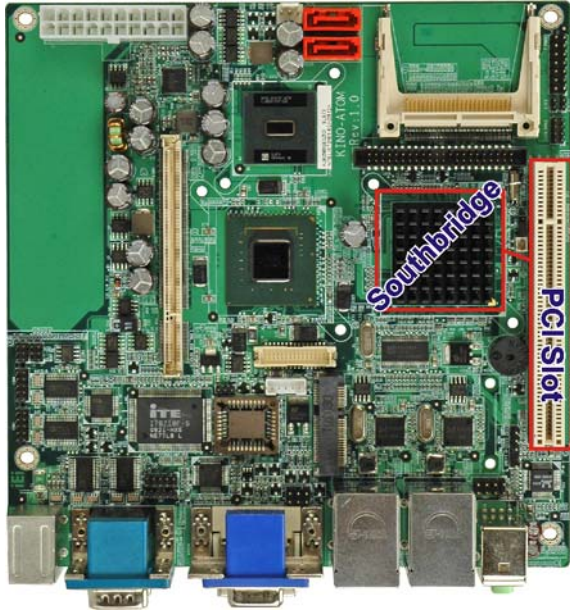


Figure 2-12: PCI Edge Connector

2.5.5 PCIe Bus

The Intel® ICH7M Southbridge chipset has four PCIe lanes. Two of the four PCIe lanes are interfaced to PCIe GbE controllers. Another land is connected to the PCIe Mini card slot.

2.5.5.1 PCIe GbE Ethernet

Two PCIe lanes are connected to two Realtek RTL8111C PCIe GbE controllers shown in Figure 2-13 below.

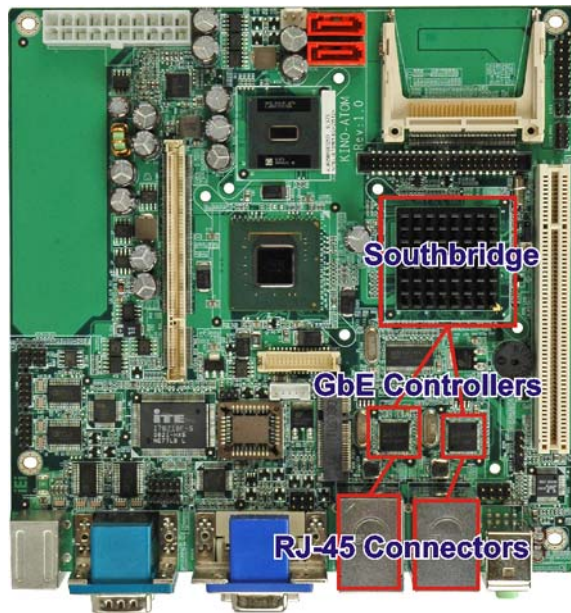


Figure 2-13: Realtek PCI GbE Controllers

The Realtek RTL8111C PCIe GbE controllers combine a triple-speed IEEE 802.3 compliant Media Access Controller (MAC) with a triple-speed Ethernet transceiver, 32-bit PCIe bus controller, and embedded memory. With state-of-the-art DSP technology and mixed-mode signal technology, they offer high-speed transmission over CAT 5 UTP cable or CAT 3 UTP (10 Mb/s only) cable. Functions such as Crossover Detection & Auto-Correction, polarity correction, adaptive equalization, cross-talk cancellation, echo cancellation, timing recovery, and error correction are implemented to provide robust transmission and reception capability at high speeds.

Some of the features of the Realtek RTL8111C PCIe GbE controllers are listed below.

- Integrated 10/100/1000 transceiver
- Auto-Negotiation with Next Page capability
- Supports PCI Express™ 1.1
- Supports pair swap/polarity/skew correction
- Crossover Detection & & Auto-Correction
- Wake-on-LAN and remote wake-up support
- Microsoft® NDIS5, NDIS6 Checksum Offload (IPv4, IPv6, TCP, UDP) and Segmentation Task-offload (Large send and Giant send) support
- Supports Full Duplex flow control (IEEE 802.3x)

KINO-945GSE Motherboard

- Fully compliant with IEEE 802.3, IEEE 802.3u, IEEE 802.3ab
- Supports IEEE 802.1P Layer 2 Priority Encoding
- Supports IEEE 802.1Q VLAN tagging
- Serial EEPROM
- Transmit/Receive on-chip buffer support
- Supports power down/link down power saving
- Supports PCI MSI (Message Signaled Interrupt) and MSI-X
- Supports Receive-Side Scaling (RSS)

2.5.5.2 PCIe Mini Card

One PCIe lane is connected to a PCIe Mini card slot shown in Figure 2-14 below.

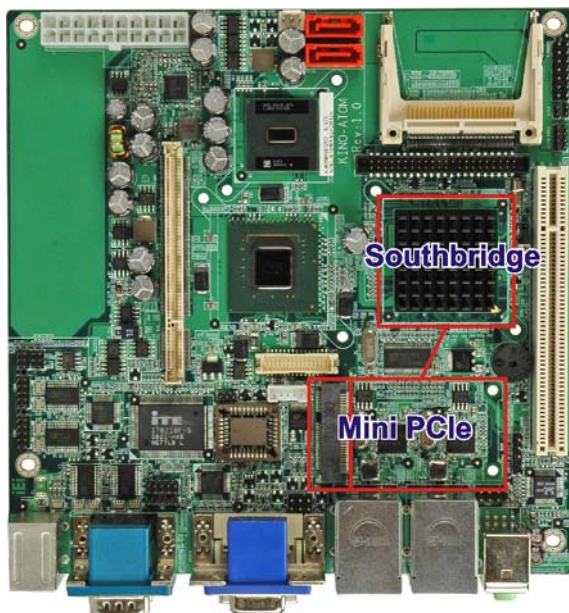


Figure 2-14: PCIe Mini Card Slot

The PCIe Mini card slot contains a PCIe x1 and USB 2.0 interface. PCIe Mini cards can utilize either of these two interfaces, depending on design requirements.

2.5.6 Real Time Clock

256 bytes of battery backed RAM is provided by the Motorola MC146818 A real time clock (RTC) integrated into the ICH6. The RTC operates on a 3 V battery and 32.768 KHz

crystal. The RTC keeps track of the time and stores system data even when the system is turned off.

2.5.7 SATA Controller

The integrated SATA controller on the Intel® ICH7M Southbridge supports two SATA drives with independent DMA operations. Two SATA controllers are connected to two SATA connectors on the KINO-945GSE. The SATA connectors are shown in Figure 2-15.

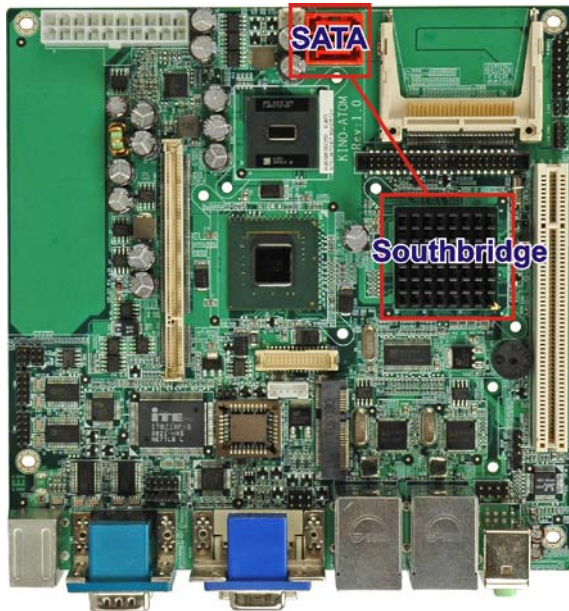


Figure 2-15: SATA Connectors

SATA controller specifications are listed below.

- Supports two SATA drives
- Supports 1.5 Gb/s data transfer speeds
- Supports Serial ATA Specification, Revision 1.0a

2.5.8 USB Controller

Up to six high-speed, full-speed or low-speed USB devices are supported by the Intel® ICH7M on the KINO-945GSE. High-speed USB 2.0, with data transfers of up to 480 MB/s, is enabled with the Intel® ICH7M integrated Enhanced Host Controller Interface (EHCI)

KINO-945GSE Motherboard

compliant host controller. USB full-speed and low-speed signaling is supported by the Intel® ICH7M integrated Universal Host Controller Interface (UHCI) controllers.

The six USB ports implemented on the KINO-945GSE are connected to three internal connectors and one external connector. See Figure 2-16.

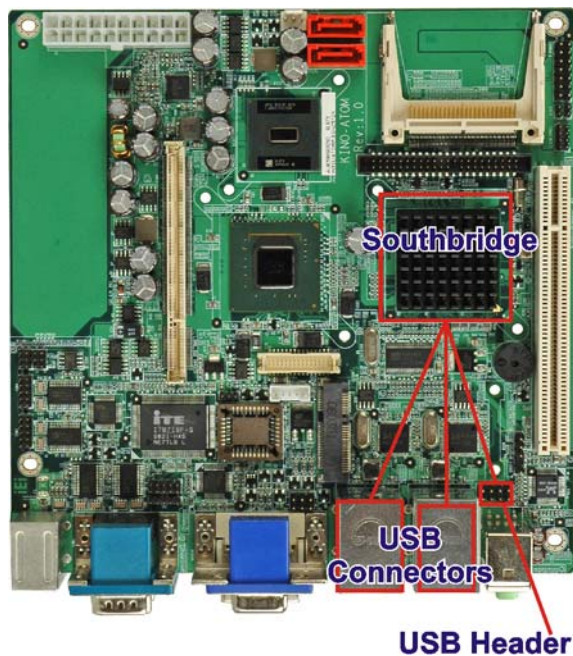


Figure 2-16: Onboard USB Implementation

2.6 LPC Bus Components

The iTE IT8718F LPC bus is connected to components listed below:

- BIOS chip
- Super I/O chip
- Serial port chip

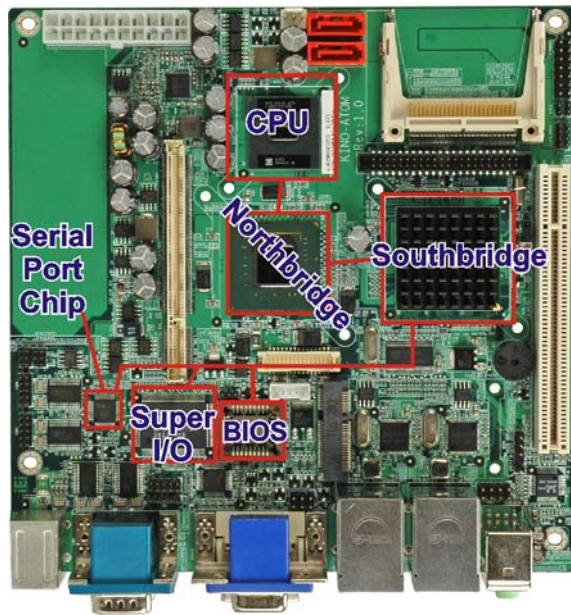


Figure 2-17: LPC Bus

2.6.1 BIOS Chipset

The BIOS chipset has a licensed copy of AMI BIOS installed on the chipset. Some of the BIOS features are listed below:

- AMI Flash BIOS
- SMBIOS (DMI) compliant
- Console redirection function support
- PXE (Pre-boot Execution Environment) support
- USB booting support

2.6.2 iTE IT8718F Super I/O chipset

The iTE IT8718F Super I/O chipset is connected to the Intel® ICH7M Southbridge through the LPC bus. The iTE IT8718F is an LPC interface-based Super I/O device that comes with Environment Controller integration. Some of the features of the iTE IT8718F chipset are listed below:

- ACPI and LANdesk Compliant
- Enhanced Hardware Monitor
- Fan Speed Controller

KINO-945GSE Motherboard

- Two 16C550 UARTs for serial port control
- One IEEE 1284 Parallel Port
- Keyboard Controller
- Watchdog Timer

Some of the Super I/O features are described in more detail below:

2.6.2.1 LPC Interface

The LPC interface on the Super I/O complies with the Intel® Low Pin Count Specification Rev. 1.0. The LPC interface supports both LDRQ# and SERIRQ protocols as well as PCI PME# interfaces.

2.6.2.2 16C550 UARTs

The onboard Super I/O has two integrated 16C550 UARTs that can support the following:

- Two standard serial ports
- IrDa 1.0 and ASKIR protocols

2.6.2.3 Digital Input/Output


The input mode supports switch debouncing or programmable external IRQ routing. The output mode supports two sets of programmable LED blinking periods.

2.6.2.4 Enhanced Hardware Monitor

The Super I/O Enhanced Hardware Monitor monitors three thermal inputs, VBAT internally, and eight voltage monitor inputs. These hardware parameters are reported in the BIOS and can be read from the BIOS Hardware Health Configuration menu.

2.6.2.5 Fan Speed Controller

The Super I/O fan speed controller enables the system to monitor the speed of the fan. One of the pins on the fan connector is reserved for fan speed detection and interfaced to the fan speed controller on the Super I/O. The fan speed is then reported in the BIOS.

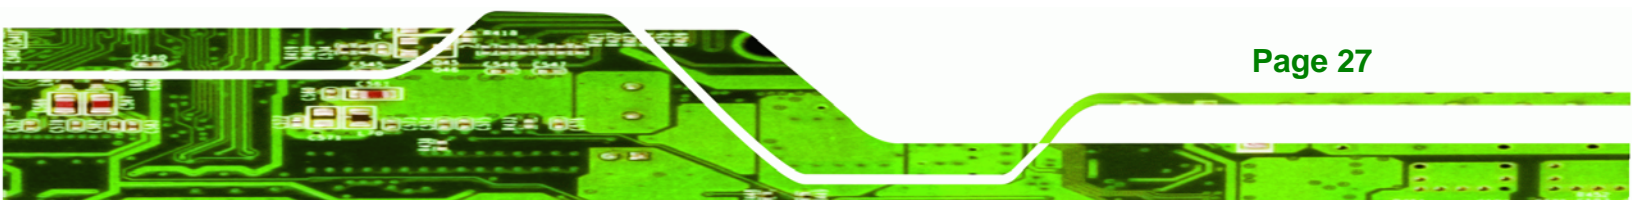

2.6.2.6 Keyboard/Mouse Controller

The Super I/O keyboard/mouse controller can execute the 8042 instruction set. Some of the keyboard controller features are listed below:

- The 8042 instruction is compatible with a PS/2 keyboard and PS/2 mouse
- Gate A20 and Keyboard reset output
- Supports multiple keyboard power on events
- Supports mouse double-click and/or mouse move power on events

2.6.2.7 Parallel Port

The multi-mode high-performance parallel port supports the bi-directional Standard Parallel Port (SPP), the Enhanced Parallel Port (EPP) and the Extended Capabilities Port (ECP) modes.

2.6.3 Fintek F81216D LPC Serial Port Chipset

The Fintek F81216D chipset enables the addition of two additional UART serial ports (COM3 and COM4). UART includes 16-byte send/receive FIFO. The Fintek F81216D serial port chipset is interfaced to the Southbridge chipset through the LPC bus. Some of the features of the Fintek F81216D chipset are listed below:

- Supports LPC interface
- Totally provides 4 UART (16550 asynchronous) ports
 - 3 x Pure UART
 - 1 x UART+IR
- One Watch dog timer with WDTOUT# signal
- One Frequency input 24/48 MHz
- Powered by 3 Vcc

2.7 Environmental and Power Specifications

2.7.1 System Monitoring

Two thermal inputs on the KINO-945GSE Super I/O Enhanced Hardware Monitor monitors the following temperatures:



KINO-945GSE Motherboard

- CPU temperature
- System temperature

The KINO-945GSE Super I/O Enhanced Hardware Monitor also monitors the following fan speeds:

- CPU Fan speed

Voltage inputs on the KINO-945GSE Super I/O Enhanced Hardware Monitor monitors the following voltages:

- CPU Core
- +1.05 V
- +3.30 V
- +5.00 V
- +12 V
- +1.5 V
- +1.8 V
- +5 VSB
- VBAT


The values for the above environmental parameters are all recorded in the BIOS Hardware Health Configuration menu.

2.7.2 Operating Temperature and Temperature Control

The maximum and minimum operating temperatures for the KINO-945GSE are listed below.

- Minimum Operating Temperature: 0°C (32°F)
- Maximum Operating Temperature: 60°C (140°F)

Heat sinks are mounted on the CPU, Northbridge and Southbridge chips to ensure the operating temperature of these chips remain low.

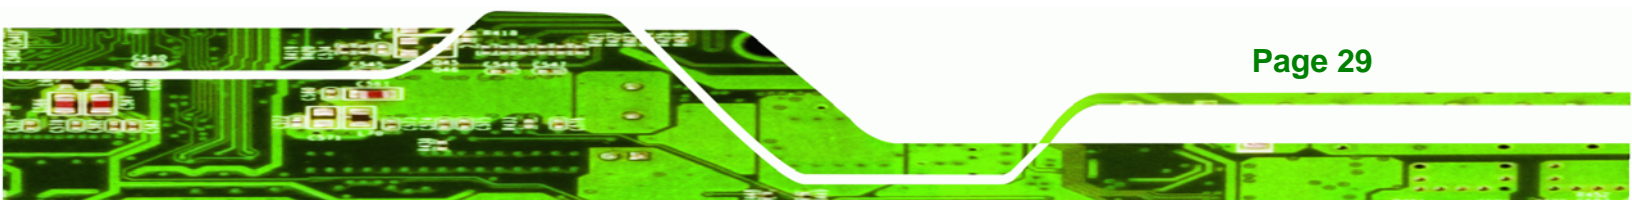

2.7.3 Power Consumption

Table 2-2 shows the power consumption parameters for the KINO-945GSE running with a 1.60 GHz Intel® Atom™ with 2.0 GB DDR2 memory.

Voltage	Current
+5 V	2.89 A
+12 V	0.04 A


Table 2-2: Power Consumption



Chapter

3

Unpacking

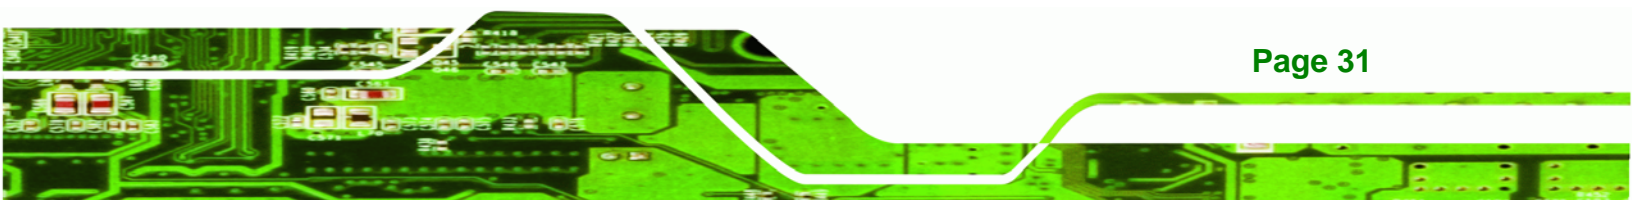

3.1 Anti-static Precautions



WARNING!

Failure to take ESD precautions during the installation of the KINO-945GSE may result in permanent damage to the KINO-945GSE and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the KINO-945GSE. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the KINO-945GSE, or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- ***Wear an anti-static wristband:*** - Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- ***Self-grounding:*** - Before handling the board touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- ***Use an anti-static pad:*** When configuring the KINO-945GSE, place it on an anti-static pad. This reduces the possibility of ESD damaging the KINO-945GSE.
- ***Only handle the edges of the PCB:*** - When handling the PCB, hold the PCB by the edges.

3.2 Unpacking

3.2.1 Unpacking Precautions

When the KINO-945GSE is unpacked, please do the following:

- Follow the anti-static precautions outlined in **Section 763.1**.
- Make sure the packing box is facing upwards so the KINO-945GSE does not fall out of the box.
- Make sure all the components shown in **Section 763.3** are present.

KINO-945GSE Motherboard

3.3 Unpacking Checklist









NOTE:

If any of the components listed in the checklist below are missing, do not proceed with the installation. Contact your sales representative.

3.3.1 Package Contents

The KINO-945GSE is shipped with the following components:

Quantity	Item and Part Number	Image
1	KINO-945GSE	
2	SATA cable (P/N: 32000-062800-RS)	
1	Dual RS-232 cable (P/N: 19800-000112-RS)	
1	I/O shielding (P/N: 45014-0008C0-00-RS)	
1	Mini jumper pack (2.0 mm) (P/N:33100-000033-RS)	
1	Utility CD	


Quantity	Item and Part Number	Image
1	Quick Installation Guide	

Table 3-1: Packing List

3.3.2 Optional Items

The KINO-945GSE is shipped with the following components:






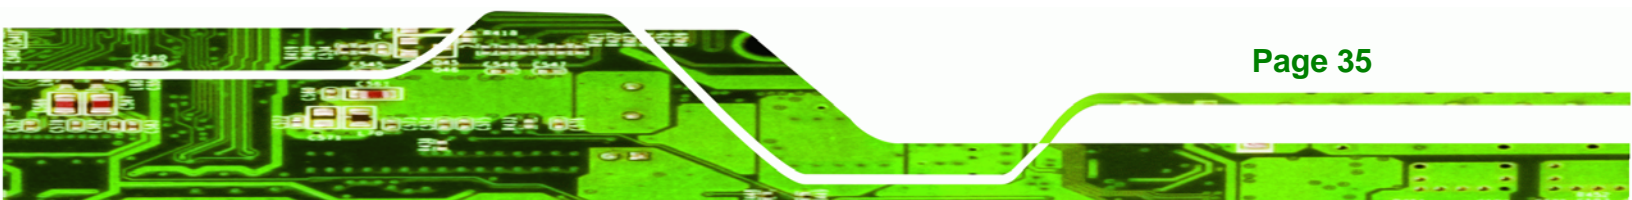
Item and Part Number	Image
Dual USB cable (with bracket) (P/N: CB-USB02-RS)	
HDTV cable set (P/N: HDTVCAABLESET-01-RS)	
IDE-cable (44-pin) (P/N: 32200-000009)	
Single RS-422/485 cable (P/N:32200-083360-RS)	
SATA power cable (P/N: 32100-088600-RS)	

Table 3-2: Power Consumption

Chapter

4

Connectors



4.1 Peripheral Interface Connectors

This chapter outlines all internal and external connectors on the KINO-945GSE.

4.1.1 Layout

Figure 4-1 shows the on-board peripheral connectors, rear panel peripheral connectors and on-board jumpers.

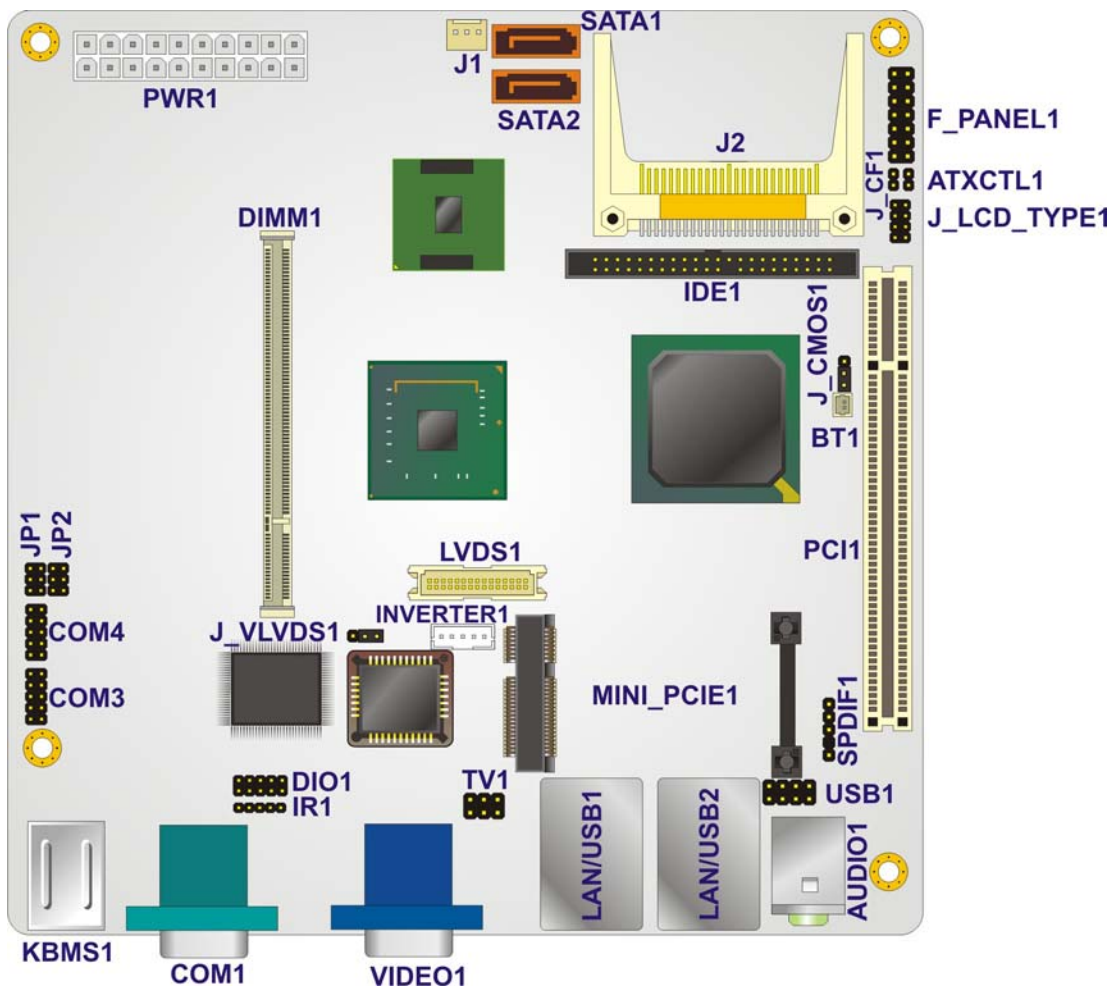


Figure 4-1: Connector and Jumper Locations [Front Side]

4.1.2 Internal Peripheral Interface Connectors

Table 4-1 shows a list of the peripheral interface connectors on the KINO-945GSE. Detailed descriptions of these connectors can be found below.

KINO-945GSE Motherboard

Connector	Type	Label
ATX power connector	20-pin power connector	PWR1
Battery connector	2-pin box header	BT1
CompactFlash® slot	CompactFlash® slot	J2
DDR2 SO-DIMM slot	SO-DIMM connector	DIMM1
Digital I/O connector	10-pin header	DIO1
Fan connector	3-pin wafer	J1
Front panel connector	14-pin header	F_PANEL1
IDE connector	44-pin box header	IDE1
Infrared connector	5-pin header	IR1
LCD backlight inverter connector	5-pin box header	INVERTER1
LVDS connector	30-pin crimp	LVDS1
PCIe Mini slot	PCIe Mini connector	MINI_PCIE1
RS-232 connector	10-pin header	COM3
RS-232 connector	10-pin header	COM4
RS-422/485 connector (COM3)	6-pin header	JP2
SATA connector	SATA port	SATA1
SATA connector	SATA port	SATA2
TV output connector	6-pin header	TV1
USB connector (2 ports)	8-pin header	USB1

Table 4-1: Peripheral Interface Connectors

4.1.3 External Interface Panel Connectors

Table 4-2 lists the rear panel connectors on the KINO-945GSE. Detailed descriptions of these connectors can be found in **Section 774.3** on **page 57**.

Connector	Type	Label
Audio connector	Dual audio jack	AUDIO1

Connector	Type	Label
DVI / VGA combo connector	VGA and DVI connector	VIDEO1
LAN / USB combo connector	LAN and 2 x USB	LAN/USB1 LAN/USB2
PS/2 keyboard / mouse connector	2 x PS/2	KBMS1
Serial port connector	2 x DB-9 male	COM1

Table 4-2: Rear Panel Connectors


4.2 Internal Peripheral Connectors

Internal peripheral connectors are found on the motherboard and are only accessible when the motherboard is outside of the chassis. This section has complete descriptions of all the internal, peripheral connectors on the KINO-945GSE.

4.2.1 ATX Power Connector

CN Label:	PWR1
CN Type:	20-pin ATX (2x10)
CN Location:	See Figure 4-2
CN Pinouts:	See Table 4-3

The ATX connector is connected to an external ATX power supply. Power is provided to the system, from the power supply through this connector.

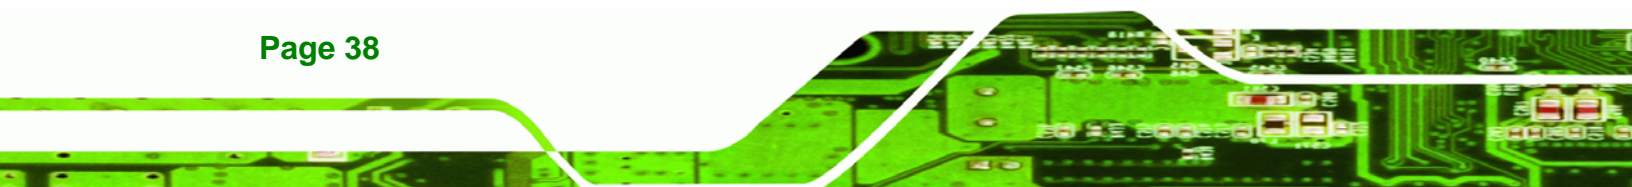

KINO-945GSE Motherboard

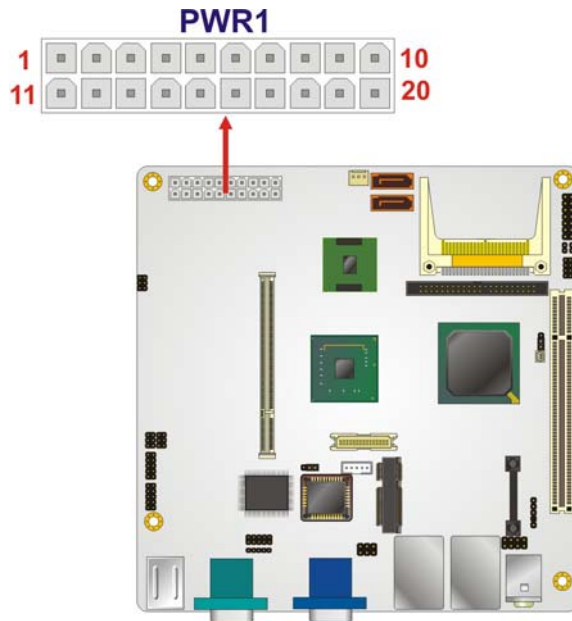


Figure 4-2: ATX Power Connector Pinout Locations

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	+3.3 V	11	+3.3 V
2	+3.3 V	12	-12 V
3	GND	13	GND
4	+5 V	14	PS-ON
5	GND	15	GND
6	+5 V	16	GND
7	GND	17	GND
8	PW-OK	18	-5 V
9	+VCC5SB	19	+5 V
10	+12 V	20	+5 V

Table 4-3: ATX Power Connector Pinouts

4.2.2 Battery Connector

CN Label: BT1

CN Type: 2-pin wafer (1x2)

CN Location: See Figure 4-3

CN Pinouts: See Table 4-4

The battery connector is connected to a backup battery. The battery connector is also used to reset the CMOS memory if the incorrect BIOS settings have been made and the system cannot boot up.

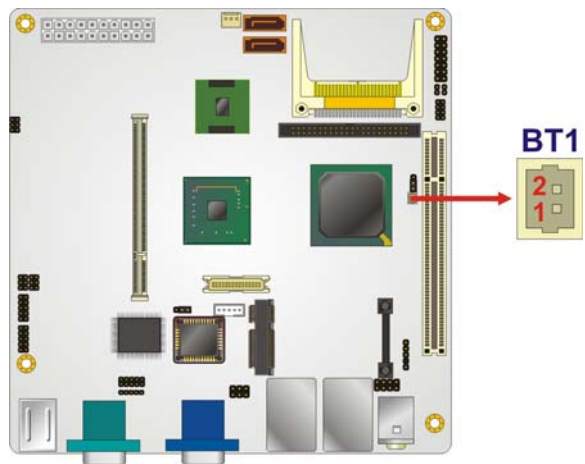


Figure 4-3: Battery Connector Location

PIN NO.	DESCRIPTION
1	Battery+
2	Ground

Table 4-4: Battery Connector Pinouts

4.2.3 CompactFlash® Socket

CN Label: J2
CN Type: CompactFlash® slot
CN Location: See Figure 4-4
CN Pinouts: See Table 4-5

The CompactFlash® card slot allows a CompactFlash® type I or II card to be installed.

KINO-945GSE Motherboard

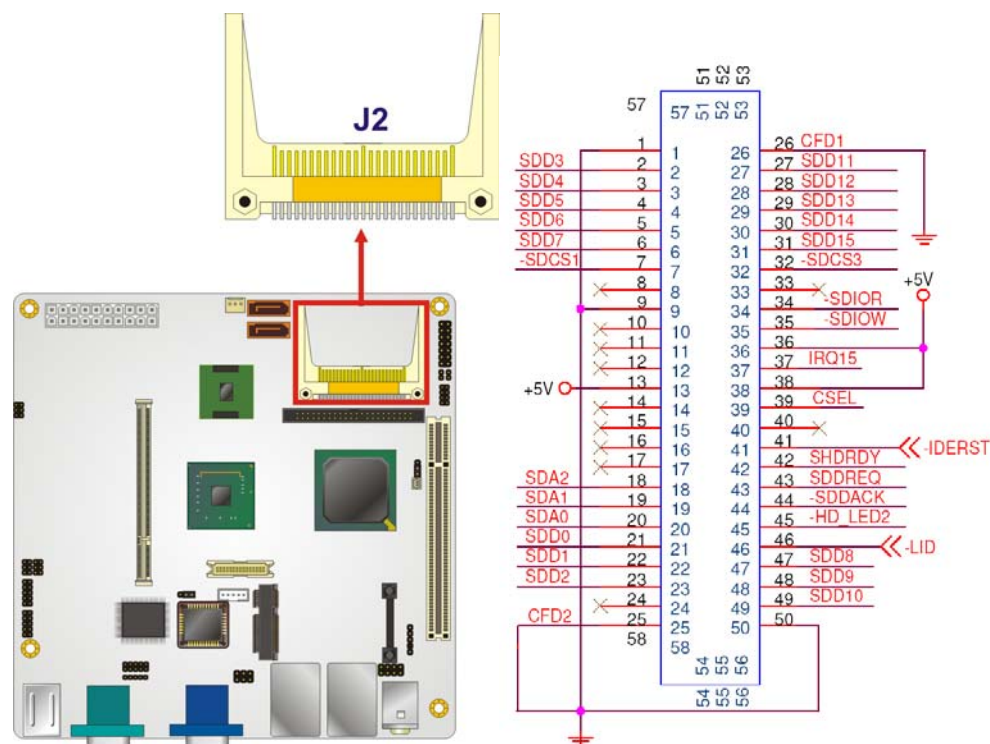


Figure 4-4: CF Card Socket Location

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GROUND	26	VCC-IN CHECK1
2	DATA 3	27	DATA 11
3	DATA 4	28	DATA 12
4	DATA 5	29	DATA 13
5	DATA 6	30	DATA 14
6	DATA 7	31	DATA 15
7	CE#	32	CE2#
8	A10	33	VS1#
9	OE#	34	IOR#
10	A9	35	IOW#
11	A8	36	WE#
12	A7	37	IRQ
13	VCC	38	VCC
14	A6	39	CSEL#
15	A5	40	VS2#

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
16	A4	41	RESET#
17	A3	42	WAIT#
18	A2	43	INPACK#
19	A1	44	REG#
20	A0	45	BVD2
21	DATA 0	46	BVD1
22	DATA 1	47	DATA 8
23	DATA 2	48	DATA 9
24	IOCS16#	49	DATA 10
25	CD2#	50	GND2

Table 4-5: CF Card Socket Pinouts

4.2.4 Digital I/O Connector

- CN Label:** DIO1
- CN Type:** 10-pin header (2x5)
- CN Location:** See Figure 4-5
- CN Pinouts:** See Table 4-6

The digital input/output connector is managed through a Super I/O chip. The DIO connector pins are user programmable.



KINO-945GSE Motherboard

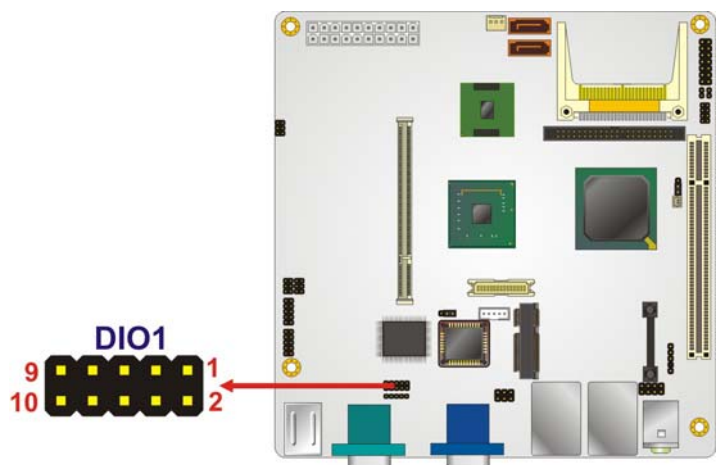


Figure 4-5: Digital I/O Connector Locations

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GND	2	VCC
3	Output 3	4	Output 2
5	Output 1	6	Output 0
7	Input 3	8	Input 2
9	Input 1	10	Input 0

Table 4-6: DIO Connector Pinouts

4.2.5 Fan Connector

- CN Label:** J1
- CN Type:** 3-pin header
- CN Location:** See Figure 4-6
- CN Pinouts:** See Table 4-7

The cooling fan connector provides a 12 V, 500mA current to the cooling fan. The connector has a "rotation" pin to get rotation signals from fans and notify the system so the system BIOS can recognize the fan speed. Please note that only specified fans can issue the rotation signals.

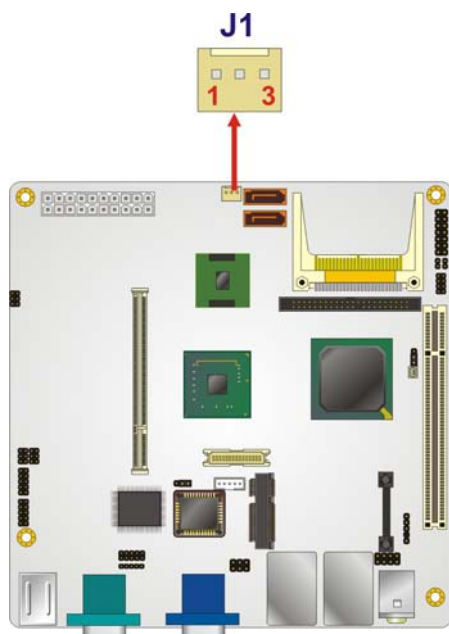


Figure 4-6: CPU Fan Connector Location

PIN NO.	DESCRIPTION
1	Fan Speed Detect
2	+12 V
3	GND

Table 4-7: CPU Fan Connector Pinouts

4.2.6 Front Panel Connector

CN Label:	F_PANEL1
CN Type:	14-pin header (2x7)
CN Location:	See Figure 4-7
CN Pinouts:	See Table 4-8

The front panel connector connects to external switches and indicators to monitor and controls the motherboard. These indicators and switches include:

- Power button
- Reset

KINO-945GSE Motherboard

- Speaker
- Power LED
- HDD LED

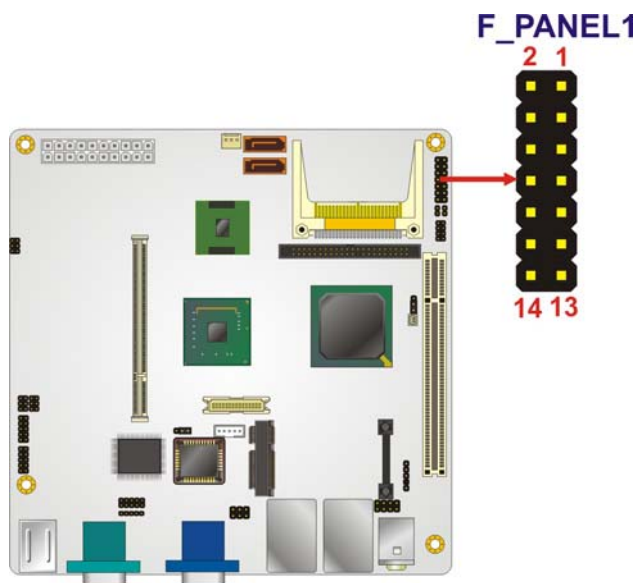


Figure 4-7: Front Panel Connector Pinout Locations

FUNCTION	PIN	DESCRIPTION	FUNCTION	PIN	DESCRIPTION
Power LED	1	Power LED +	Speaker	2	Speaker +
	3	N/C		4	N/C
	5	Power LED -		6	N/C
Power Button	7	Power button +		8	Speaker -
	9	Power button -	Reset	10	N/C
HDD LED	11	HDD LED +		12	Reset +
	13	HDD LED -		14	Reset -

Table 4-8: Front Panel Connector Pinouts

4.2.7 IDE Connector

- CN Label:** IDE1
- CN Type:** 44-pin header (2x22)
- CN Location:** See Figure 4-8
- CN Pinouts:** See Table 4-9

KINO-945GSE Motherboard

One 44-pin IDE device connector on the KINO-945GSE supports connectivity to two hard disk drives.

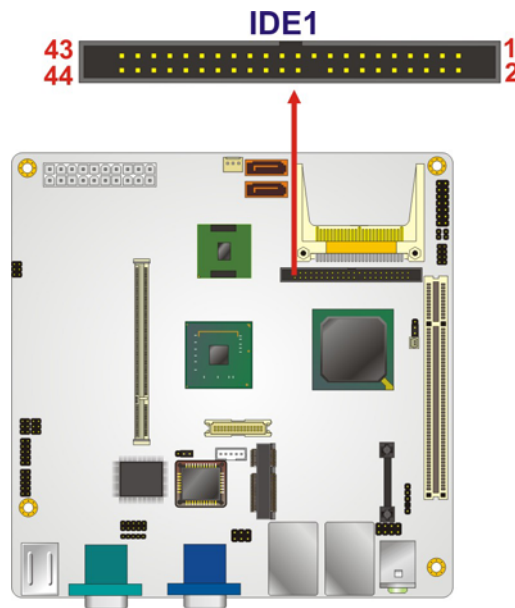


Figure 4-8: IDE Device Connector Locations

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	RESET#	2	GROUND
3	DATA 7	4	DATA 8
5	DATA 6	6	DATA 9
7	DATA 5	8	DATA 10
9	DATA 4	10	DATA 11
11	DATA 3	12	DATA 12
13	DATA 2	14	DATA 13
15	DATA 1	16	DATA 14
17	DATA 0	18	DATA 15
19	GROUND	20	N/C
21	IDE DRQ	22	GROUND
23	IOW#	24	GROUND
25	IOR#	26	GROUND
27	IDE CHRDY	28	BALE-DEFAULT
29	IDE DACK	30	GROUND-DEFAULT

KINO-945GSE Motherboard

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
31	INTERRUPT	32	N/C
33	SA1	34	PDIAG#
35	SA0	36	SA2
37	HDC CS0#	38	HDC CS1#
39	HDD ACTIVE#	40	GROUND
41	VCC	42	VCC
43	GROUND	44	N/C

Table 4-9: IDE Connector Pinouts

4.2.8 Infrared Interface Connector

CN Label: IR1

CN Type: 5-pin header (1x5)

CN Location: See Figure 4-9

CN Pinouts: See Table 4-10

The infrared interface connector supports both Serial Infrared (SIR) and Amplitude Shift Key Infrared (ASKIR) interfaces.

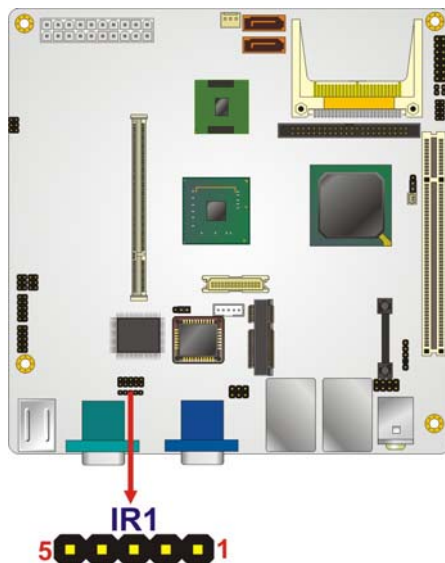


Figure 4-9: Infrared Connector Pinout Locations

PIN NO.	DESCRIPTION
1	VCC
2	NC
3	IR-RX
4	GND
5	IR-TX

Table 4-10: Infrared Connector Pinouts

4.2.9 LCD Backlight Inverter Connector

CN Label: INVERTER1

CN Type: 5-pin box header (1x5)

CN Location: See Figure 4-10

CN Pinouts: See Table 4-11

The backlight inverter connector provides the backlight on the LCD display connected to the KINO-945GSE with +12 V of power.

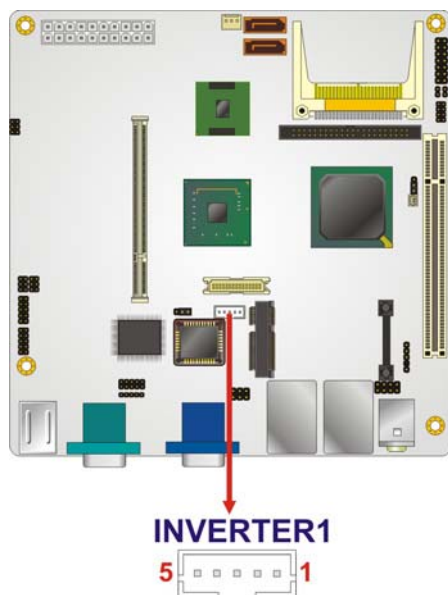


Figure 4-10: LCD Backlight Connector Pinout Locations

KINO-945GSE Motherboard

PIN NO.	DESCRIPTION
1	BACKLIGHT ADJUST
2	GND
3	12 V
4	GND
5	BACKLIGHT ENABLE

Table 4-11: LCD Backlight Connector Pinouts

4.2.10 LVDS LCD Connector

CN Label: LVDS1

CN Type: 30-pin crimp (2x10)

CN Location: See Figure 4-11

CN Pinouts: See Table 4-12

The 30-pin LVDS LCD connector can be connected to single channel or dual channel, 18-bit or 36-bit LVDS panel.

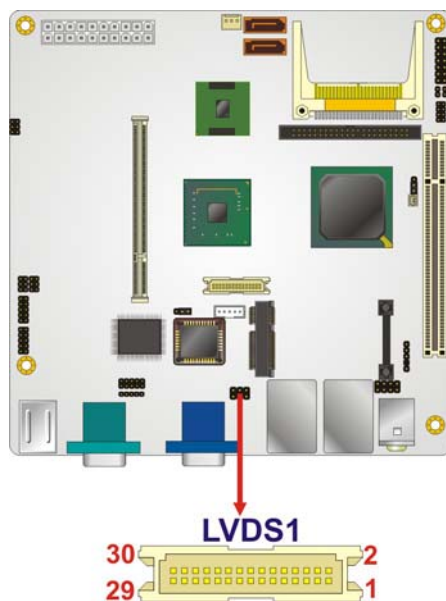


Figure 4-11: LVDS LCD Connector Pinout Locations

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GROUND	2	GROUND
3	LVDSA_Y0+	4	LVDSA_Y0-
5	LVDSA_Y1+	6	LVDSA_Y1-
7	LVDSA_Y2+	8	LVDSA_Y2-
9	LVDSA_CLK+	10	LVDSA_CLK-
11	N/C	12	N/C
13	GROUND	14	GROUND
15	LVDSB_Y0+	16	LVDSB_Y0-
17	LVDSB_Y1+	18	LVDSB_Y1-
19	LVDSB_Y2+	20	LVDSB_Y2-
21	LVDSB_CLK+	22	LVDSB_CLK-
23	N/C	24	N/C
25	GROUND	26	GROUND
27	VCC_LVDS	28	VCC_LVDS
29	VCC_LVDS	30	VCC_LVDS

Table 4-12: LVDS LCD Port Connector Pinouts

4.2.11 PCIe Mini Card Slot

CN Label:	MINI_PCIE1
CN Type:	52-pin Mini PCIe Card Slot
CN Location:	See Figure 4-12
CN Pinouts:	See Table 4-13

The PCIe mini card slot enables a PCIe mini card expansion module to be connected to the board. Cards supported include among others wireless LAN (WLAN) cards.



KINO-945GSE Motherboard

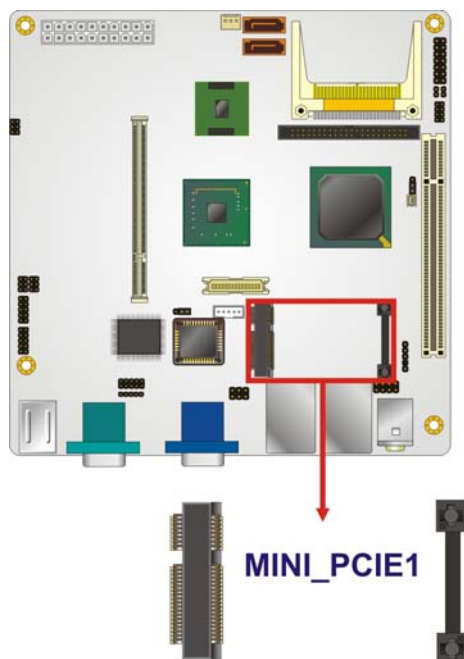


Figure 4-12: PCIe Mini Card Slot Location

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	PCIE_WAKE#	2	VCC3
3	N/C	4	GND
5	N/C	6	1.5 V
7	CLKREQ#	8	LFRAME#
9	GND	10	LAD3
11	CLK-	12	LAD2
13	CLK+	14	LAD1
15	GND	16	LAD0
17	PCIRST#	18	GND
19	LPC	20	VCC3
21	GND	22	PCIRST#
23	PERN2	24	3 VDual
25	PERP2	26	GND
27	GND	28	1.5 V
29	GND	30	SMBCLK
31	PETN2	32	SMBDATA
33	PETP2	34	GND

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
35	GND	36	USBD-
37	N/C	38	USBD+
39	N/C	40	GND
41	N/C	42	N/C
43	N/C	44	RF_LINK#
45	N/C	46	BLUELED#
47	N/C	48	1.5 V
49	N/C	50	GND
51	N/C	52	VCC3

Table 4-13: PCIe Mini Card Slot Pinouts

4.2.12 SATA Drive Connectors

- CN Label:** SATA1, SATA2
- CN Type:** 7-pin SATA drive connectors
- CN Location:** See Figure 4-13
- CN Pinouts:** See Table 4-14

The four SATA drive connectors are each connected to a first generation SATA drive. First generation SATA drives transfer data at speeds as high as 150 Mb/s. The SATA drives can be configured in a RAID configuration.



KINO-945GSE Motherboard

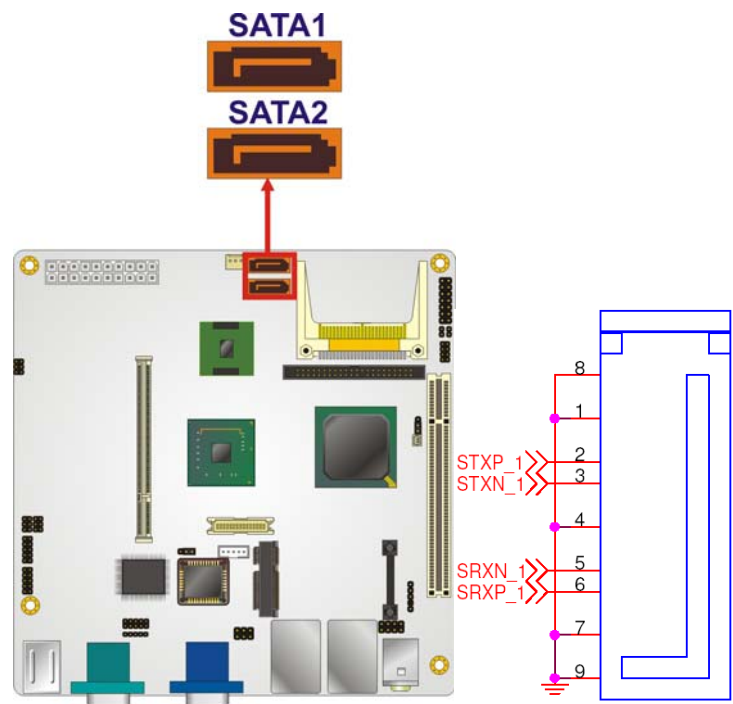


Figure 4-13: SATA Drive Connector Locations

PIN NO.	DESCRIPTION
1	GND
2	TX +
3	TX -
4	GND
5	RX -
6	RX +
7	GND

Table 4-14: SATA Drive Connector Pinouts

4.2.13 Serial Port Connectors (RS-232)

- CN Label:

COM3 and COM4
- CN Type:

10-pin header (2x5)
- CN Location:

See Figure 4-14
- CN Pinouts:

See Table 4-15

The 10-pin serial port connectors provide RS-232 serial communications channels. The COM serial port connectors can be connected to external RS-232 serial port devices. COM3 uses JP2 for RS-422 and RS-485 connectivity.

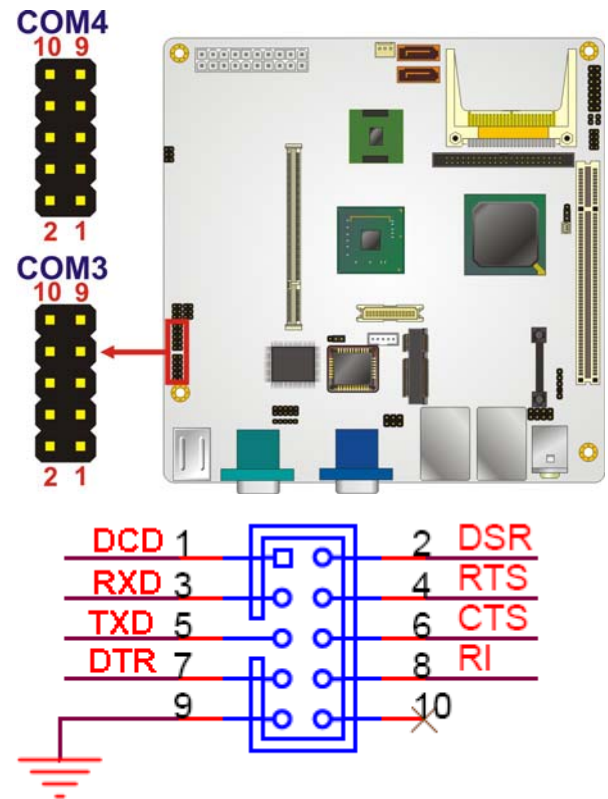


Figure 4-14: RS-232 Connector Pinout Locations

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	Data Carrier Direct (DCD)	2	Data Set Ready (DSR)
3	Receive Data (RXD)	4	Request To Send (RTS)
5	Transmit Data (TXD)	6	Clear To Send (CTS)
7	Data Terminal Ready (DTR)	8	Ring Indicator (RI)
9	Ground (GND)	10	N/C

Table 4-15: RS-232 Connector Pinouts

4.2.14 Serial Port Connectors (RS-422/485)

CN Label: JP2

KINO-945GSE Motherboard

- CN Type:

6-pin header (2x3)
- CN Location:

See Figure 4-15
- CN Pinouts:

See Table 4-16

The serial port connector provides the RS-422 and RS-485 pins for serial port COM3. JP1 sets COM3 to RS-232, RS-422 or RS-485, use the COM3 connector for RS-232 and the connectors on JP2 for RS-422 or RS-485 connectivity.

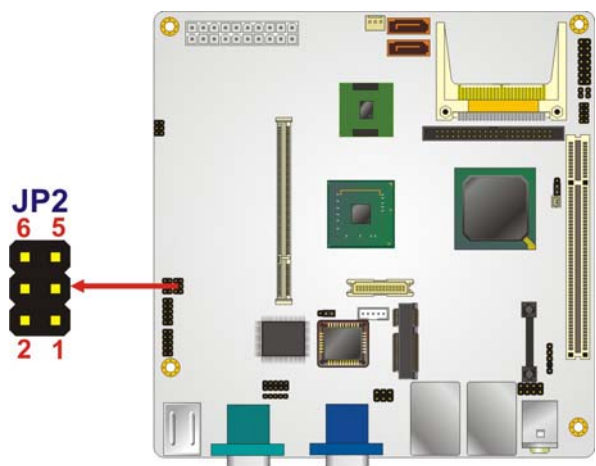


Figure 4-15: RS-422/485 Connector Pinout Locations

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	TX_422-	2	RX3-
3	TX_422+	4	RX3+
5	Data+	6	Data-

Table 4-16: RS-422/485 Connector Pinouts

4.2.15 TV Out Connector


- CN Label:

TV1
- CN Type:

6-pin header (2x3)
- CN Location:

See Figure 4-16
- CN Pinouts:

See Table 4-17

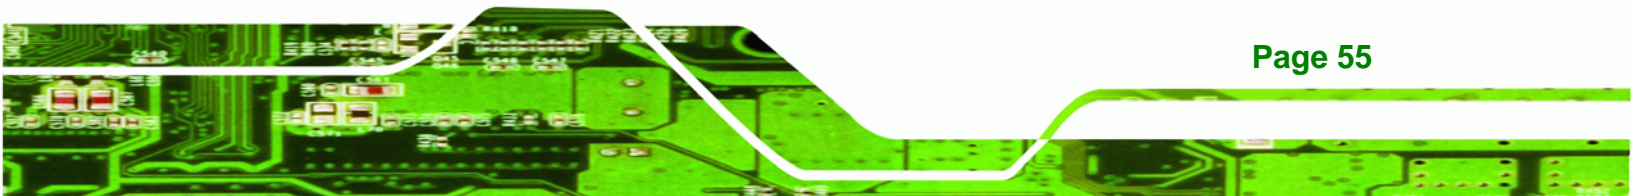

KINO-945GSE Motherboard

The 2x3 pin TV out connector connects to a TV output by using an S-Video or RCA connector. The TV out connector makes displaying media data on a television easier.

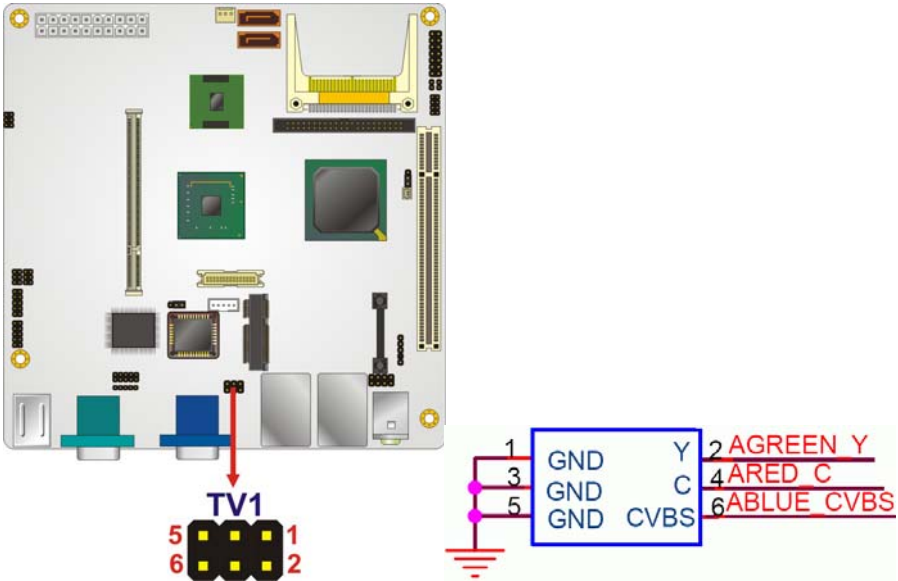


Figure 4-16: TV Connector Pinout Locations

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
S-Video Connector			
1	GND	2	AGREEN_Y
3	GND	4	ARED_C
RCA Connector (only video signal)			
5	GND	6	ABLUE_CVBS

Table 4-17: TV Port Connector Pinouts

4.2.16 USB Connectors

CN Label:	USB1
CN Type:	8-pin header (2x4)
CN Location:	See Figure 4-17
CN Pinouts:	See Table 4-18

KINO-945GSE Motherboard

The 2x4 USB pin connector provides connectivity to two USB 1.1 or two USB 2.0 ports. The USB connector can support two USB devices. Additional external USB ports are found on the rear panel. The USB ports are used for I/O bus expansion.

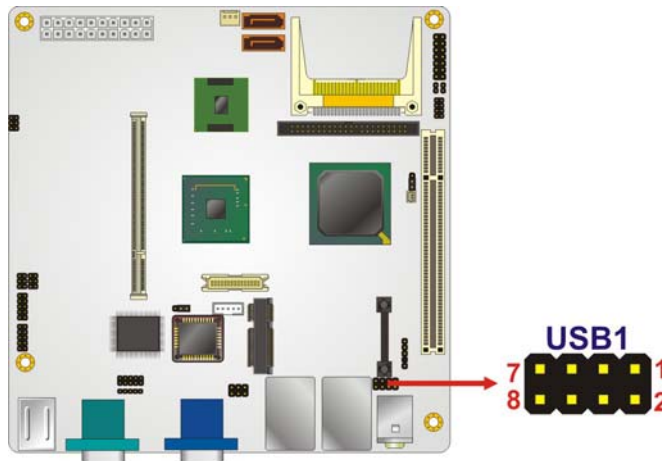


Figure 4-17: USB Connector Pinout Locations

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
USB Connector 1		USB Connector 2	
1	VCC	2	GND
3	DATA1-	4	DATA2+
5	DATA1+	6	DATA2-
7	GND	8	VCC

Table 4-18: USB Port Connector Pinouts

4.3 External Peripheral Interface Connector Panel

Figure 4-18 shows the KINO-945GSE external peripheral interface connector (EPIC) panel. The KINO-945GSE EPIC panel consists of the following:

- 2 x Audio jacks
- 1 x DVI connector
- 2 x RJ-45 LAN connectors
- 2 x PS/2 connectors
- 2 x Serial port connectors
- 4 x USB connectors

- 1 x VGA connector

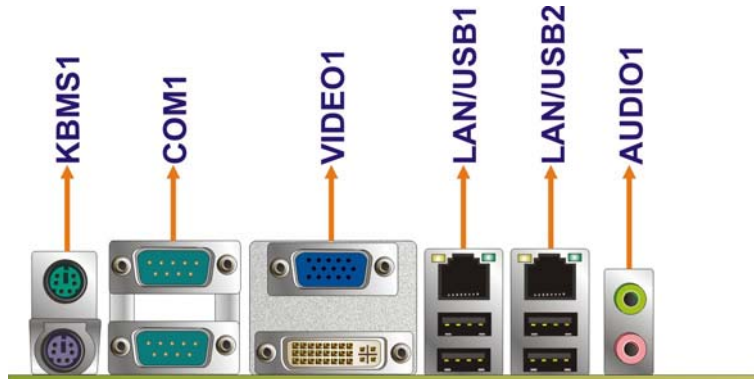


Figure 4-18: KINO-945GSE External Peripheral Interface Connector

4.3.1 Audio Connector

CN Label: AUDIO1
CN Type: 2 x audio jacks
CN Location: See Figure 4-18

The three audio jacks on the external audio connector enable the KINO-945GSE to be connected to external audio devices as specified below.

- **Line Out port (Lime):** Connects to a headphone or a speaker. With multi-channel configurations, this port can also connect to front speakers.
- **Microphone (Pink):** Connects a microphone.



Figure 4-19: Audio Connector

4.3.2 Keyboard/Mouse Connector

CN Label: KBMS1

KINO-945GSE Motherboard

- CN Type:

Dual PS/2
- CN Location:

See Figure 4-18
- CN Pinouts:

See Figure 4-20 and Table 4-19

The KINO-945GSE keyboard and mouse connectors are standard PS/2 connectors.

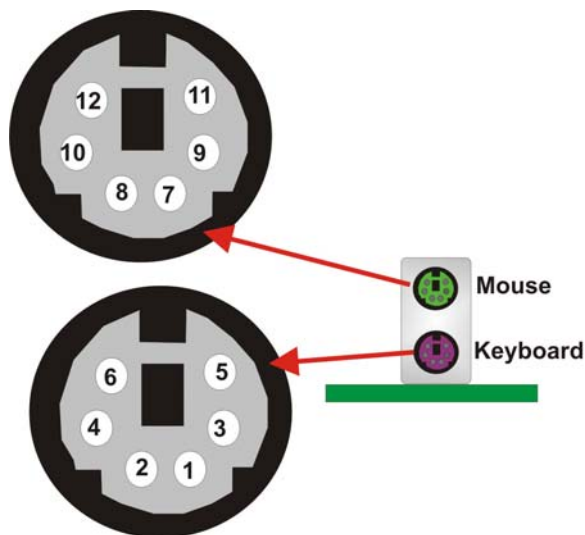


Figure 4-20: PS/2 Pinouts

PIN	DESCRIPTION	PIN	DESCRIPTION
1	L_KDAT	7	L_MDAT
2	NC	8	NC
3	GND	9	GND
4	5 V	10	5 V
5	L_KCLK	11	L_MCLK
6	NC	12	NC

Table 4-19: PS/2 Connector Pinouts

4.3.3 DVI Connector

- CN Label:

VIDEO1 (bottom)
- CN Type:

DVI connector
- CN Location:

See Figure 4-18

CN Pinouts: See Figure 4-20 and Table 4-20

Connects to a monitor that supports DVI video input.

PIN	Signal Name	Pin	Signal Name	Pin	Signal Name
1	TMDS Data2-	9	TMDS Data1-	17	TMDS Data0-
2	TMDS Data2+	10	TMDS Data1+	18	TMDS Data0+
3	GND	11	GND	19	GND
4	N/C	12	NC	20	NC
5	N/C	13	NC	21	NC
6	DDC Clock [SCL]	14	PVDD1	22	GND
7	DDC Data [SDA]	15	GND	23	TMDS Clock +
8	Analog vertical sync	16	HPDET	24	TMDS Clock -

Table 4-20: DVI Connector Pinouts

4.3.4 LAN Connectors

CN Label: LAN/USB1 & LAN/USB2

CN Type: RJ-45


CN Location: See Figure 4-18

CN Pinouts: See Table 4-21

The KINO-945GSE is equipped with two built-in RJ-45 Ethernet controllers. The controllers can connect to the LAN through two RJ-45 LAN connectors. There are two LEDs on the connector indicating the status of LAN. The pin assignments are listed in the following table:

PIN	DESCRIPTION	PIN	DESCRIPTION
1	MDIA3-	5	MDIA1+
2	MDIA3+	6	MDIA2+
3	MDIA2-	7	MDIA0-
4	MDIA1-	8	MDIA0+

Table 4-21: LAN Pinouts

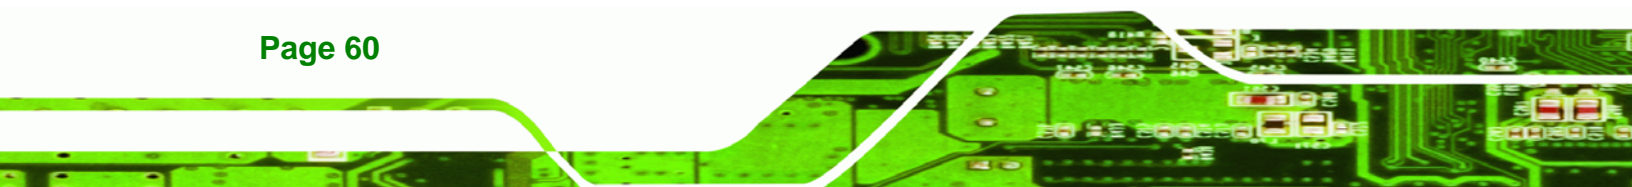

KINO-945GSE Motherboard

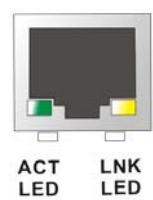


Figure 4-21: RJ-45 Ethernet Connector

The RJ-45 Ethernet connector has two status LEDs, one green and one yellow. The green LED indicates activity on the port and the yellow LED indicates the port is linked. See Table 4-22.

STATUS	DESCRIPTION	STATUS	DESCRIPTION
GREEN	Activity	YELLOW	Linked

Table 4-22: RJ-45 Ethernet Connector LEDs

4.3.5 Serial Port Connectors

- CN Label:** COM1 and COM2
- CN Type:** DB-9 connectors
- CN Location:** See Figure 4-18 (see 2)
- CN Pinouts:** See Table 4-23 and Figure 4-22

The 9-pin DB-9 COM 1 serial port connector is connected to RS-232 serial communications devices.

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	DCD	6	DSR
2	RX	7	RTS
3	TX	8	CTS
4	DTR	9	RI
5	GND		

Table 4-23: RS-232 Serial Port Pinouts

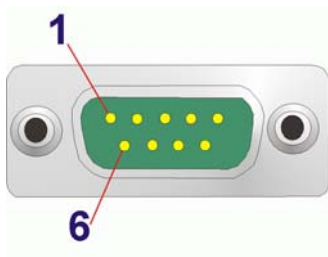


Figure 4-22: RS-232 Serial Port Pinout Locations

4.3.6 USB Connectors

- CN Label:** LAN/USB1 and LAN/USB2
- CN Type:** USB port
- CN Location:** See Figure 4-18
- CN Pinouts:** See Table 4-24

The KINO-945GSE has one external USB 2.0 port. The ports connect to both USB 2.0 and USB 1.1 devices.

PIN NO.	DESCRIPTION
1	VCC
2	DATA-
3	DATA+
4	GND

Table 4-24: USB Port Pinouts

4.3.7 VGA Connector

- CN Label:** VIDEO1 (top)
- CN Type:** 15-pin Female
- CN Location:** See Figure 4-18
- CN Pinouts:** See Figure 4-23 and Table 4-25

The KINO-945GSE has a single 15-pin female connector for connectivity to standard display devices.

KINO-945GSE Motherboard

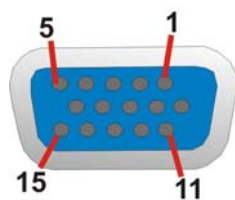


Figure 4-23: VGA Connector

PIN	DESCRIPTION	PIN	DESCRIPTION
1	RED	2	GREEN
3	BLUE	4	NC
5	GND	6	CRT_PLUG-
7	GND	8	GND
9	VCC	10	GND
11	NC	12	DDC DAT
13	HSYNC	14	VSYNC
15	DDCCLK		

Table 4-25: VGA Connector Pinouts

Chapter

5

Installation



5.1 Anti-static Precautions



WARNING:

Failure to take ESD precautions during the installation of the KINO-945GSE may result in permanent damage to the KINO-945GSE and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the KINO-945GSE. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the KINO-945GSE, or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- ***Wear an anti-static wristband:*** - Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- ***Self-grounding:*** - Before handling the board touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- ***Use an anti-static pad:*** When configuring the KINO-945GSE, place it on an anti-static pad. This reduces the possibility of ESD damaging the KINO-945GSE.
- ***Only handle the edges of the PCB:-*** When handling the PCB, hold the PCB by the edges.

5.2 Installation Considerations



NOTE:

The following installation notices and installation considerations should be read and understood before the KINO-945GSE is installed. All installation notices pertaining to the installation of the KINO-945GSE should be strictly adhered to. Failing to adhere to these precautions may lead to severe damage of the KINO-945GSE and injury to the person installing the motherboard.

5.2.1 Installation Notices



WARNING:

The installation instructions described in this manual should be carefully followed in order to prevent damage to the KINO-945GSE, KINO-945GSE components and injury to the user.

Before and during the installation please **DO** the following:

- Read the user manual:
 - The user manual provides a complete description of the KINO-945GSE installation instructions and configuration options.
- Wear an electrostatic discharge cuff (ESD):
 - Electronic components are easily damaged by ESD. Wearing an ESD cuff removes ESD from the body and helps prevent ESD damage.
- Place the KINO-945GSE on an antistatic pad:
 - When installing or configuring the motherboard, place it on an antistatic pad. This helps to prevent potential ESD damage.
- Turn all power to the KINO-945GSE off:
 - When working with the KINO-945GSE, make sure that it is disconnected from all power supplies and that no electricity is being fed into the system.



KINO-945GSE Motherboard

Before and during the installation of the KINO-945GSE **DO NOT**:

- **DO NOT** remove any of the stickers on the PCB board. These stickers are required for warranty validation.
- **DO NOT** use the product before verifying all the cables and power connectors are properly connected.
- **DO NOT** allow screws to come in contact with the PCB circuit, connector pins, or its components.


5.2.2 Installation Checklist

The following checklist is provided to ensure the KINO-945GSE is properly installed.

- All the items in the packing list are present
- A compatible memory module is properly inserted into the slot
- The CF Type I or CF Type II card is properly installed into the CF socket
- The jumpers have been properly configured
- The KINO-945GSE is inserted into a chassis with adequate ventilation
- The correct power supply is being used
- The following devices are properly connected
 - Primary and secondary IDE device
 - SATA drives
 - Power supply
 - USB cable
 - Serial port cable
- The following external peripheral devices are properly connected to the chassis:
 - VGA screen
 - Keyboard
 - Mouse
 - RS-232 serial communications device
 - USB devices

5.3 Unpacking

When the KINO-945GSE is unpacked, please check all the unpacking list items listed in Chapter 3 are indeed present.

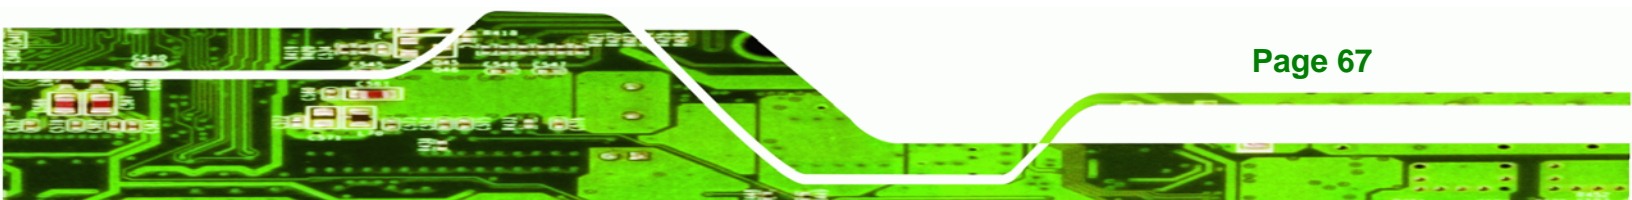

5.4 SO-DIMM Installation



WARNING:

Using incorrectly specified SO-DIMM may cause permanently damage the KINO-945GSE. Please make sure the purchased SO-DIMM complies with the memory specifications of the KINO-945GSE. SO-DIMM specifications compliant with the KINO-945GSE are listed in Chapter 2.

To install a SO-DIMM into a SO-DIMM socket, please follow the steps below and refer to Figure 5-1.

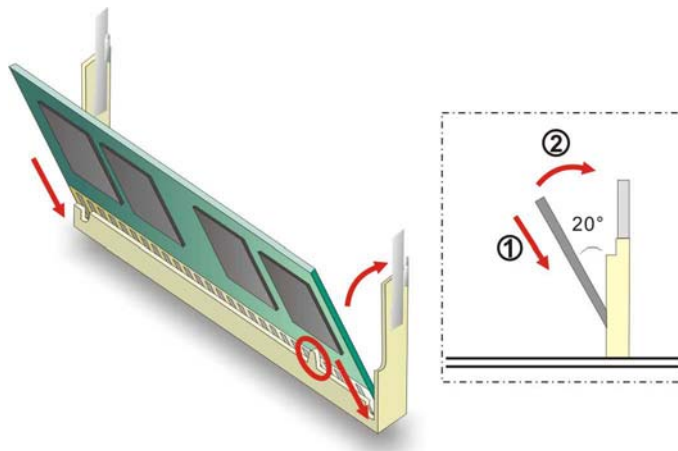


Figure 5-1: SO-DIMM Installation

- Step 1:** **Locate the SO-DIMM socket.** Place the KINO-945GSE on an anti-static pad with the solder side facing up.
- Step 2:** **Align the SO-DIMM with the socket.** The SO-DIMM must be oriented in such a way that the notch in the middle of the SO-DIMM must be aligned with the plastic bridge in the socket.
- Step 3:** **Insert the SO-DIMM.** Push the SO-DIMM chip into the socket at an angle. (See Figure 5-1)

KINO-945GSE Motherboard

Step 4: Open the SO-DIMM socket arms. Gently pull the arms of the SO-DIMM socket out and push the rear of the SO-DIMM down. (See Figure 5-1)

Step 5: Secure the SO-DIMM. Release the arms on the SO-DIMM socket. They clip into place and secure the SO-DIMM in the socket.

5.5 CF Card Installation



NOTE:

The KINO-945GSE can support both CF Type I cards and CF Type II cards. For the complete specifications of the supported CF cards please refer to Chapter 2.

To install the CF card (Type 1 or Type 2) onto the KINO-945GSE, please follow the steps below:

Step 1: Locate the CF card socket. Place the KINO-945GSE on an anti-static pad with the solder side facing up. Locate the CF card.

Step 2: Align the CF card. Make sure the CF card is properly aligned with the CF socket.


Step 3: Insert the CF card. Gently insert the CF card into the socket making sure the socket pins are properly inserted into the socket.

5.6 Jumper Settings



NOTE:

A jumper is a metal bridge used to close an electrical circuit. It consists of two or three metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To CLOSE/SHORT a jumper means connecting the pins of the jumper with the plastic clip and to OPEN a jumper means removing the plastic clip from a jumper.

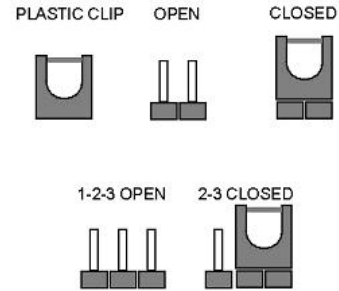

Jumper Locations

Before the KINO-945GSE is installed in the system, the jumpers must be set in accordance with the desired configuration. The jumpers on the KINO-945GSE are listed in Table 5-1.

Description	Type	Label
ATX control	2-pin header	ATXCTL1
Clear CMOS	3-pin header	J_CMOS1
CompactFlash® master/slave	2-pin header	J_CF1
COM3 RS-232/422/485 selector	6-pin header	JP1
LCD panel type selector	8-pin header	J_LCD_TYPE1
LCD voltage selector	3-pin header	J_VLVDS1

Table 5-1: Jumpers

5.6.1 AT/ATX Selection

Jumper Label: ATXCTL1

Jumper Type: 2-pin header



KINO-945GSE Motherboard

- Jumper Settings: See Table 5-2
- Jumper Location: See Figure 5-2

The AT/ATX Power Selection jumper specifies the systems power mode as AT or ATX. Power Selection jumper settings are shown in Table 5-2.

AT Power Select	Description	
Short	Use AT power	
Open	Use ATX power	Default

Table 5-2: AT/ATX Power Selection Jumper Settings

The location of the AT/ATX Power Selection jumper are shown in Figure 5-2 below.

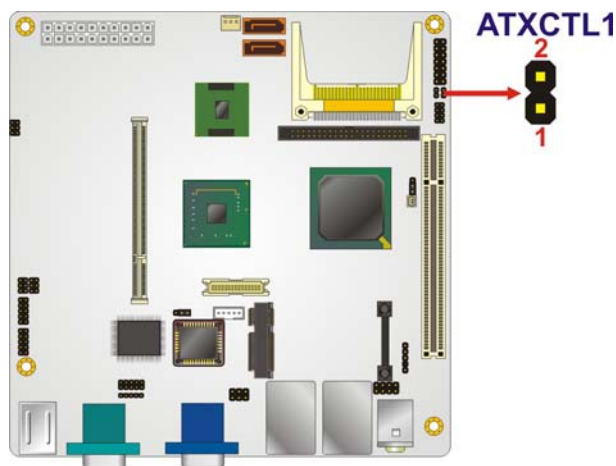


Figure 5-2: AT/ATX Power Selection Jumper Location

5.6.2 Clear CMOS Jumper

- Jumper Label: J_CMOS1
- Jumper Type: 3-pin header
- Jumper Settings: See Table 5-3
- Jumper Location: See Figure 5-3

If the KINO-945GSE fails to boot due to improper BIOS settings, the clear CMOS jumper clears the CMOS data and resets the system BIOS information. To do this, use the jumper

cap to close pins 2 and 3 for a few seconds then reinstall the jumper clip back to pins 1 and 2.

If the “CMOS Settings Wrong” message is displayed during the boot up process, the fault may be corrected by pressing the F1 to enter the CMOS Setup menu. Do one of the following:

- Enter the correct CMOS setting
- Load Optimal Defaults
- Load Failsafe Defaults.

After having done one of the above, save the changes and exit the CMOS Setup menu.

The clear CMOS jumper settings are shown in Table 5-3.

AT Power Select	Description	
1-2	Keep CMOS Setup	Default
2-3	Clear CMOS Setup	

Table 5-3: Clear CMOS Jumper Settings

The location of the clear CMOS jumper is shown in Figure 5-3 below.

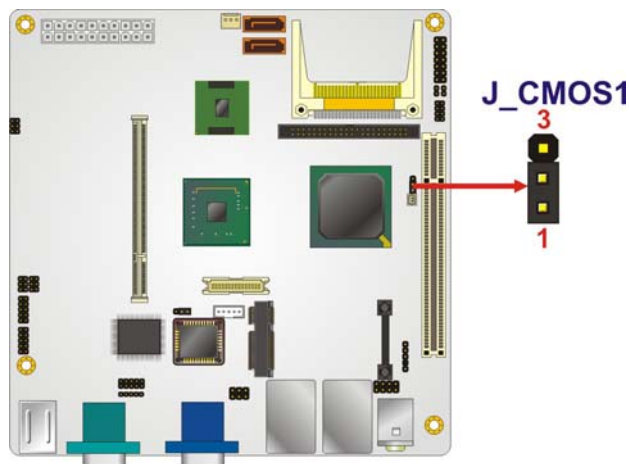


Figure 5-3: Clear CMOS Jumper

5.6.3 CF Card Setup

- Jumper Label: J_CF1
- Jumper Type: 2-pin header
- Jumper Settings: See Table 5-4
- Jumper Location: See Figure 5-4

The CF Card Setup jumper sets the CF Type I card or CF Type II cards as either the slave device or the master device. CF Card Setup jumper settings are shown in Table 5-4.

CF Card Setup	Description	
Open	Slave	Default
Closed	Master	

Table 5-4: CF Card Setup Jumper Settings

The CF Card Setup jumper location is shown in Figure 5-4.


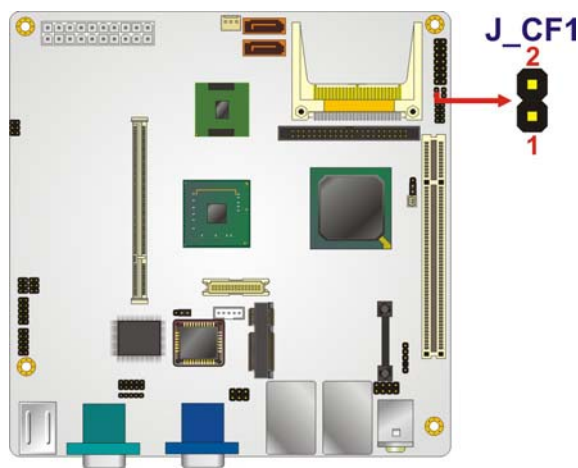


Figure 5-4: CF Card Setup Jumper Location

5.6.4 COM3 RS-232/422/485 Selection Jumper

- Jumper Label: JP1
- Jumper Type: 6-pin header
- Jumper Settings: See Table 5-5

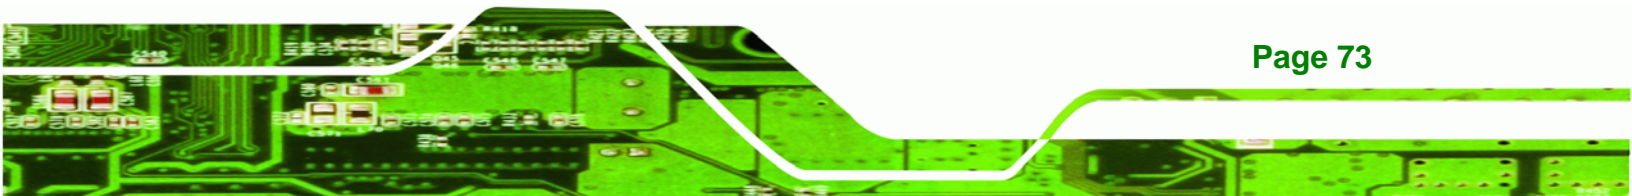

Jumper Location: See Figure 5-5

The RS-232/422/485 Serial Port Select jumper sets the communication protocol used by COM3. The RS-232/422/485 Serial Port Select settings are shown in Table 5-5.

RS-232/422/485	Description	
1-2	RS-232	Default
3-4	RS-422	
5-6	RS-485	

Table 5-5: COM3 RS-232/422/485 Selection Jumper Pinouts

The RS-232/422/485 Serial Port Selection jumper location is shown in Figure 5-5.

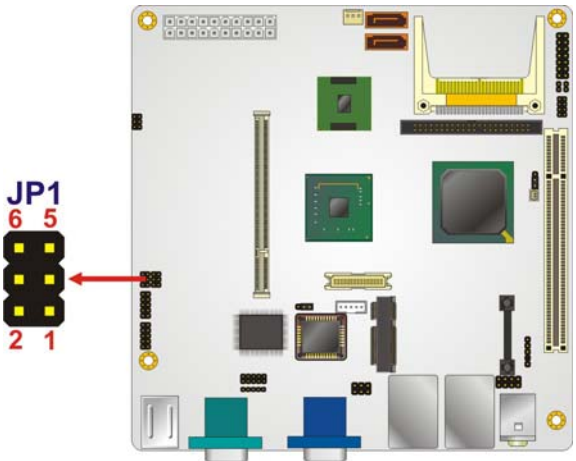


Figure 5-5: COM3 RS-232/422/485 Selection Jumper Location

5.6.5 LCD Panel Type Selection

Jumper Label: J_LCD_TYPE1
Jumper Type: 8-pin header
Jumper Settings: See Table 5-7
Jumper Location: See Figure 5-7

The **LCD Panel Type Selection** jumper allows the LVDS screen voltage to be set. The **LCD Panel Type Selection** jumper settings are shown in Table 5-7.

KINO-945GSE Motherboard

LCD Panel Selection	Description	
Open	640 x 480 (18-bit)	
1-2	800 x 480 (18-bit)	
3-4	800 x 600 (18-bit)	Default
1-2, 3-4	1024 x 768 (18-bit)	
5-6	1280 x 1024 (36-bit)	
1-2, 5-6	1400 x 1050 (36-bit)	
3-4, 5-6	1400 x 900 (36-bit)	
1-2, 3-4, 5-6	1600 x 1200 (36-bit)	

Table 5-6: LCD Panel Type Selection Jumper Settings

The **LCD Panel Type Selection** jumper location is shown in Figure 5-7.

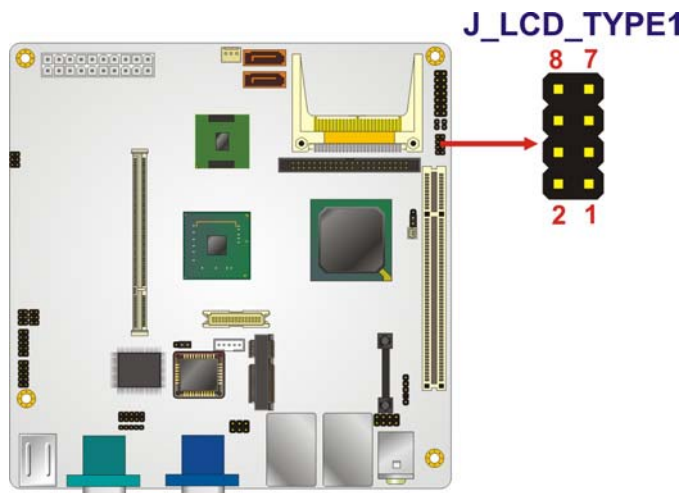


Figure 5-6: LCD Panel Type Selection Jumper Pinout Locations

5.6.6 LVDS Voltage Selection



WARNING:

Permanent damage to the screen and KINO-945GSE may occur if the wrong voltage is selected with this jumper. Please refer to the user guide that came with the monitor to select the correct voltage.

Jumper Label:	J_VLVDS1
Jumper Type:	3-pin header
Jumper Settings:	See Table 5-7
Jumper Location:	See Figure 5-7

The **LVDS Voltage Selection** jumper allows the LVDS screen voltage to be set. The **LVDS Voltage Selection** jumper settings are shown in Table 5-7.

LCD Voltage Select	Description	
1-2	3.3 V	
2-3	5 V	Default

Table 5-7: LVDS Voltage Selection Jumper Settings

The LVDS Voltage Selection jumper location is shown in Figure 5-7.

KINO-945GSE Motherboard

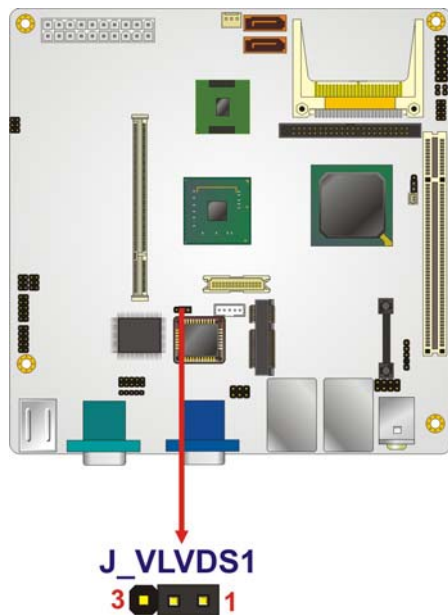


Figure 5-7: LVDS Voltage Selection Jumper Pinout Locations

5.7 Chassis Installation

5.7.1 Airflow



WARNING:

Airflow is critical to the cooling of the CPU and other onboard components. The chassis in which the KINO-945GSE must have air vents to allow cool air to move into the system and hot air to move out.

The KINO-945GSE must be installed in a chassis with ventilation holes on the sides allowing airflow to travel through the heat sink surface. In a system with an individual power supply unit, the cooling fan of a power supply can also help generate airflow through the board surface.

5.7.2 Motherboard Installation

To install the KINO-945GSE motherboard into the chassis please refer to the reference material that came with the chassis.

5.8 Internal Peripheral Device Connections

The cables listed in Table 5-8 are shipped with the KINO-945GSE.

Quantity	Type
1	Keyboard and Mouse cable
2	SATA drive cable
1	Power cable
1	Dual RS-232 cable

Table 5-8: Provided Cables

Some optional items that can be purchased separately and installed on the KINO-945GSE include:


- Dual port USB cable
- 44-pin 2.5" IDE cable
- RS-232/422/485 cable
- DC power cable with terminal block
- HDTV out cable

5.8.1 ATA Flat Cable Connection

The ATA 66/100 flat cable connects to the KINO-945GSE to one or two IDE devices. To connect an IDE HDD to the KINO-945GSE please follow the instructions below.

Step 1: Locate the IDE connector. The location/s of the IDE device connector/s is/are shown in **Chapter 3**.

Step 2: Insert the connector. Connect the IDE cable connector to the onboard connector.

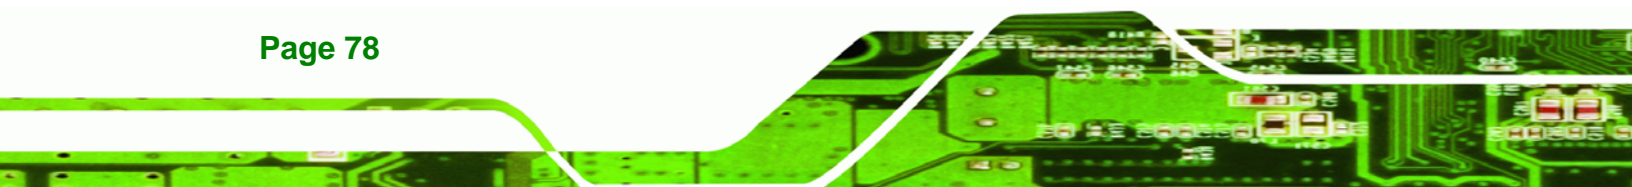

KINO-945GSE Motherboard

Step 3: Connect the cable to an IDE device. Connect the two connectors on the other side of the cable to one or two IDE devices. Make sure that pin 1 on the cable corresponds to pin 1 on the connector.

5.8.2 SATA Drive Connection

The KINO-945GSE is shipped with two SATA drive cables and one SATA drive power cable. To connect the SATA drives to the connectors, please follow the steps below.

Step 1: Locate the connectors. The locations of the SATA drive connectors are shown in **Chapter 3**.

Step 2: Insert the cable connector. Press the clip on the connector at the end of the SATA cable and insert the cable connector into the onboard SATA drive connector.

Step 3: Connect the cable to the SATA disk. Connect the connector on the other end of the cable to the connector at the back of the SATA drive. See Error! Reference source not found..


Step 4: Connect the SATA power cable. Connect the SATA power connector to the back of the SATA drive.

5.8.3 Dual RS-232 Cable with Slot Bracket

The dual RS-232 cable slot connector consists of two connectors attached to two independent cables. Each cable is then attached to a D-sub 9 male connector that is mounted onto a slot. To install the dual RS-232 cable, please follow the steps below.

Step 1: Locate the connectors. The locations of the RS-232 connectors are shown in Chapter 3.

Step 2: Insert the cable connectors. Insert one connector into each serial port box headers. See Error! Reference source not found.. A key on the front of the cable connectors ensures the connector can only be installed in one direction.

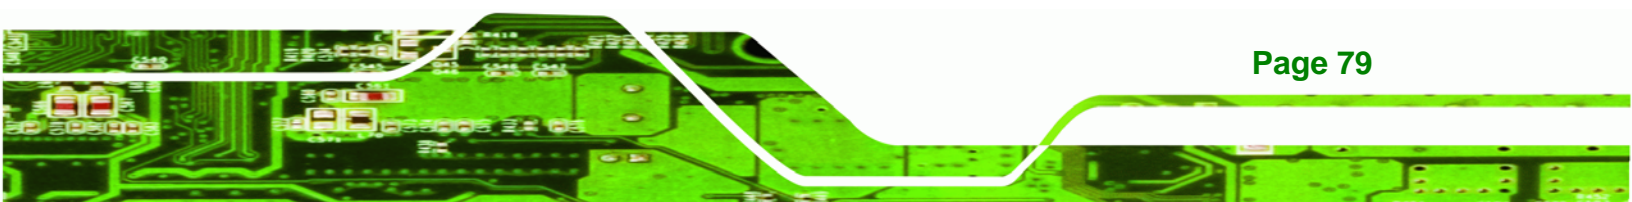

Step 3: Secure the bracket. The dual RS-232 connector has two D-sub 9 male connectors secured on a bracket. To secure the bracket to the chassis please refer to the reference material that came with the chassis.

5.8.4 USB Cable (Dual Port) with Slot Bracket

The KINO-945GSE is shipped with a dual port USB 2.0 cable. To connect the USB cable connector, please follow the steps below.

Step 1: Locate the connectors. The locations of the USB connectors are shown in Chapter 3.



WARNING:

If the USB pins are not properly aligned, the USB device can burn out.

Step 2: Align the connectors. The cable has two connectors. Correctly align pin 1 on each cable connector with pin 1 on the KINO-945GSE USB connector.

Step 3: Insert the cable connectors. Once the cable connectors are properly aligned with the USB connectors on the KINO-945GSE, connect the cable connectors to the on-board connectors.

Step 4: Attach the bracket to the chassis. The USB 2.0 connectors are attached to a bracket. To secure the bracket to the chassis please refer to the installation instructions that came with the chassis.

5.9 External Peripheral Interface Connection

The following external peripheral devices can be connected to the external peripheral interface connectors.

- RJ-45 Ethernet cable connectors
- PS/2 devices
- Serial port devices
- USB devices
- VGA monitors

To install these devices, connect the corresponding cable connector from the actual device to the corresponding KINO-945GSE external peripheral interface connector making sure the pins are properly aligned.

5.9.1 LAN Connection (Single Connector)

There are two external RJ-45 LAN connectors. The RJ-45 connectors enable connection to an external network. To connect a LAN cable with an RJ-45 connector, please follow the instructions below.


Step 1: Locate the RJ-45 connectors. The locations of the USB connectors are shown in **Chapter 4**.

Step 2: Align the connectors. Align the RJ-45 connector on the LAN cable with one of the RJ-45 connectors on the KINO-945GSE.

Step 3: Insert the LAN cable RJ-45 connector. Once aligned, gently insert the LAN cable RJ-45 connector into the onboard RJ-45 connector.

5.9.2 PS/2 Y-Cable Connection

The KINO-945GSE has a PS/2 connector on the external peripheral interface panel. The dual PS/2 connector is connected to the PS/2 Y-cable that came with the KINO-945GSE. One of the PS/2 cables is connected to a keyboard and the other to a mouse to the system. Follow the steps below to connect a keyboard and mouse to the KINO-945GSE.

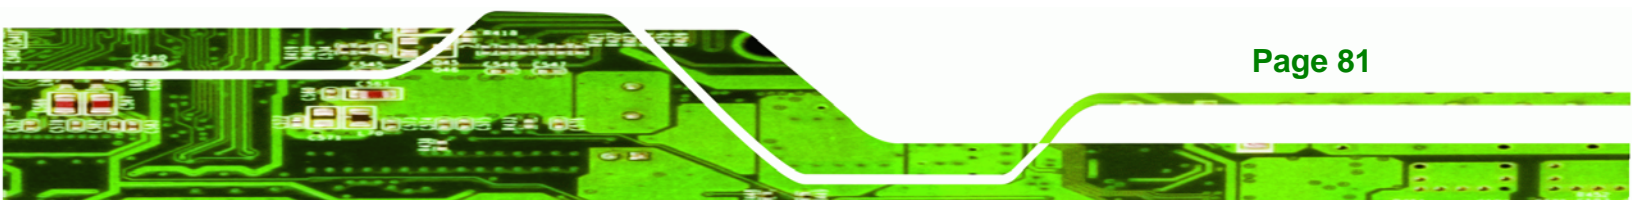

Step 1: Locate the dual PS/2 connector. The location of the PS/2 connector is shown in **Chapter 3**.

Step 2: Insert the keyboard/mouse connector. Insert the PS/2 connector on the end of the PS/2 y-cable into the external PS/2 connector.

Step 3: Connect the keyboard and mouse. Connect the keyboard and mouse to the appropriate connector. The keyboard and mouse connectors can be distinguished from each other by looking at the small graphic at the top of the connector.

5.9.3 Serial Device Connection

The KINO-945GSE has a single female DB-9 connector on the external peripheral interface panel for a serial device. Follow the steps below to connect a serial device to the KINO-945GSE.

Step 1: Locate the DB-9 connector. The location of the DB-9 connector is shown in **Chapter 3**.


Step 2: Insert the serial connector. Insert the DB-9 connector of a serial device into the DB-9 connector on the external peripheral interface.

Step 3: Secure the connector. Secure the serial device connector to the external interface by tightening the two retention screws on either side of the connector.

5.9.4 USB Connection (Dual Connector)

The external USB Series "A" receptacle connectors provide easier and quicker access to external USB devices. Follow the steps below to connect USB devices to the KINO-945GSE.

Step 1: Locate the USB Series "A" receptacle connectors. The location of the USB Series "A" receptacle connectors are shown in **Chapter 3**.

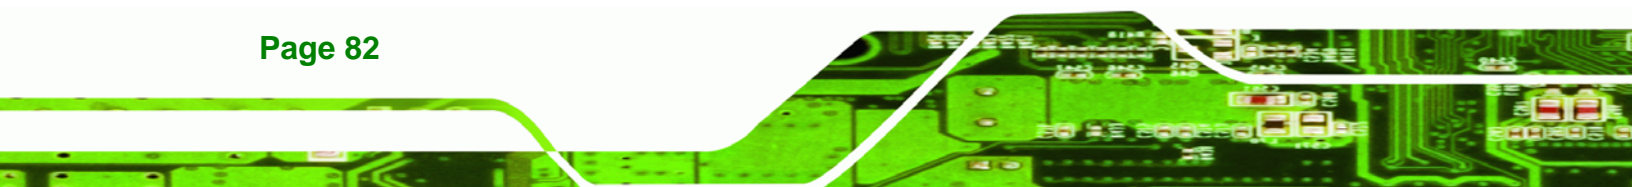

KINO-945GSE Motherboard

Step 2: Insert a USB Series "A" plug. Insert the USB Series "A" plug of a device into the USB Series "A" receptacle on the external peripheral interface.

5.9.5 VGA Monitor Connection


The KINO-945GSE has a single female DB-15 connector on the external peripheral interface panel. The DB-15 connector is connected to a CRT or VGA monitor. To connect a monitor to the KINO-945GSE, please follow the instructions below.

Step 1: Locate the female DB-15 connector. The location of the female DB-15 connector is shown in **Chapter 3**.

Step 2: Align the VGA connector. Align the male DB-15 connector on the VGA screen cable with the female DB-15 connector on the external peripheral interface.

Step 3: Insert the VGA connector. Once the connectors are properly aligned with the insert the male connector from the VGA screen into the female connector on the KINO-945GSE.

Step 4: Secure the connector. Secure the DB-15 VGA connector from the VGA monitor to the external interface by tightening the two retention screws on either side of the connector.

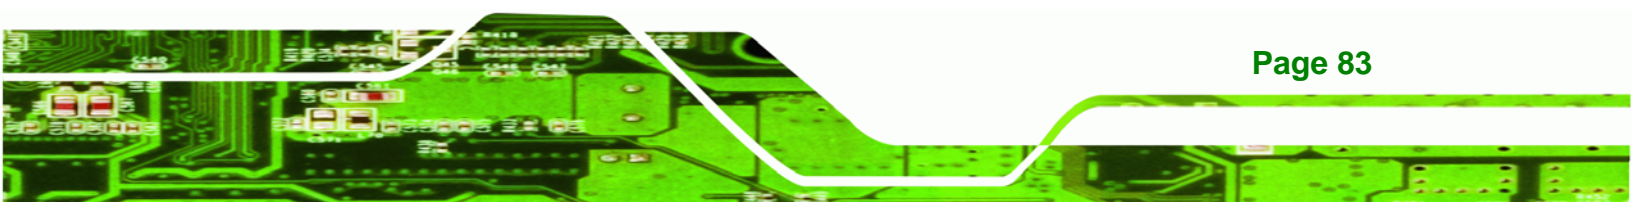

Chapter

6

BIOS Setup



6.1 Introduction

A licensed copy of AMI BIOS is preprogrammed into the ROM BIOS. The BIOS setup program allows users to modify the basic system configuration. This chapter describes how to access the BIOS setup program and the configuration options that may be changed.

6.1.1 Starting Setup

The AMI BIOS is activated when the computer is turned on. The setup program can be activated in one of two ways.

1. Press the **DELETE** key as soon as the system is turned on or
2. Press the **DELETE** key when the “**Press Del to enter SETUP**” message appears on the screen.

If the message disappears before the **DELETE** key is pressed, restart the computer and try again.

6.1.2 Using Setup

Use the arrow keys to highlight items, press **ENTER** to select, use the PageUp and PageDown keys to change entries, press **F1** for help and press **ESC** to quit. Navigation keys are shown in.

Key	Function
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left hand side
Right arrow	Move to the item on the right hand side
Esc key	Main Menu – Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
Page Up key	Increase the numeric value or make changes
Page Dn key	Decrease the numeric value or make changes

Key	Function
F1 key	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2 /F3 key	Change color from total 16 colors. F2 to select color forward.
F10 key	Save all the CMOS changes, only for Main Menu

Table 6-1: BIOS Navigation Keys

6.1.3 Getting Help

When **F1** is pressed a small help window describing the appropriate keys to use and the possible selections for the highlighted item appears. To exit the Help Window press **Esc** or the **F1** key again.

6.1.4 Unable to Reboot After Configuration Changes

If the computer cannot boot after changes to the system configuration is made, CMOS defaults. Use the jumper described in **Chapter 5**.

6.1.5 BIOS Menu Bar

The **menu bar** on top of the BIOS screen has the following main items:

- **Main** Changes the basic system configuration.
- **Advanced** Changes the advanced system settings.
- **PCIPnP** Changes the advanced PCI/PnP Settings
- **Boot** Changes the system boot configuration.
- **Security** Sets User and Supervisor Passwords.
- **Chipset** Changes the chipset settings.
- **Power** Changes power management settings.
- **Exit** Selects exit options and loads default settings


The following sections completely describe the configuration options found in the menu items at the top of the BIOS screen and listed above.



6.2 Main

The **Main** BIOS menu (BIOS Menu 1) appears when the **BIOS Setup** program is entered.

The **Main** menu gives an overview of the basic system information.

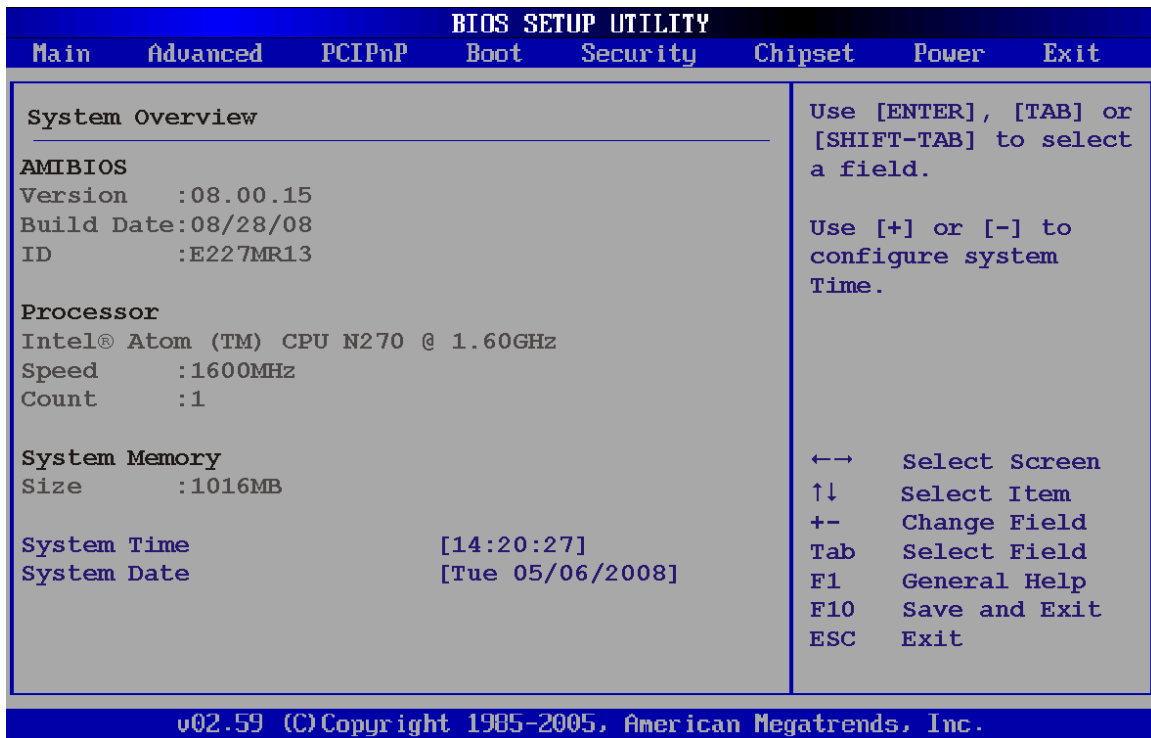

BIOS Menu 1: Main

- **System Overview**

The **System Overview** lists a brief summary of different system components. The fields in **System Overview** cannot be changed. The items shown in the system overview include:

- **AMI BIOS:** Displays auto-detected BIOS information
 - Version: Current BIOS version
 - Build Date: Date the current BIOS version was made
 - ID: Installed BIOS ID
- **Processor:** Displays auto-detected CPU specifications
 - Type: Names the currently installed processor
 - Speed: Lists the processor speed
 - Count: The number of CPUs on the motherboard

- **System Memory:** Displays the auto-detected system memory.
 - Size: Lists memory size

The **System Overview** field also has two user configurable fields:

- **System Time [xx:xx:xx]**

Use the **System Time** option to set the system time. Manually enter the hours, minutes and seconds.

- **System Date [xx/xx/xx]**

Use the **System Date** option to set the system date. Manually enter the day, month and year.

6.3 Advanced

Use the **Advanced** menu (BIOS Menu 2) to configure the CPU and peripheral devices through the following sub-menus:




WARNING:

Setting the wrong values in the sections below may cause the system to malfunction. Make sure that the settings made are compatible with the hardware.

- 6.3.1 CPU Configuration 90
- 6.3.2 IDE Configuration..... 91
- 6.3.3 Super IO Configuration 98
- 6.3.4 Hardware Health Configuration 101
- 6.3.5 Power Configuration..... 105
- 6.3.6 Remote Configuration 109
- 6.3.7 USB Configuration 113




KINO-945GSE Motherboard

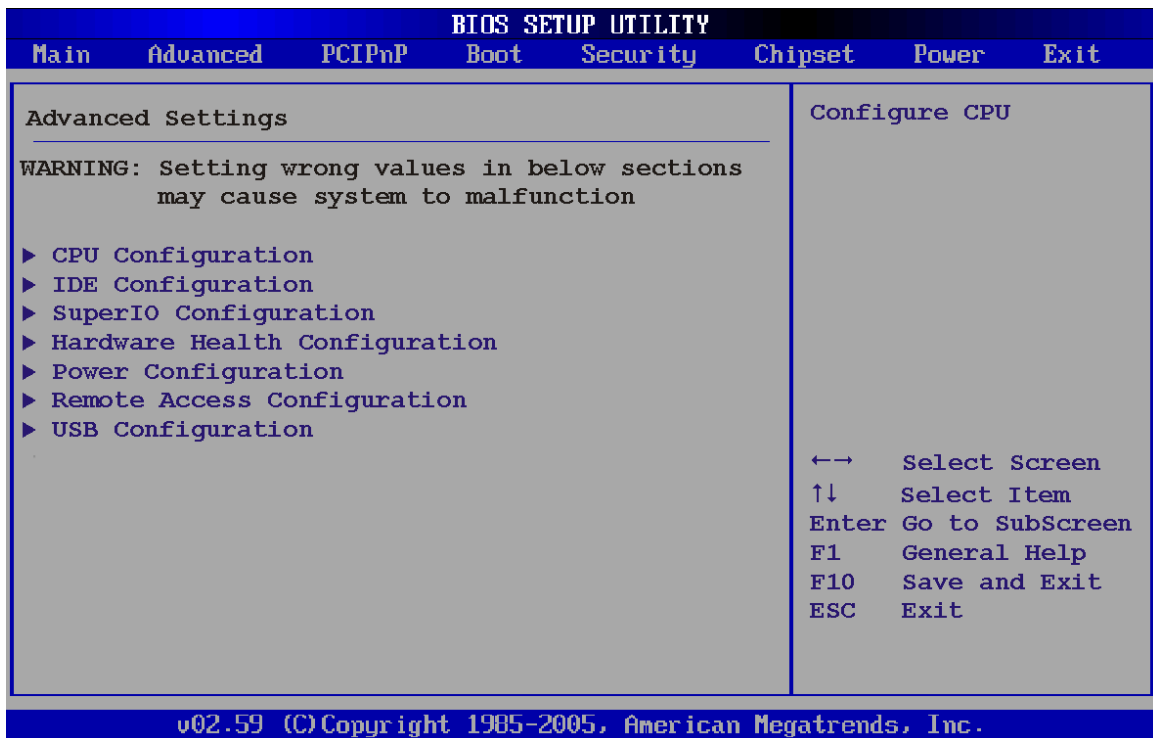

BIOS Menu 2: Advanced

6.3.1 CPU Configuration

Use the **CPU Configuration** menu (BIOS Menu 3) to view detailed CPU specifications and configure the CPU.

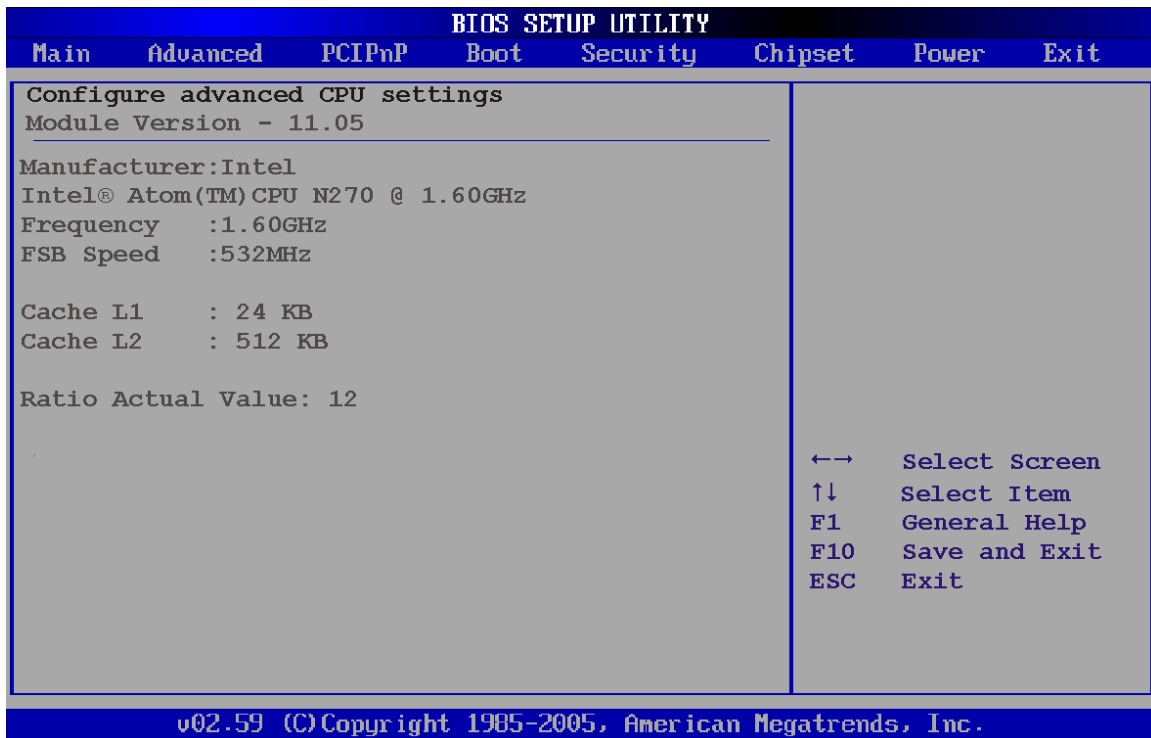


BIOS Menu 3: CPU Configuration

The CPU Configuration menu (BIOS Menu 3) lists the following CPU details:

- **Manufacturer:** Lists the name of the CPU manufacturer
- **Brand String:** Lists the brand name of the CPU being used
- **Frequency:** Lists the CPU processing speed
- **FSB Speed:** Lists the FSB speed
- **Cache L1:** Lists the CPU L1 cache size
- **Cache L2:** Lists the CPU L2 cache size

6.3.2 IDE Configuration

Use the **IDE Configuration** menu (BIOS Menu 4) to change and/or set the configuration of the IDE devices installed in the system.

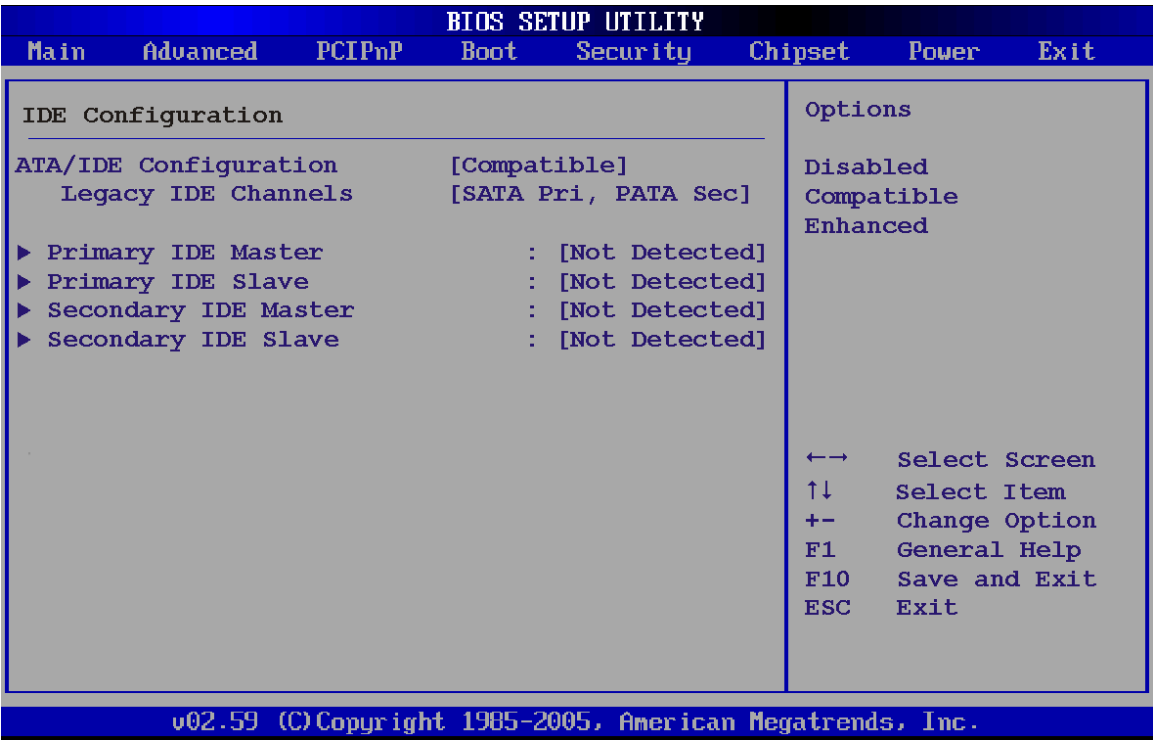

BIOS Menu 4: IDE Configuration

▪ ATA/IDE Configurations [Compatible]

Use the **ATA/IDE Configurations** option to configure the ATA/IDE controller.

- ➔ **Disabled** Disables the on-board ATA/IDE controller.
- ➔ **Compatible** Configures the on-board ATA/IDE controller to be in compatible mode. In this mode, a SATA channel will replace one of the IDE channels. This mode supports up to 4 storage devices.

- ➔ **Enhanced** **DEFAULT** Configures the on-board ATA/IDE controller to be in Enhanced mode. In this mode, IDE channels and SATA channels are separated. This mode supports up to 6 storage devices. Some legacy OS do not support this mode.

- **Legacy IDE Channels [PATA Pri, SATA Sec]**


- ➔ **SATA Only** Only the SATA drives are enabled.
- ➔ **SATA Pri, PATA Sec** **DEFAULT** The IDE drives are enabled on the Primary IDE channel. The SATA drives are enabled on the Secondary IDE channel.
- ➔ **PATA Only** The IDE drives are enabled on the primary and secondary IDE channels. SATA drives are disabled.

- **IDE Master and IDE Slave**

When entering setup, BIOS auto detects the presence of IDE devices. BIOS displays the status of the auto detected IDE devices. The following IDE devices are detected and are shown in the **IDE Configuration** menu:


- Primary IDE Master
- Primary IDE Slave
- Secondary IDE Master
- Secondary IDE Slave

The **IDE Configuration** menu (BIOS Menu 4) allows changes to the configurations for the IDE devices installed in the system. If an IDE device is detected, and one of the above listed four BIOS configuration options are selected, the IDE configuration options shown in **Section 876.3.2.1** appear.

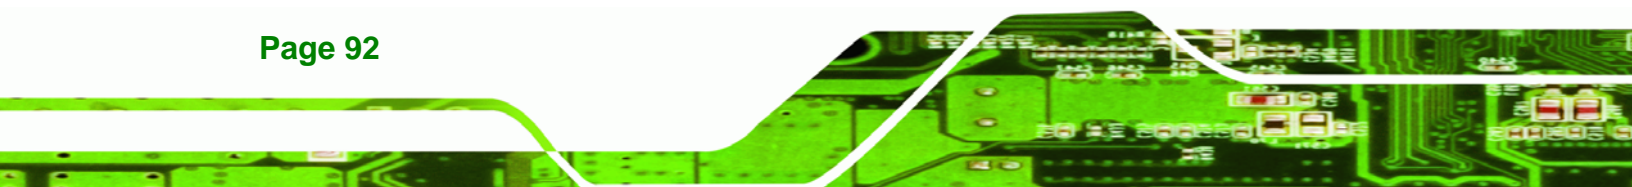

6.3.2.1 IDE Master, IDE Slave

Use the **IDE Master** and **IDE Slave** configuration menu to view both primary and secondary IDE device details and configure the IDE devices connected to the system.

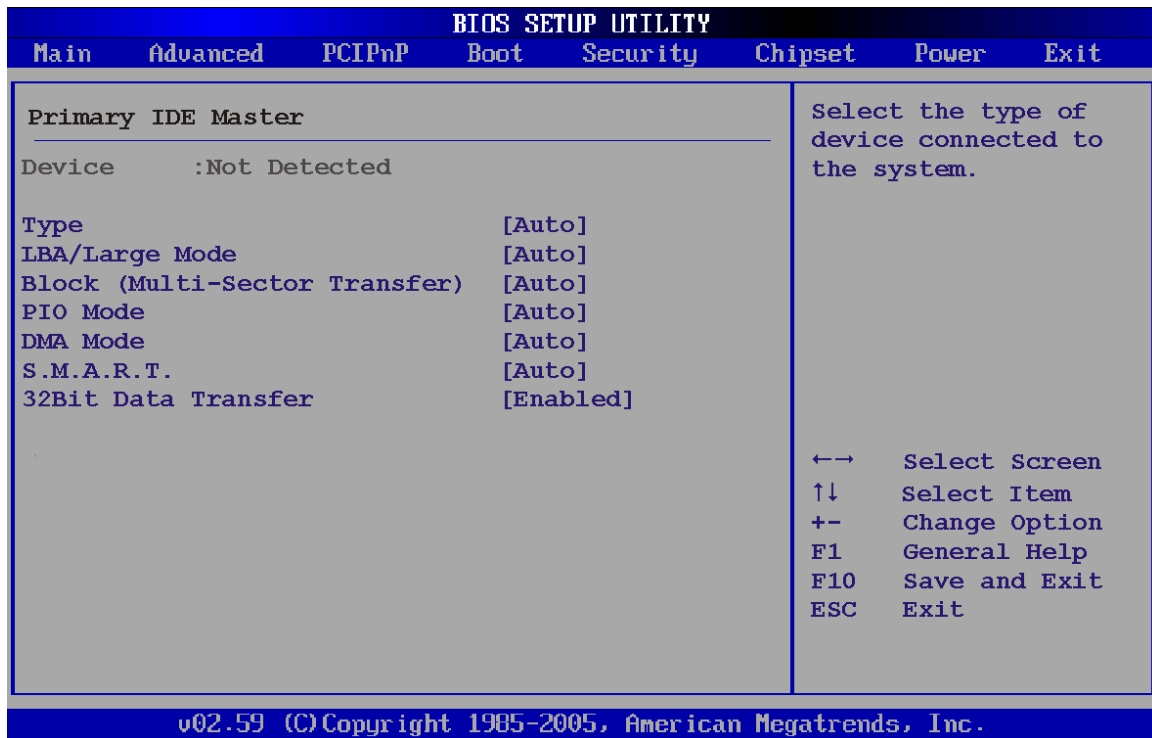

BIOS Menu 5: IDE Master and IDE Slave Configuration

- **Auto-Detected Drive Parameters**

The "grayed-out" items in the left frame are IDE disk drive parameters automatically detected from the firmware of the selected IDE disk drive. The drive parameters are listed as follows:

- **Device:** Lists the device type (e.g. hard disk, CD-ROM etc.)
- **Type:** Indicates the type of devices a user can manually select
- **Vendor:** Lists the device manufacturer
- **Size:** List the storage capacity of the device.
- **LBA Mode:** Indicates whether the LBA (Logical Block Addressing) is a method of addressing data on a disk drive is supported or not.

- **Block Mode:** Block mode boosts IDE drive performance by increasing the amount of data transferred. Only 512 bytes of data can be transferred per interrupt if block mode is not used. Block mode allows transfers of up to 64 KB per interrupt.
 - **PIO Mode:** Indicates the PIO mode of the installed device.
 - **Async DMA:** Indicates the highest Asynchronous DMA Mode that is supported.
 - **Ultra DMA:** Indicates the highest Synchronous DMA Mode that is supported.
 - **S.M.A.R.T.:** Indicates whether or not the Self-Monitoring Analysis and Reporting Technology protocol is supported.
 - **32Bit Data Transfer:** Enables 32-bit data transfer.
-
- **Type [Auto]**

Use the **Type** BIOS option select the type of device the AMIBIOS attempts to boot from after the Power-On Self-Test (POST) is complete.

- | | | | |
|---|----------------------|----------------|---|
| ➔ | Not Installed | | BIOS is prevented from searching for an IDE disk drive on the specified channel. |
| ➔ | Auto | DEFAULT | The BIOS auto detects the IDE disk drive type attached to the specified channel. This setting should be used if an IDE hard disk drive is attached to the specified channel. |
| ➔ | CD/DVD | | The CD/DVD option specifies that an IDE CD-ROM drive is attached to the specified IDE channel. The BIOS does not attempt to search for other types of IDE disk drives on the specified channel. |
| ➔ | ARMD | | This option specifies an ATAPI Removable Media Device. These include, but are not limited to:

ZIP

LS-120 |



KINO-945GSE Motherboard

▪ LBA/Large Mode [Auto]

Use the **LBA/Large Mode** option to disable or enable BIOS to auto detects LBA (Logical Block Addressing). LBA is a method of addressing data on a disk drive. In LBA mode, the maximum drive capacity is 137 GB.

- ➔ **Disabled** BIOS is prevented from using the LBA mode control on the specified channel.
- ➔ **Auto** **DEFAULT** BIOS auto detects the LBA mode control on the specified channel.

▪ Block (Multi Sector Transfer) [Auto]


Use the **Block (Multi Sector Transfer)** to disable or enable BIOS to auto detect if the device supports multi-sector transfers.

- ➔ **Disabled** BIOS is prevented from using Multi-Sector Transfer on the specified channel. The data to and from the device occurs one sector at a time.
- ➔ **Auto** **DEFAULT** BIOS auto detects Multi-Sector Transfer support on the drive on the specified channel. If supported the data transfer to and from the device occurs multiple sectors at a time.

▪ PIO Mode [Auto]

Use the **PIO Mode** option to select the IDE PIO (Programmable I/O) mode program timing cycles between the IDE drive and the programmable IDE controller. As the PIO mode increases, the cycle time decreases.

- ➔ **Auto** **DEFAULT** BIOS auto detects the PIO mode. Use this value if the IDE disk drive support cannot be determined.
- ➔ **0** PIO mode 0 selected with a maximum transfer rate of 3.3 MB/s
- ➔ **1** PIO mode 1 selected with a maximum transfer rate of 5.2 MB/s
- ➔ **2** PIO mode 2 selected with a maximum transfer rate of 8.3 MB/s

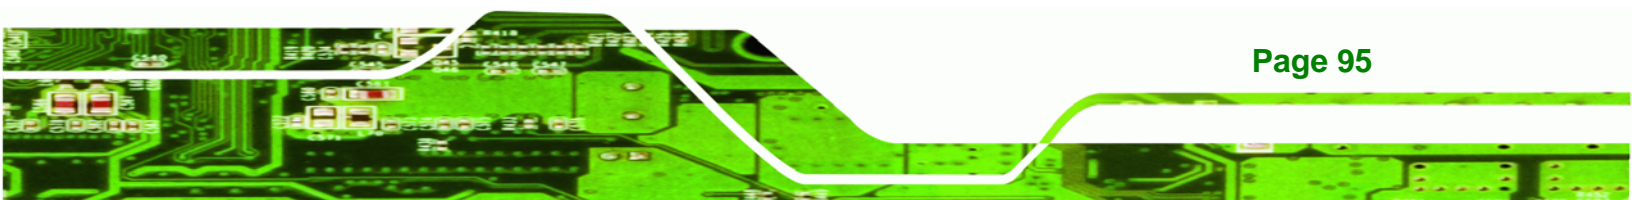

- ➔ 3 PIO mode 3 selected with a maximum transfer rate of 11.1 MB/s
- ➔ 4 PIO mode 4 selected with a maximum transfer rate of 16.6 MB/s
(This setting generally works with all hard disk drives manufactured after 1999. For other disk drives, such as IDE CD-ROM drives, check the specifications of the drive.)

▪ DMA Mode [Auto]

Use the **DMA Mode** BIOS selection to adjust the DMA mode options.

- ➔ **Auto** **DEFAULT** BIOS auto detects the DMA mode. Use this value if the IDE disk drive support cannot be determined.
- ➔ **SWDMA0** Single Word DMA mode 0 selected with a maximum data transfer rate of 2.1 MB/s
- ➔ **SWDMA1** Single Word DMA mode 1 selected with a maximum data transfer rate of 4.2 MB/s
- ➔ **SWDMA2** Single Word DMA mode 2 selected with a maximum data transfer rate of 8.3 MB/s
- ➔ **MWDMA0** Multi Word DMA mode 0 selected with a maximum data transfer rate of 4.2 MB/s
- ➔ **MWDMA1** Multi Word DMA mode 1 selected with a maximum data transfer rate of 13.3 MB/s
- ➔ **MWDMA2** Multi Word DMA mode 2 selected with a maximum data transfer rate of 16.6 MB/s
- ➔ **UDMA1** Ultra DMA mode 0 selected with a maximum data transfer rate of 16.6 MB/s
- ➔ **UDMA1** Ultra DMA mode 1 selected with a maximum data transfer rate of 25 MB/s
- ➔ **UDMA2** Ultra DMA mode 2 selected with a maximum data transfer rate of 33.3 MB/s



KINO-945GSE Motherboard

- ➔ **UDMA3** Ultra DMA mode 3 selected with a maximum data transfer rate of 44 MB/s (To use this mode, it is required that an 80-conductor ATA cable is used.)
- ➔ **UDMA4** Ultra DMA mode 4 selected with a maximum data transfer rate of 66.6 MB/s (To use this mode, it is required that an 80-conductor ATA cable is used.)
- ➔ **UDMA5** Ultra DMA mode 5 selected with a maximum data transfer rate of 99.9 MB/s (To use this mode, it is required that an 80-conductor ATA cable is used.)

- **S.M.A.R.T [Auto]**


Use the **S.M.A.R.T** option to auto-detect, disable or enable Self-Monitoring Analysis and Reporting Technology (SMART) on the drive on the specified channel. **S.M.A.R.T** predicts impending drive failures. The **S.M.A.R.T** BIOS option enables or disables this function.

- ➔ **Auto** **DEFAULT** BIOS auto detects HDD SMART support.
- ➔ **Disabled** Prevents BIOS from using the HDD SMART feature.
- ➔ **Enabled** Allows BIOS to use the HDD SMART feature

- **32Bit Data Transfer [Enabled]**


Use the **32Bit Data Transfer** BIOS option to enables or disable 32-bit data transfers.

- ➔ **Disabled** Prevents the BIOS from using 32-bit data transfers.
- ➔ **Enabled** **DEFAULT** Allows BIOS to use 32-bit data transfers on supported hard disk drives.

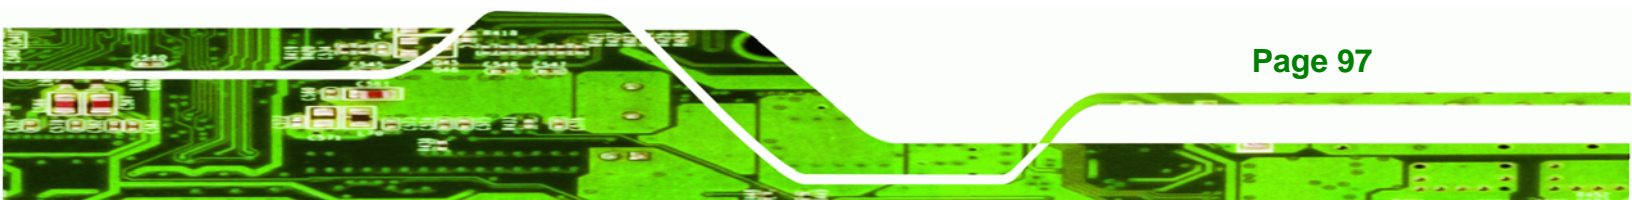

6.3.3 Super IO Configuration

Use the **Super IO Configuration** menu (BIOS Menu 6) to set or change the configurations for the FDD controllers, parallel ports and serial ports.

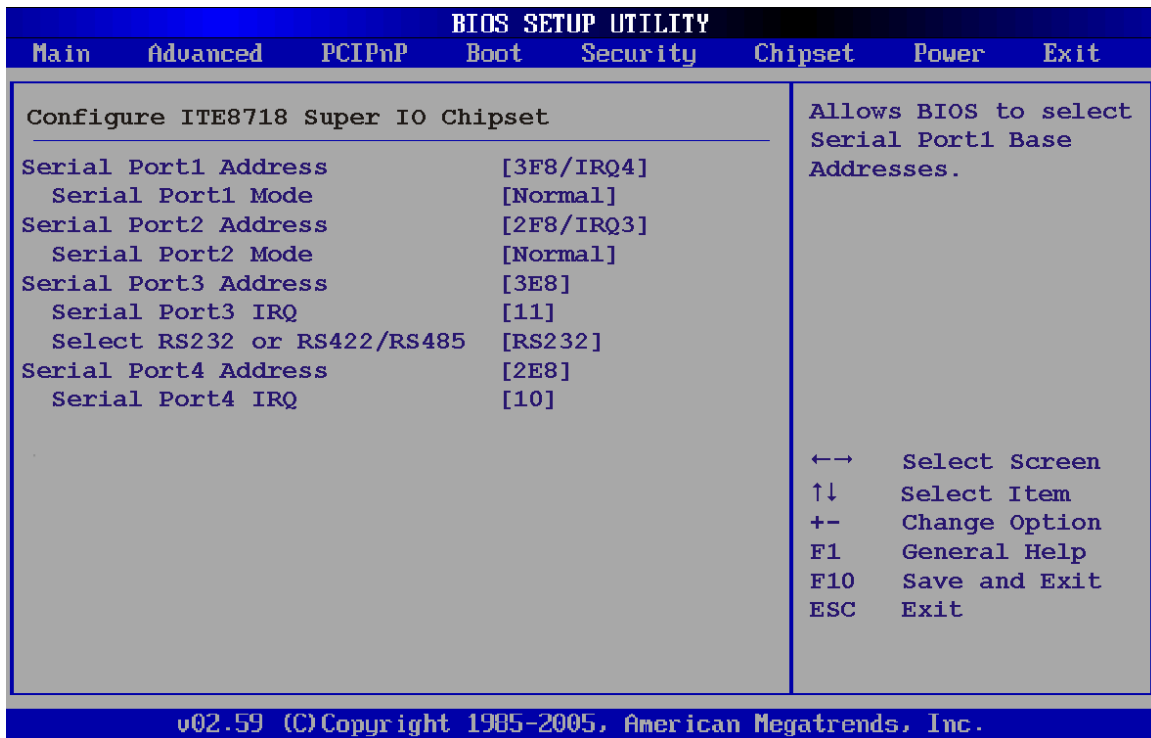

BIOS Menu 6: Super IO Configuration


- Serial Port1 Address [3F8/IRQ4]

Use the **Serial Port1 Address** option to select the I/O and IRQ base addresses.

- ➔ **Disabled** No base address is assigned to Serial Port 1
- ➔ **3F8/IRQ4** **DEFAULT** I/O port address is 3F8 and the interrupt address is IRQ4
- ➔ **3E8/IRQ4** I/O port address is 3E8 and the interrupt address is IRQ4
- ➔ **2E8/IRQ3** I/O port address is 2E8 and the interrupt address is IRQ3

- Serial Port1 Mode [Normal]

Use the **Serial Port1 Mode** option to select the transmitting and receiving mode.

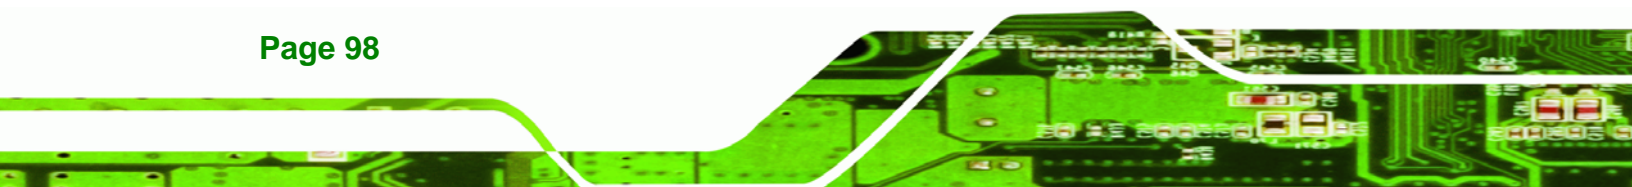

KINO-945GSE Motherboard

- Normal Default
- IrDA
- ASK IR

▪ Serial Port2 Address [2F8/IRQ3]

Use the **Serial Port2 Address** option to select the I/O and IRQ addresses.

- ➔ Disabled No base address is assigned to Serial Port 2
- ➔ 2F8/IRQ3 DEFAULT I/O port address is 3F8 and the interrupt address is IRQ3
- ➔ 3E8/IRQ4 I/O port address is 3E8 and the interrupt address is IRQ4
- ➔ 2E8/IRQ3 I/O port address is 2E8 and the interrupt address is IRQ3

▪ Serial Port2 Mode [Normal]

Use the **Serial Port2 Mode** option to select the transmitting and receiving mode.

- Normal Default
- IrDA
- ASK IR

▪ Serial Port3 Address [3E8]


Use the **Serial Port 3 Address** option to set the I/O address.

- ➔ Disabled No I/O address assigned
- ➔ 3E8 DEFAULT The assigned I/O address is 3E8
- ➔ 2E8 The assigned I/O address is 2E8
- ➔ 2F0 The assigned I/O address is 2F0
- ➔ 2E0 The assigned I/O address is 2E0

▪ Serial Port 3 IRQ [11]

Use the **Serial Port 3 IRQ** option selects the IRQ.

- 11 Default

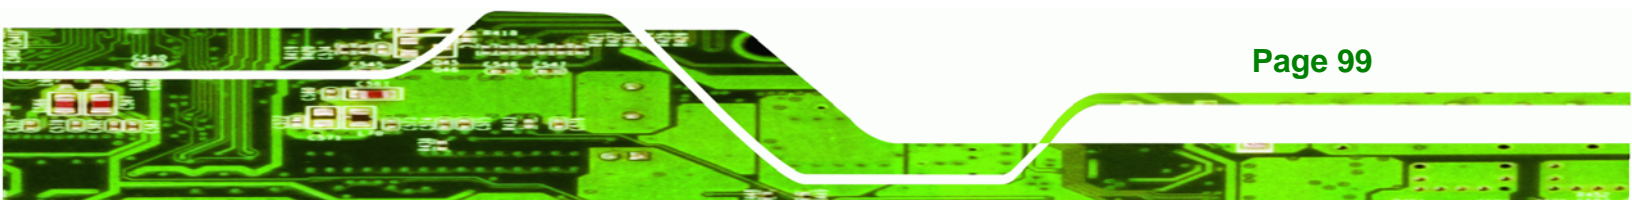

- 10

- **Select RS232 or RS422/RS485 [RS232]**

Use the **Select RS232 or RS422/RS485** option to select the transmitting and receiving mode.

- RS232 Default
- RS422/485

- **Serial Port4 Address [2E8]**


Use the **Serial Port 4 Address** option to set the I/O address.

- ➔ **Disabled** No I/O address assigned
- ➔ **3E8** The assigned I/O address is 3E8
- ➔ **2E8** **DEFAULT** The assigned I/O address is 2E8
- ➔ **2F0** The assigned I/O address is 2F0
- ➔ **2E0** The assigned I/O address is 2E0

- **Serial Port 4 IRQ [10]**


Use the **Serial Port 4 IRQ** option selects the IRQ.

- 11
- 10 Default

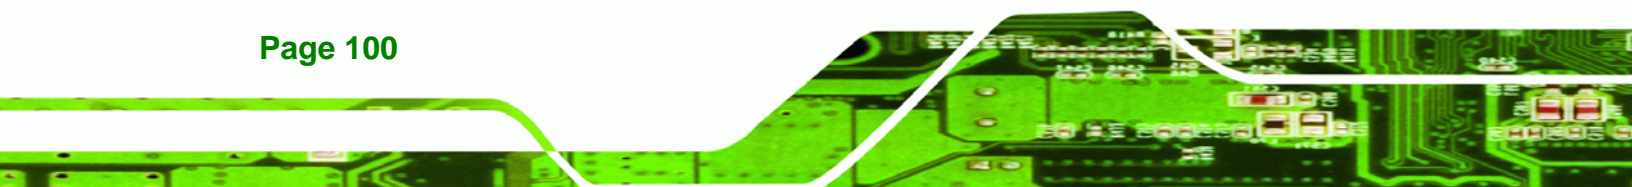

6.3.4 Hardware Health Configuration

The **Hardware Health Configuration** menu (BIOS Menu 7) shows the operating temperature, fan speeds and system voltages.

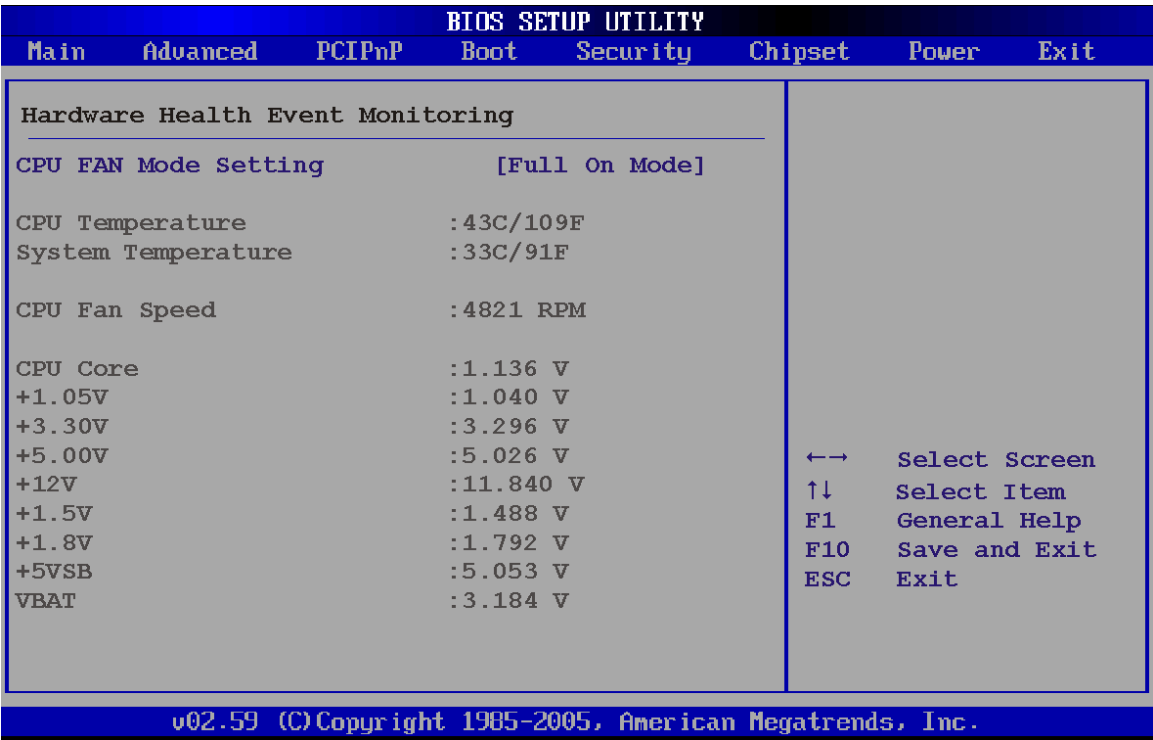

BIOS Menu 7: Hardware Health Configuration

▪ CPU FAN Mode Setting [Full On Mode]

Use the **CPU FAN Mode Setting** option to configure the second fan.

- ➔ **Full On Mode** **DEFAULT** Fan is on all the time
- ➔ **Automatic mode** Fan is off when the temperature is low enough. Parameters must be set by the user.
- ➔ **PWM Manual mode** Pulse width modulation set manually

When the **CPU FAN Mode Setting** option is in the **Automatic Mode**, the following parameters can be set.

- CPU Temp. Limit of OFF
- CPU Temp. Limit of Start
- CPU Fan Start PWM
- Slope PWM 1

When the **CPU FAN Mode Setting** option is in the **PWM Manual Mode**, the following parameters can be set.

- CPU Fan PWM control

- **CPU Temp. Limit of OFF [000]**



WARNING:

Setting this value too high may cause the fan to stop when the CPU is at a high temperature and therefore cause the system to be damaged.

The **CPU Temp. Limit of OFF** option can only be set if the **CPU FAN Mode Setting** option is set to **Automatic Mode**. Use the **CPU Temp. Limit of OFF** option to select the CPU temperature at which the cooling fan should automatically turn off. To select a value, select the **CPU Temp. Limit of OFF** option and enter a decimal number between 000 and 127. The temperature range is specified below.

- Minimum Value: 0°C
- Maximum Value: 127°C

- **CPU Temp. Limit of Start [020]**



WARNING:

Setting this value too high may cause the fan to start only when the CPU is at a high temperature and therefore cause the system to be damaged.



The **CPU Temp. Limit of Start** option can only be set if the **CPU FAN Mode Setting** option is set to **Automatic Mode**. Use the **CPU Temp. Limit of Start** option to select the CPU temperature at which the cooling fan should automatically turn on. When the fan starts, it rotates using the starting pulse width modulation (PWM) specified in the **Fan 3 Start PWM** option below. To select a value, select the **CPU Temp. Limit of Start** option and enter a decimal number between 000 and 127. The temperature range is specified below.

- Minimum Value: 0°C
- Maximum Value: 127°C

▪ CPU Fan Start PWM [070]


The **Fan 3 Start PWM** option can only be set if the **CPU FAN Mode Setting** option is set to **Automatic Mode**. Use the **Fan 3 Start PWM** option to select the PWM mode the fan starts to rotate with after the temperature specified in the **Temperature 3 Limit of Start** is exceeded. The Super I/O chipset supports 128 PWM modes. To select a value, select the **Fan 3 Start PWM** option and enter a decimal number between 000 and 127. The temperature range is specified below.

- PWM Minimum Mode: 0
- PWM Maximum Mode: 127

▪ Slope PWM [0.5 PWM]

The **Slope PWM 1** option can only be set if the **CPU FAN Mode Setting** option is set to **Automatic Mode**. Use the **Slope PWM 1** option to select the linear rate at which the PWM mode increases with respect to an increase in temperature. A list of available options is shown below:

- 0 PWM
- 1 PWM
- 2 PWM
- 4 PWM
- 8 PWM
- 16 PWM
- 32 PWM

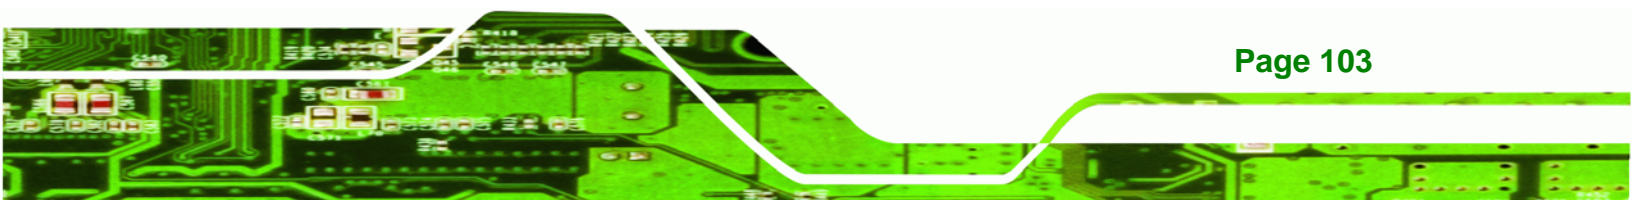

- 64 PWM


The following system parameters and values are shown. The system parameters that are monitored are:

- **System Temperatures:** The following system temperatures are monitored
 - CPU Temperature
 - System Temperature
- **Fan Speeds:** The CPU cooling fan speed is monitored.
 - CPU Fan Speed
- **Voltages:** The following system voltages are monitored
 - CPU Core
 - +1.05 V
 - +3.30 V
 - +5.00 V
 - +12.0 V
 - +1.5 V
 - +1.8 V
 - 5 VSB
 - VBAT



6.3.5 Power Configuration

The **Power Configuration** menu (BIOS Menu 8) configures the Advanced Configuration and Power Interface (ACPI) and Power Management (APM) options.

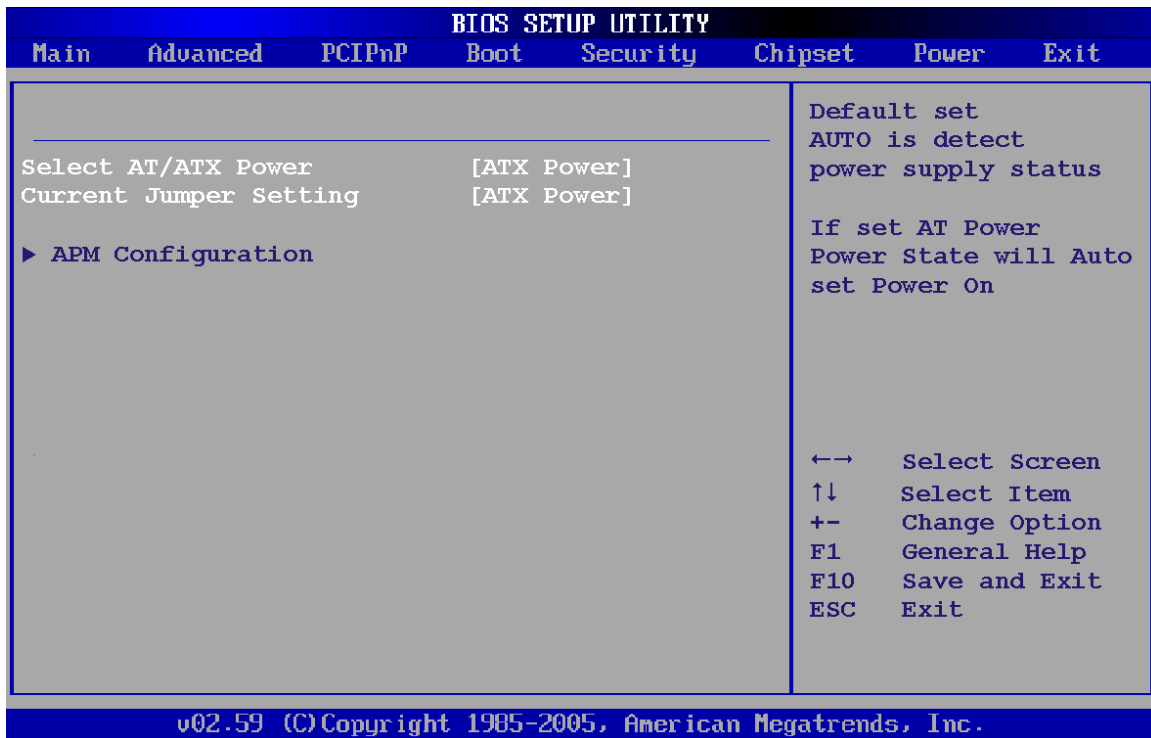

BIOS Menu 8: Power Configuration

- **Select AT/ATX Power [ATX Power]**

Use the **Select AT/ATX Power** option to set the power mode of the system.


- ➔ **AT Power** Use AT power
- ➔ **ATX Power** **DEFAULT** Use ATX power
- ➔ **BY HARDWARE** Select AT or ATX power according to the hardware jumper settings

- **Current Jumper Setting [ATX Power]**

Current Jumper Setting shows the setting of the power selection hardware jumper.

6.3.5.1 APM Configuration

The **APM Configuration** menu (BIOS Menu 9) allows the advanced power management options to be configured.

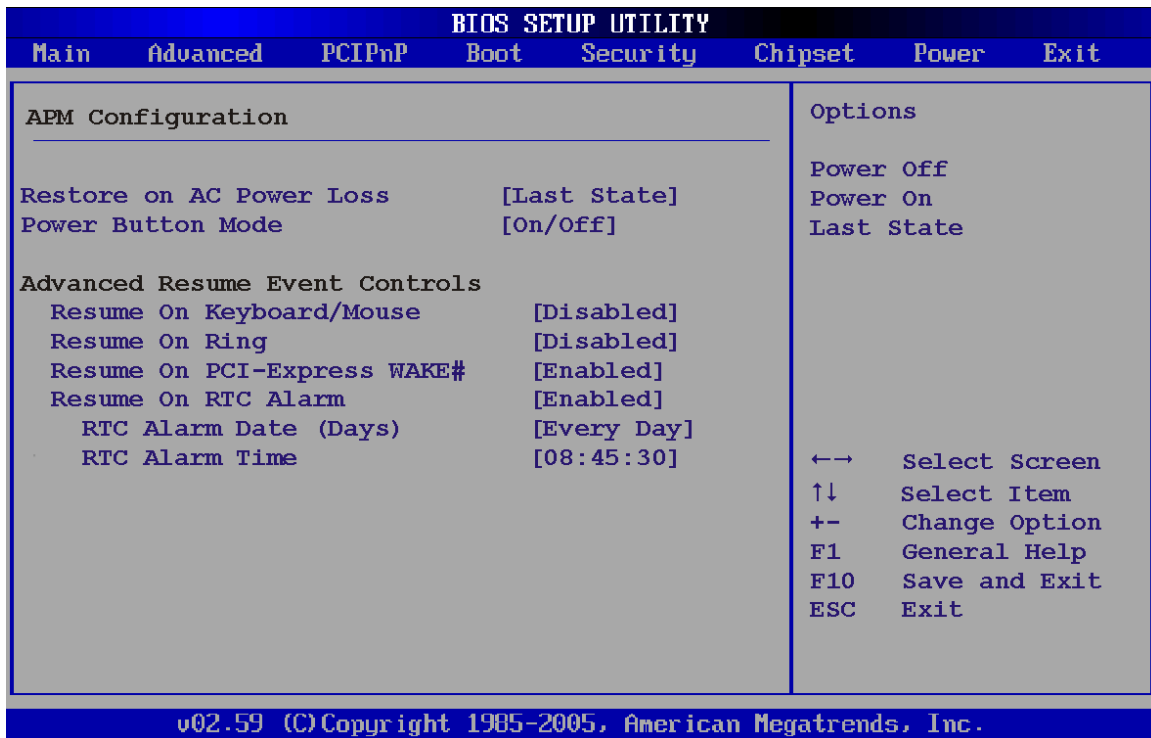

BIOS Menu 9: Advanced Power Management Configuration

- **Restore on AC Power Loss [Last State]**

Use the **Restore on AC Power Loss** BIOS option to specify what state the system returns to if there is a sudden loss of power to the system.

- ➔ **Power Off** The system remains turned off
- ➔ **Power On** The system turns on
- ➔ **Last State DEFAULT** The system returns to its previous state. If it was on, it turns itself on. If it was off, it remains off.



KINO-945GSE Motherboard

- **Power Button Mode [On/Off]**

Use the **Power Button Mode** BIOS to specify how the power button functions.

- ➔ **On/Off** **DEFAULT** When the power button is pressed the system is either turned on or off
- ➔ **Suspend** When the power button is pressed the system goes into suspend mode

- **Resume on Keyboard/Mouse [Disabled]**

Use the **Resume on Keyboard/Mouse** BIOS option to enable activity on either the keyboard or mouse to rouse the system from a suspend or standby state. That is, the system is roused when the mouse is moved or a button on the keyboard is pressed.

- ➔ **Disabled** **DEFAULT** Wake event not generated by activity on the keyboard or mouse
- ➔ **Enabled** Wake event generated by activity on the keyboard or mouse

- **Resume on Ring [Disabled]**


Use the **Resume on Ring** BIOS option to enable activity on the RI (ring in) modem line to rouse the system from a suspend or standby state. That is, the system will be roused by an incoming call on a modem.

- ➔ **Disabled** **DEFAULT** Wake event not generated by an incoming call
- ➔ **Enabled** Wake event generated by an incoming call

- **Resume on PCI-Express WAKE# [Enabled]**

Use the **Resume PCI-Express WAKE#** BIOS option to enable activity on the PCI-Express WAKE# signal to rouse the system from a suspend or standby state.

- ➔ **Disabled** Wake event not generated by PCI-Express WAKE# signal activity

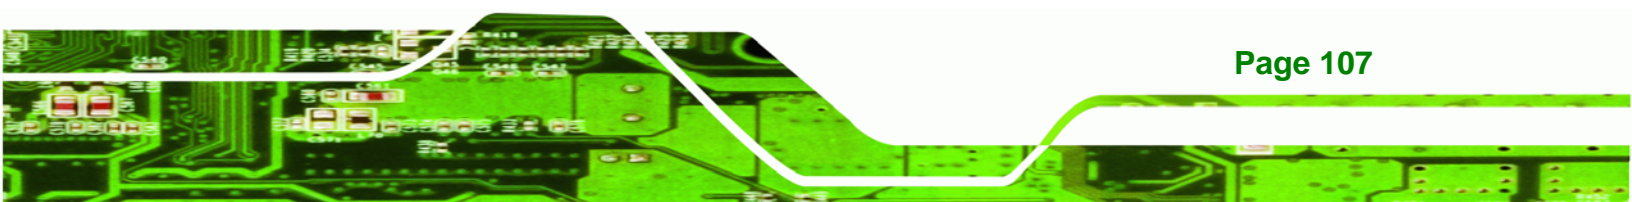

➔ **Enabled** **DEFAULT** Wake event generated by PCI-Express WAKE# signal activity

▪ **Resume On RTC Alarm [Disabled]**

Use the **Resume On RTC Alarm** option to specify the time the system should be roused from a suspended state.

➔ **Disabled** **DEFAULT** The real time clock (RTC) cannot generate a wake event

➔ **Enabled** If selected, the following appears with values that can be selected:

- **RTC Alarm Date (Days)**


- **RTC Alarm Time**

After setting the alarm, the computer turns itself on from a suspend state when the alarm goes off.



6.3.6 Remote Configuration

Use the **Remote Access Configuration** menu (BIOS Menu 10) to configure remote access parameters. The **Remote Access Configuration** is an AMIBIOS feature and allows a remote host running a terminal program to display and configure the BIOS settings.

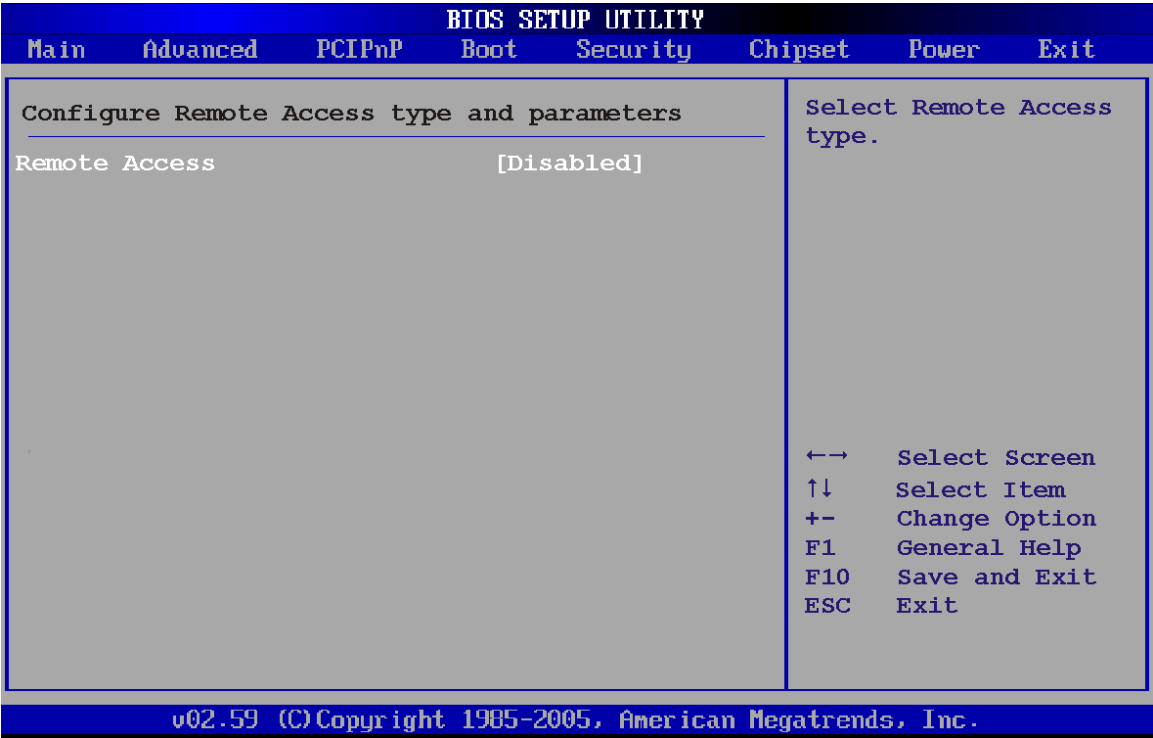

BIOS Menu 10: Remote Access Configuration

▪ Remote Access [Disabled]

Use the **Remote Access** option to enable or disable access to the remote functionalities of the system.

➔ Disabled DEFAULT Remote access is disabled.

➔ Enabled

Remote access configuration options shown below appear:

- **Serial Port Number**
- **Serial Port Mode**
- **Flow Control**
- **Redirection after BIOS POST**
- **Terminal Type**
- **VT-UTF8 Combo Key Support**

These configuration options are discussed below.

▪ **Serial Port Number [COM1]**

Use the **Serial Port Number** option allows to select the serial port used for remote access.

➔ **COM1** **DEFAULT** System is remotely accessed through COM1

➔ **COM2** System is remotely accessed through COM2

NOTE: Make sure the selected COM port is enabled through the Super I/O configuration menu.


▪ **Base Address, IRQ [2F8h,3]**

The **Base Address, IRQ** option cannot be configured and only shows the interrupt address of the serial port listed above.

▪ **Serial Port Mode [115200 8,n,1]**

Use the **Serial Port Mode** option to select baud rate through which the console redirection is made. The following configuration options are available

- 115200 8,n,1 **DEFAULT**
- 57600 8,n,1
- 38400 8,n,1
- 19200 8,n,1
- 09600 8,n,1

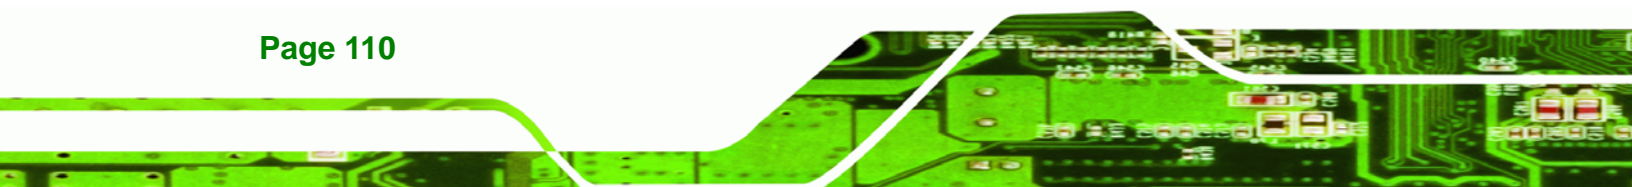



NOTE:

Identical baud rate setting must be set on the host (a management computer running a terminal software) and the slave

▪ Flow Control [None]

Use the **Flow Control** option to report the flow control method for the console redirection application.

- | | | | |
|---|-----------------|----------------|--|
| ➔ | None | DEFAULT | No control flow, |
| ➔ | Hardware | | Hardware is set as the console redirection |
| ➔ | Software | | Software is set as the console redirection |

▪ Redirection After BIOS POST [Always]

Use the **Redirection After BIOS POST** option to specify when console redirection should occur.

- | | | | |
|---|--------------------|----------------|--|
| ➔ | Disabled | | The console is not redirected after POST |
| ➔ | Boot Loader | | Redirection is active during POST and during Boot Loader |
| ➔ | Always | DEFAULT | Redirection is always active (Some OSES may not work if set to Always) |

▪ Terminal Type [ANSI]

Use the **Terminal Type** BIOS option to specify the remote terminal type.

- | | | | |
|---|----------------|----------------|-------------------------------------|
| ➔ | ANSI | DEFAULT | The target terminal type is ANSI |
| ➔ | VT100 | | The target terminal type is VT100 |
| ➔ | VT-UTF8 | | The target terminal type is VT-UTF8 |

- **VT-UTF8 Combo Key Support [Disabled]**

Use the **VT-UTF8 Combo Key Support** option to enable additional keys that are not provided by VT100 for the PC 101 keyboard.

The VT100 Terminal Definition is the standard convention used to configure and conduct emergency management tasks with UNIX-based servers. VT100 does not support all keys on the standard PC 101-key layout, however. The VT-UTF8 convention makes available additional keys that are not provided by VT100 for the PC 101 keyboard.

- ➔ **Disabled** **DEFAULT** Disables the VT-UTF8 terminal keys
- ➔ **Enabled** Enables the VT-UTF8 combination key. Support for ANSI/VT100 terminals

- **Sredir Memory Display Delay [Disabled]**


Use the **Sredir Memory Display Delay** option to select the delay before memory information is displayed. Configuration options are listed below

- No Delay **DEFAULT**
- Delay 1 sec
- Delay 2 sec
- Delay 4 sec



6.3.7 USB Configuration

Use the **USB Configuration** menu (BIOS Menu 11) to read USB configuration information and configure the USB settings.

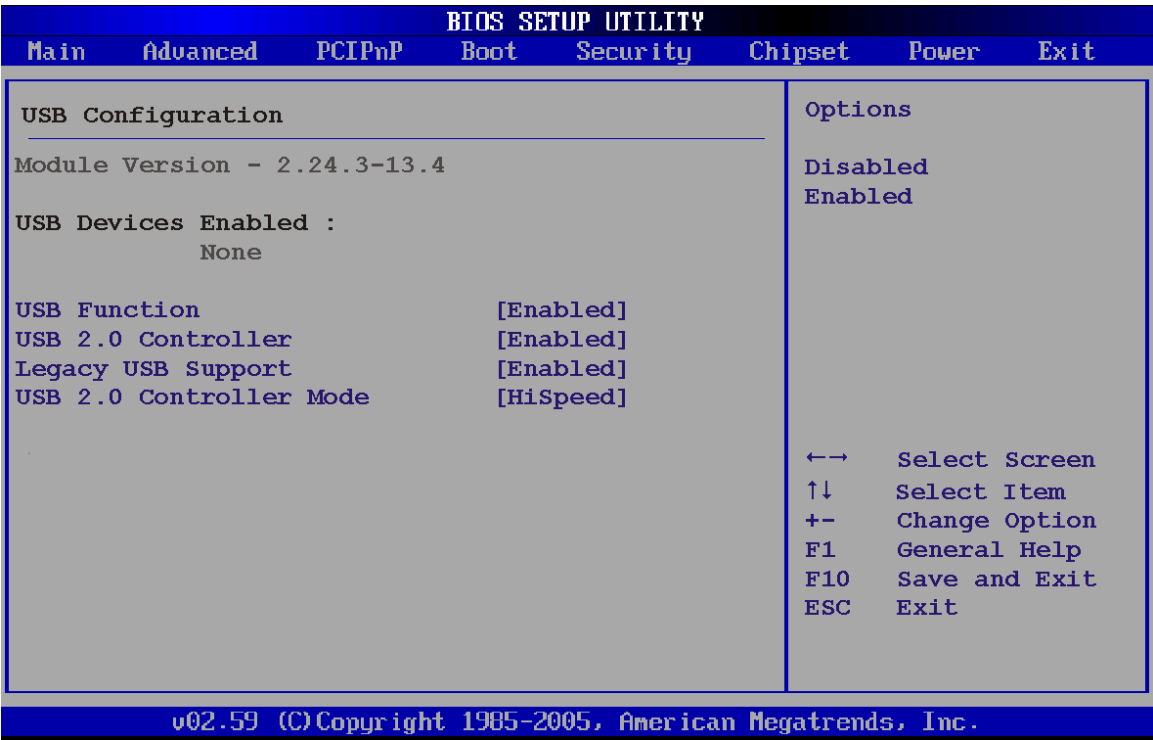

BIOS Menu 11: USB Configuration

▪ **USB Functions [Enabled]**

Use the **USB Function** option to enable or disable the USB controllers.

- ➔ **Disabled** USB controllers are enabled
- ➔ **Enabled** **DEFAULT** USB controllers are disabled

▪ **USB 2.0 Controller [Enabled]**

The **USB 2.0 Controller** BIOS option enables or disables the USB 2.0 controller

- ➔ **Disabled** USB function disabled

➔ **Enabled** **DEFAULT** USB function enabled

▪ **USB2.0 Controller Mode [HiSpeed]**

The **USB2.0 Controller Mode** BIOS option sets the speed of the USB2.0 controller.

➔ **FullSpeed** The controller is capable of operating at full speed
12 Mb/s

➔ **HiSpeed** **DEFAULT** The controller is capable of operating at high speed
480 Mb/s

▪ **Legacy USB Support [Enabled]**

Use the **Legacy USB Support** BIOS option to enable USB mouse and USB keyboard support.

Normally if this option is not enabled, any attached USB mouse or USB keyboard does not become available until a USB compatible operating system is fully booted with all USB drivers loaded. When this option is enabled, any attached USB mouse or USB keyboard can control the system even when there is no USB driver loaded onto the system.

➔ **Disabled** Legacy USB support disabled

➔ **Enabled** **DEFAULT** Legacy USB support enabled

➔ **Auto** Legacy USB support disabled if no USB devices are
connected

6.4 PCI/PnP

Use the PCI/PnP menu (BIOS Menu 12) to configure advanced PCI and PnP settings.



WARNING:

Setting wrong values for the BIOS selections in the PCIPnP BIOS menu may cause the system to malfunction.

KINO-945GSE Motherboard

BIOS SETUP UTILITY			
Main	Advanced	PCIPnP	Boot Security Chipset Power Exit
Advanced PCI/PnP Settings		Available: Specified IRQ is available to be use by PCI/PnP devices. Reserved: Specified IRQ is reserved for use by legacy ISA devices.	
IRQ3		[Reserved]	
IRQ4		[Reserved]	
IRQ5		[Available]	
IRQ7		[Available]	
IRQ9		[Available]	
IRQ10		[Reserved]	
IRQ11		[Reserved]	
IRQ14		[Available]	
IRQ15		[Available]	
DMA Channel 0		[Available]	←→ Select Screen
DMA Channel 1		[Available]	↑↓ Select Item
DMA Channel 3		[Available]	+− Change Option
DMA Channel 5		[Available]	F1 General Help
DMA Channel 6		[Available]	F10 Save and Exit
DMA Channel 7		[Available]	ESC Exit
Reserved Memory Size		[Disabled]	
v02.59 (C) Copyright 1985-2005, American Megatrends, Inc.			

BIOS Menu 12: PCI/PnP Configuration

- **IRQ# [Available]**

Use the **IRQ#** address to specify what IRQs can be assigned to a particular peripheral device.

- ➔ **Available** **DEFAULT** The specified IRQ is available to be used by PCI/PnP devices
- ➔ **Reserved** The specified IRQ is reserved for use by Legacy ISA devices

Available IRQ addresses are:

- IRQ3
- IRQ4
- IRQ5
- IRQ7
- IRQ9

- IRQ10
- IRQ 11
- IRQ 14
- IRQ 15

▪ **DMA Channel# [Available]**

Use the **DMA Channel#** option to assign a specific DMA channel to a particular PCI/PnP device.

- | | | | |
|---|------------------|----------------|--|
| ➔ | Available | DEFAULT | The specified DMA is available to be used by PCI/PnP devices |
| ➔ | Reserved | | The specified DMA is reserved for use by Legacy ISA devices |

Available DMA Channels are:

- DM Channel 0
- DM Channel 1
- DM Channel 3
- DM Channel 5
- DM Channel 6
- DM Channel 7

▪ **Reserved Memory Size [Disabled]**


Use the **Reserved Memory Size** BIOS option to specify the amount of memory that should be reserved for legacy ISA devices.

- | | | | |
|---|-----------------|----------------|---|
| ➔ | Disabled | DEFAULT | No memory block reserved for legacy ISA devices |
| ➔ | 16K | | 16 KB reserved for legacy ISA devices |
| ➔ | 32K | | 32 KB reserved for legacy ISA devices |
| ➔ | 64K | | 54 KB reserved for legacy ISA devices |



6.5 Boot


Use the Boot menu (BIOS Menu 13) to configure system boot options.

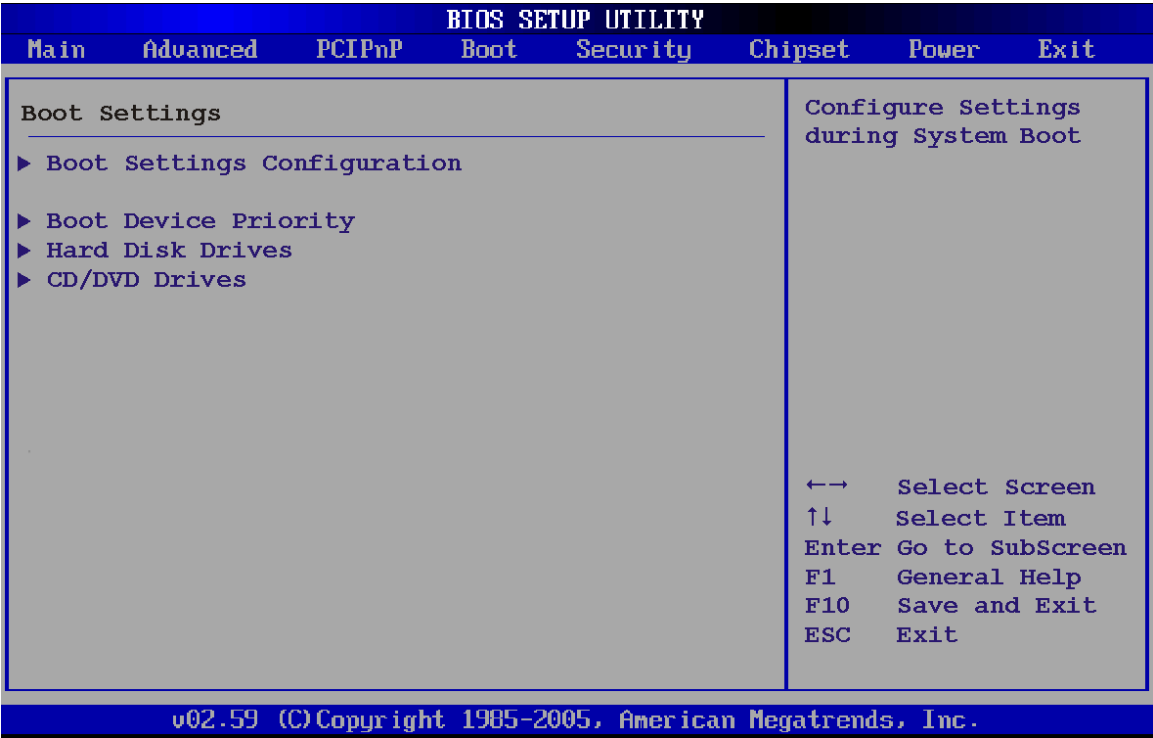

BIOS Menu 13: Boot

6.5.1 Boot Settings Configuration

Use the Boot Settings Configuration menu (BIOS Menu 13) to configure advanced system boot options.

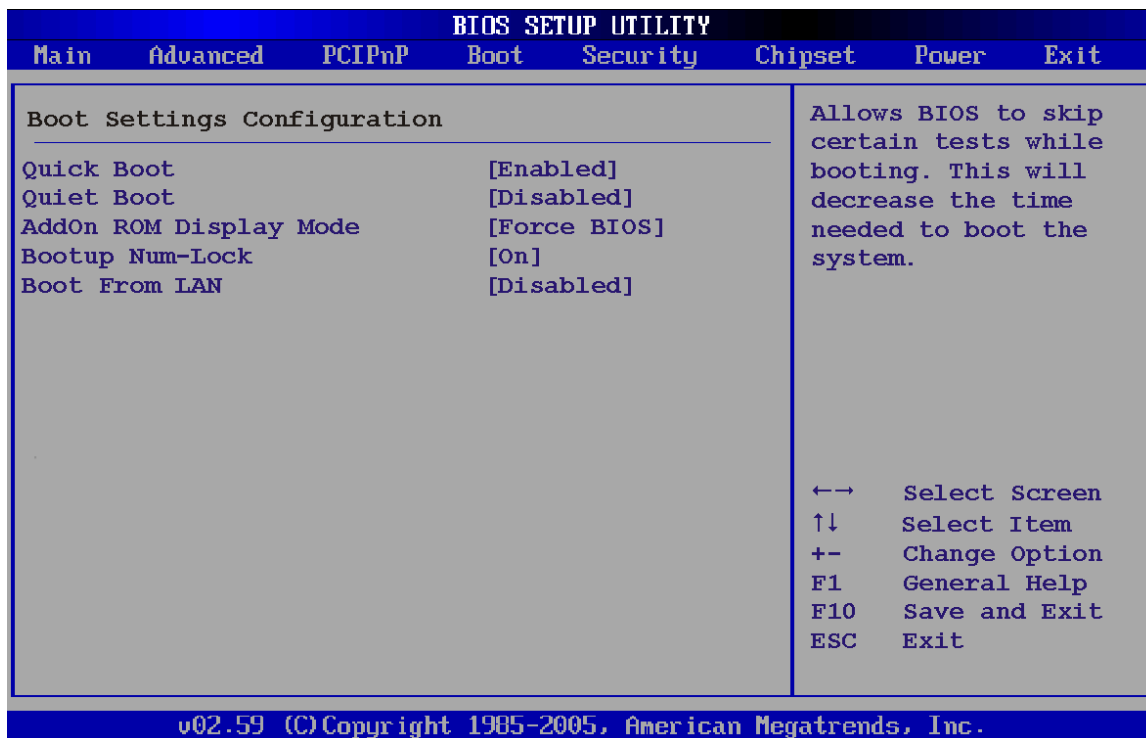

BIOS Menu 14: Boot Settings Configuration

- **Quick Boot [Enabled]**

Use the **Quick Boot** BIOS option to make the computer speed up the boot process.

- ➔ **Disabled** No POST procedures are skipped
- ➔ **Enabled** **DEFAULT** Some POST procedures are skipped to decrease the system boot time

- **Quiet Boot [Disabled]**

Use the **Quiet Boot** BIOS option to select the screen display when the system boots.

- ➔ **Disabled** **DEFAULT** Normal POST messages displayed



KINO-945GSE Motherboard

➔ **Enabled** OEM Logo displayed instead of POST messages

▪ **AddOn ROM Display Mode [Force BIOS]**

The **AddOn ROM Display Mode** option allows add-on ROM (read-only memory) messages to be displayed.

➔ **Force BIOS** **DEFAULT** Allows the computer system to force a third party BIOS to display during system boot.

➔ **Keep Current** Allows the computer system to display the information during system boot.

▪ **Bootup Num-Lock [Off]**

The **Bootup Num-Lock** BIOS option allows the Number Lock setting to be modified during boot up.


➔ **Off** **DEFAULT** Does not enable the keyboard Number Lock automatically. To use the 10-keys on the keyboard, press the Number Lock key located on the upper left-hand corner of the 10-key pad. The Number Lock LED on the keyboard lights up when the Number Lock is engaged.

➔ **On** Allows the Number Lock on the keyboard to be enabled automatically when the computer system boots up. This allows the immediate use of the 10-key numeric keypad located on the right side of the keyboard. To confirm this, the Number Lock LED light on the keyboard is lit.

▪ **Boot From LAN Support [Disabled]**

The **BOOT From LAN Support** option enables the system to be booted from a remote system.

➔ **Disabled** **DEFAULT** Cannot be booted from a remote system through the LAN

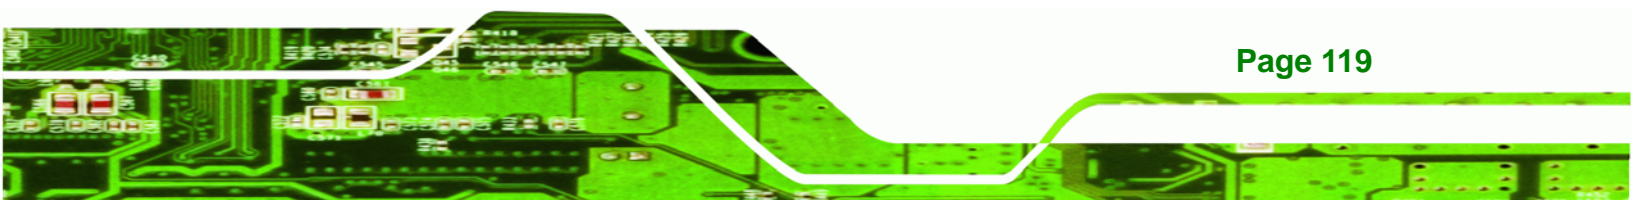


➔ **Enabled** **DEFAULT** Can be booted from a remote system through the LAN

6.5.2 Boot Device Priority

Use the **Boot Device Priority** menu (BIOS Menu 15) to specify the boot sequence from the available devices. The following options are available:

- 1st Boot Device
- 2nd Boot Device
- 3rd Boot Device

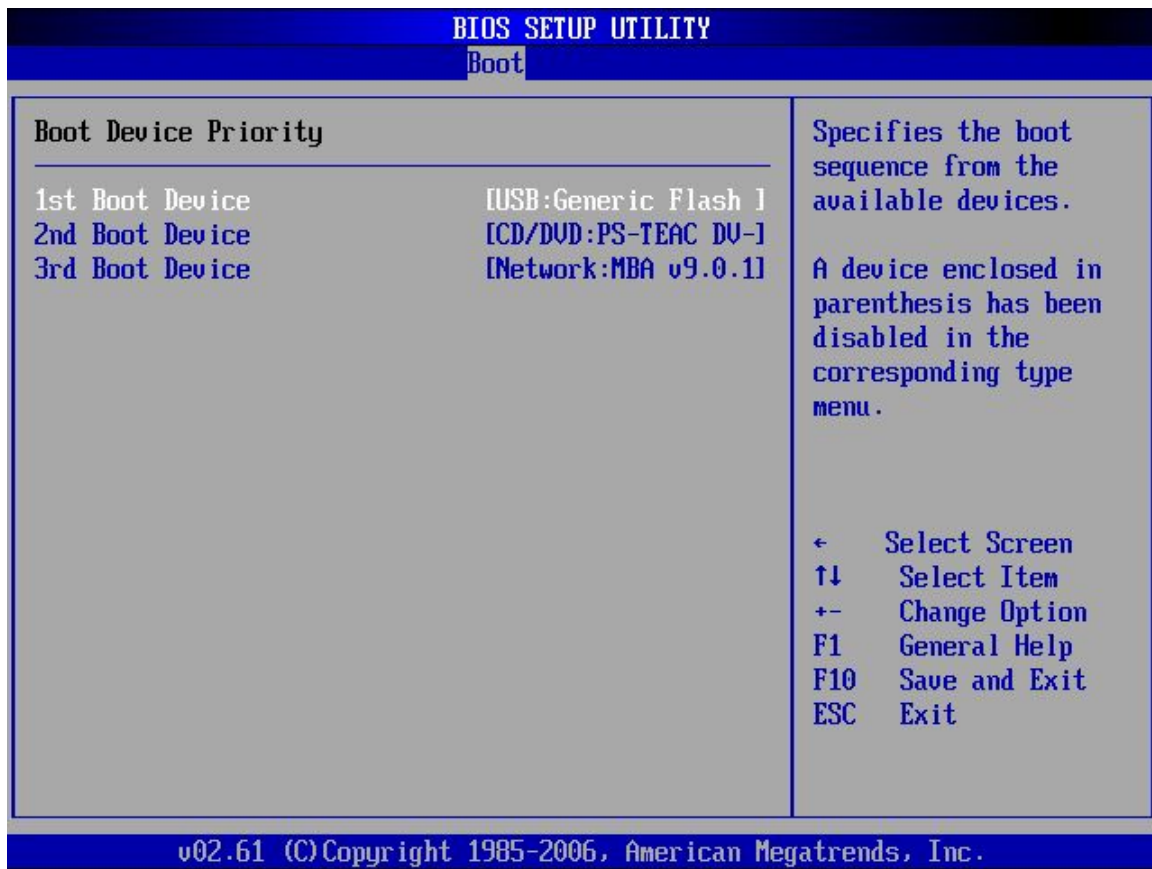


BIOS Menu 15: Boot Device Priority Settings

6.6 Security

Use the Security menu (BIOS Menu 16) to set system and user passwords.



KINO-945GSE Motherboard

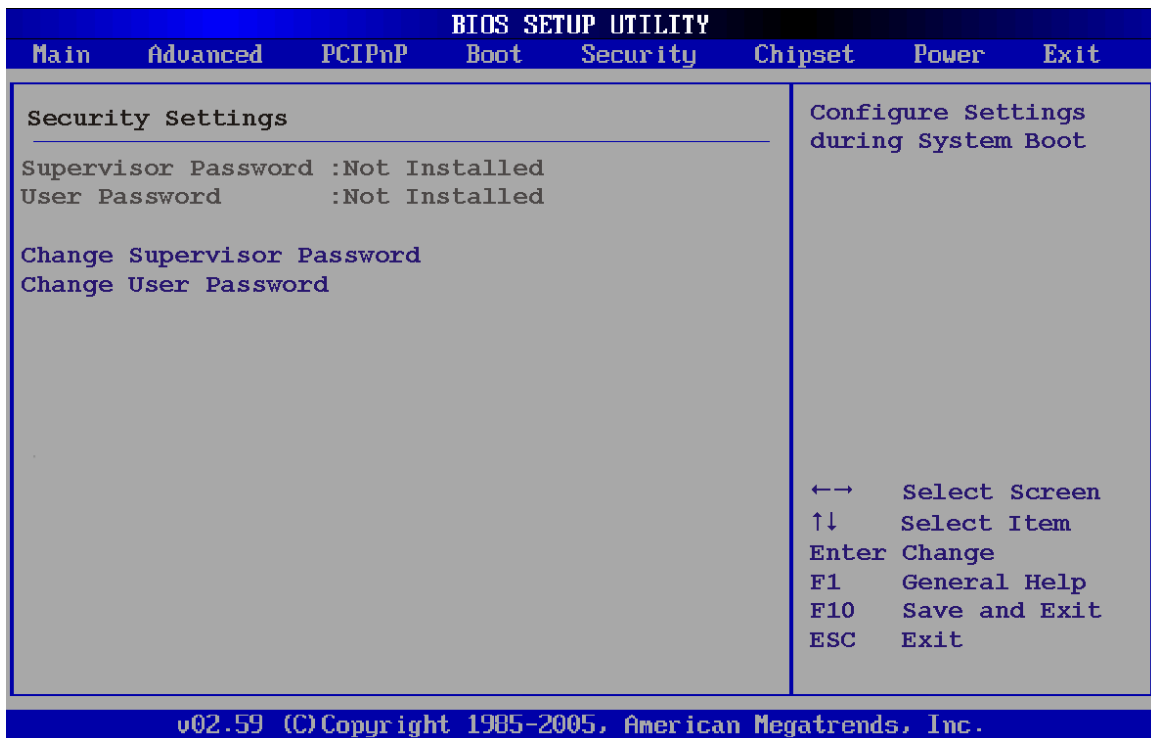

BIOS Menu 16: Security

- **Change Supervisor Password**

Use the **Change Supervisor Password** to set or change a supervisor password. The default for this option is **Not Installed**. If a supervisor password must be installed, select this field and enter the password. After the password has been added, **Install** appears next to **Change Supervisor Password**.

- **Change User Password**


Use the **Change User Password** to set or change a user password. The default for this option is **Not Installed**. If a user password must be installed, select this field and enter the password. After the password has been added, **Install** appears next to **Change User Password**.

6.7 Chipset

Use the **Chipset** menu (BIOS Menu 17) to access the Northbridge and Southbridge configuration menus

**WARNING!**


Setting the wrong values for the Chipset BIOS selections in the Chipset BIOS menu may cause the system to malfunction.

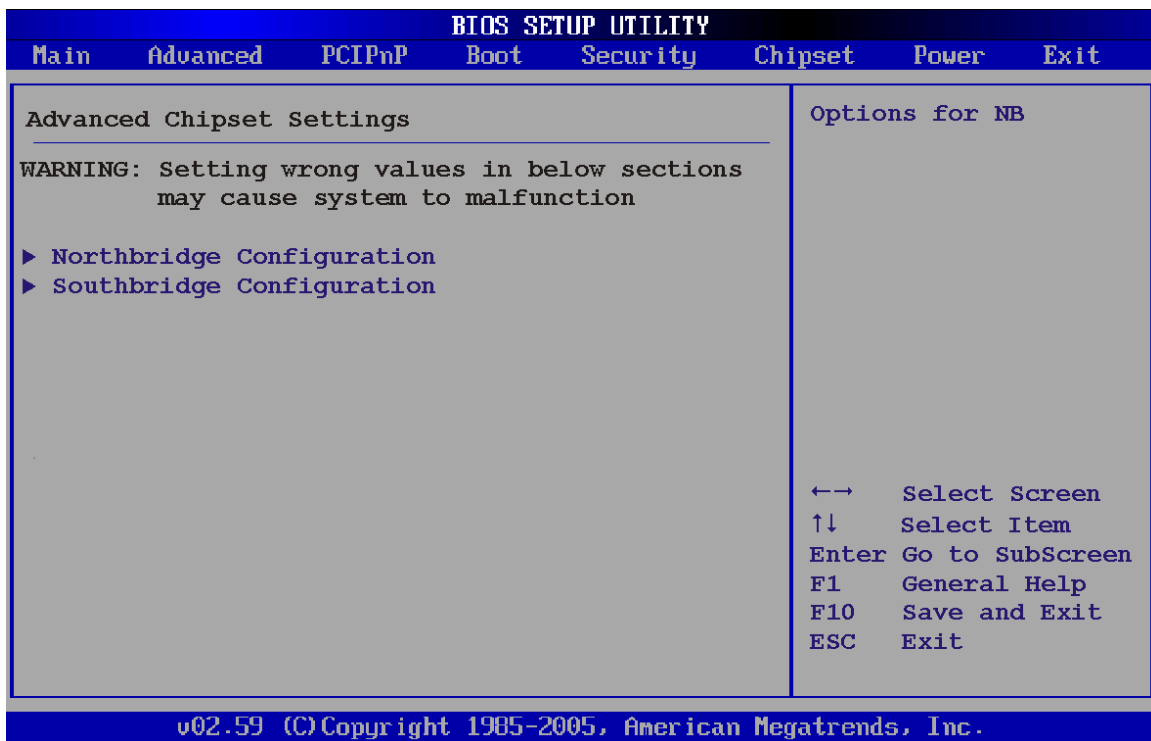

BIOS Menu 17: Chipset

6.7.1 Northbridge Chipset Configuration

Use the **Northbridge Chipset Configuration** menu (BIOS Menu 17) to configure the Northbridge chipset settings.

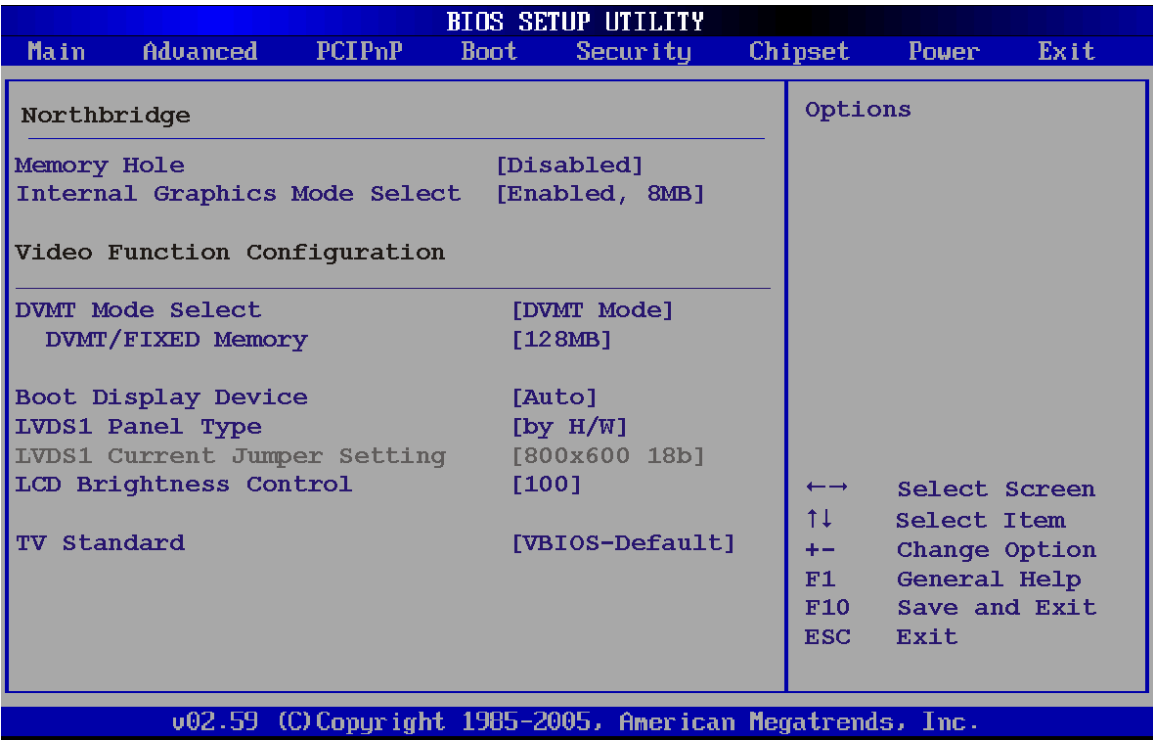

BIOS Menu 18: Northbridge Chipset Configuration

▪ **Memory Hole [Disabled]**

The **Memory Hole** reserves the memory space between 15 MB and 16 MB for ISA expansion cards that require a specified area of memory to work properly. If an older ISA expansion card is used, please refer to the documentation that came with the card to see if it is necessary to reserve the space.

- ➔ **Disabled** **DEFAULT** Memory is not reserved for ISA expansion cards
- ➔ **Enabled** Memory is reserved for ISA expansion cards

▪ Internal Graphics Mode Select [Enable, 8 MB]

The **Internal Graphic Mode Select** option determines the amount of system memory that can be used by the Internal graphics device.

- ➔ **Disable**
- ➔ **Enable, 1 MB** 1 MB of memory used by internal graphics device
- ➔ **Enable, 8 MB** **DEFAULT** 8 MB of memory used by internal graphics device

▪ DVMT Mode Select [DVMT Mode]


Use the **DVMT Mode Select** option to select the Intel Dynamic Video Memory Technology (DVMT) operating mode.

- ➔ **Fixed Mode** A fixed portion of graphics memory is reserved as graphics memory.
- ➔ **DVMT Mode** **DEFAULT** Graphics memory is dynamically allocated according to the system and graphics needs.
- ➔ **Combo Mode** A fixed portion of graphics memory is reserved as graphics memory. If more memory is needed, graphics memory is dynamically allocated according to the system and graphics needs.

▪ DVMT/FIXED Memory

Use the **DVMT/FIXED Memory** option to specify the maximum amount of memory that can be allocated as graphics memory. This option can only be configured for if **DVMT Mode** or **Fixed Mode** is selected in the **DVMT Mode Select** option. If **Combo Mode** is selected, the maximum amount of graphics memory is 128 MB. Configuration options are listed below.

- 64 MB
- 128 MB **DEFAULT**
- Maximum DVMT

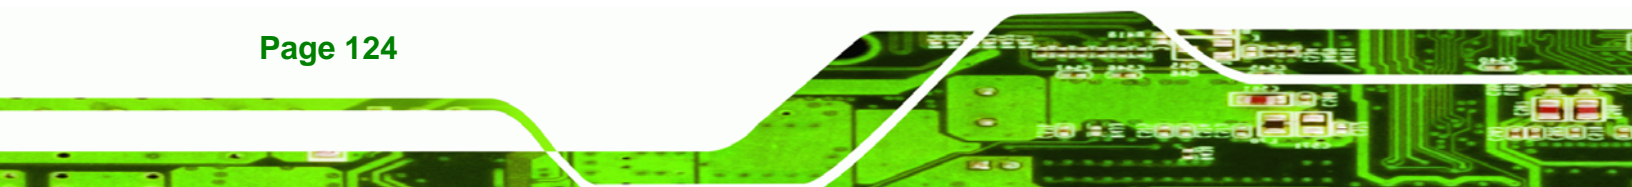

KINO-945GSE Motherboard

▪ **Boot Display Device [Auto]**

The **Boot Display Device** BIOS option selects the display device the system uses when it boots. The available options are listed below:

- Auto **DEFAULT**
- CRT
- TV
- EFP
- LFP

▪ **LVDS1 Panel Type**

Use the **LVDS Panel Type** to determine the LCD panel resolution. Configuration options are listed below:

- 640 x 480 18-bit
- 800 x 480 18-bit
- 800 x 600 18-bit
- 1024 x 768 18-bit
- 1280 x 1024 36-bit
- 1400 x 1050 36-bit
- 1440 x 900 36-bit
- 1600 x 1200 36-bit
- by H/W Default


▪ **LCD Brightness Control**

Use the **LCD Brightness Control** option to specify the brightness of the LCD panel as a percentage. Default setting is 100%

▪ **TV Standard**

The **TV Standard** option specifies the TV type connected to the system.


- VBIOS Default
- NTSC
- PAL

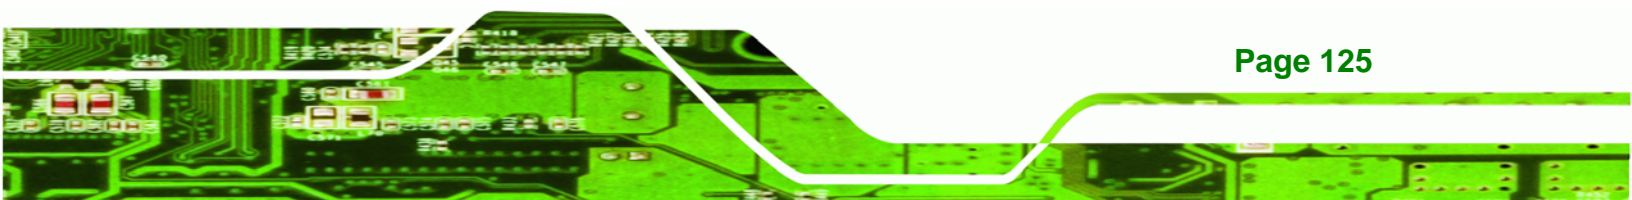

- SECAM
- SMPTE240M
- ITU-R television
- SMPTE295M
- SMPTE296M
- EIA-770.2
- EIA-770.3

6.7.2 Southbridge Configuration


The **Southbridge Configuration** menu (BIOS Menu 19) allows the Southbridge chipset to be configured.

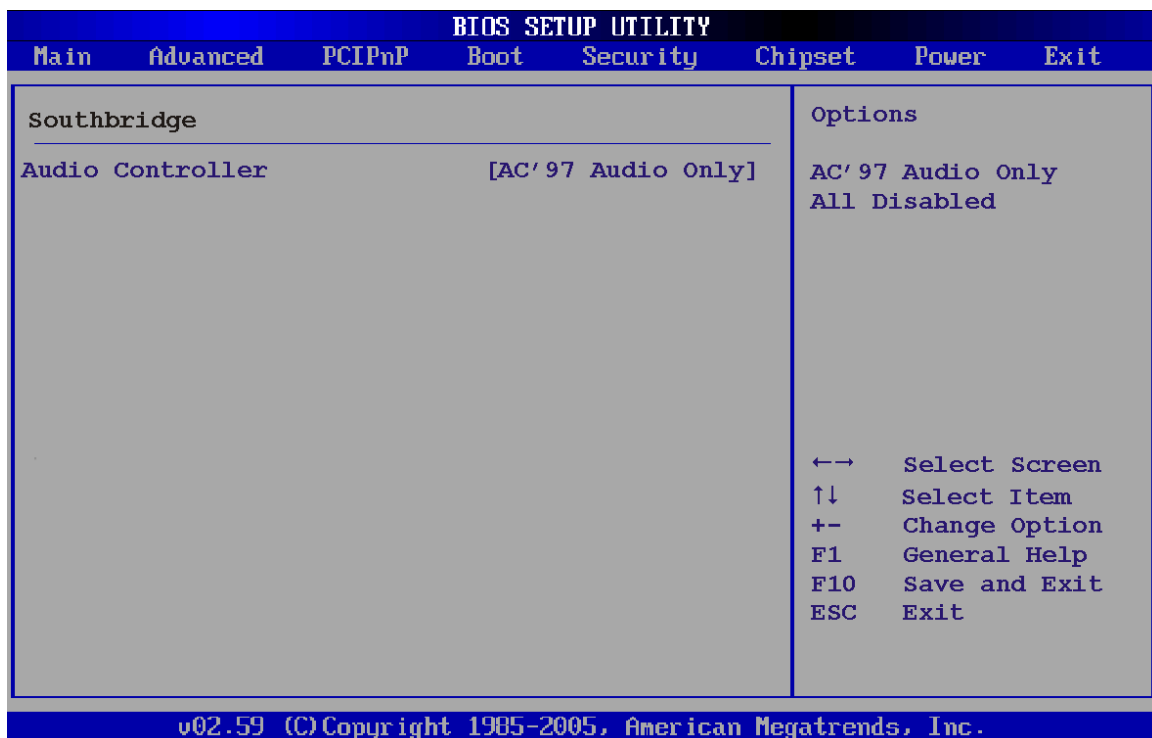

BIOS Menu 19: Southbridge Chipset Configuration

- **Audio Controller [All Disabled]**

The **Audio Controller** option enables or disables the audio controller.

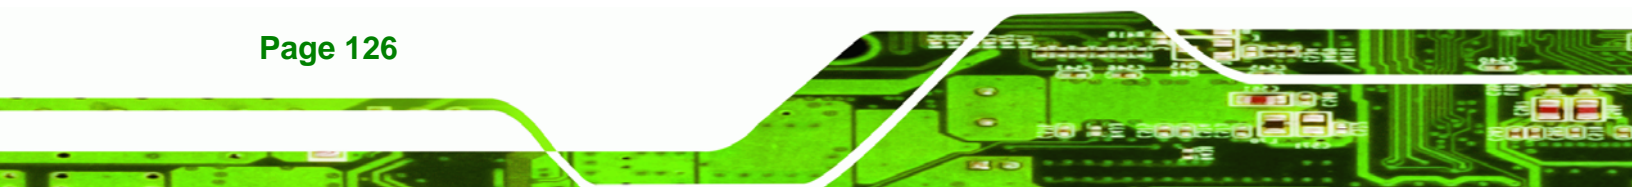


KINO-945GSE Motherboard

- ➔
- AC'97 Audio Only
- DEFAULT
- The on-board AC'97 audio controller is enabled.
- ➔
- All Disabled
-
- The on-board audio controller is disabled.

6.8 Exit

Use the **Exit** menu (BIOS Menu 20) to load default BIOS values, optimal failsafe values and to save configuration changes.

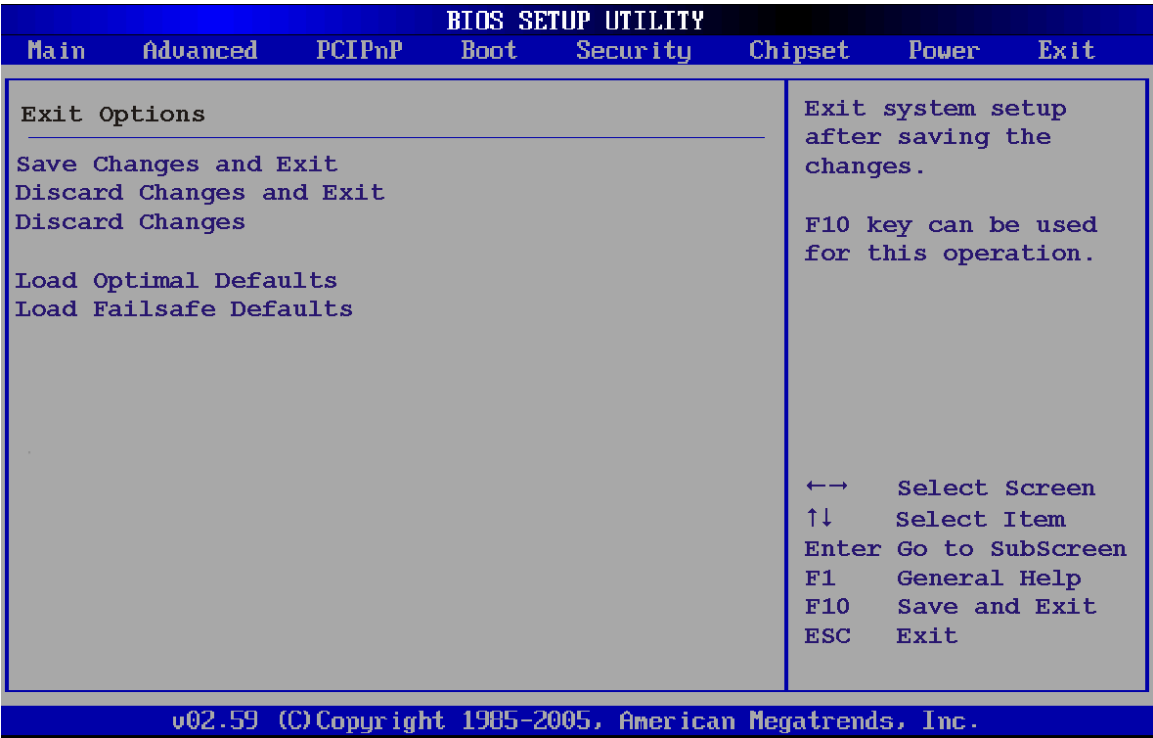

BIOS Menu 20: Exit

▪ Save Changes and Exit

Use the **Save Changes and Exit** option to save the changes made to the BIOS options and to exit the BIOS configuration setup program.

▪ Discard Changes and Exit

Use the **Discard Changes and Exit** option to exit the BIOS configuration setup program without saving the changes made to the system.

- **Discard Changes**

Use the **Discard Changes** option to discard the changes and remain in the BIOS configuration setup program.

- **Load Optimal Defaults**

Use the **Load Optimal Defaults** option to load the optimal default values for each of the parameters on the Setup menus. **F9 key can be used for this operation.**

- **Load Failsafe Defaults**


Use the **Load Failsafe Defaults** option to load failsafe default values for each of the parameters on the Setup menus. **F8 key can be used for this operation.**



Chapter

7

Software Installation

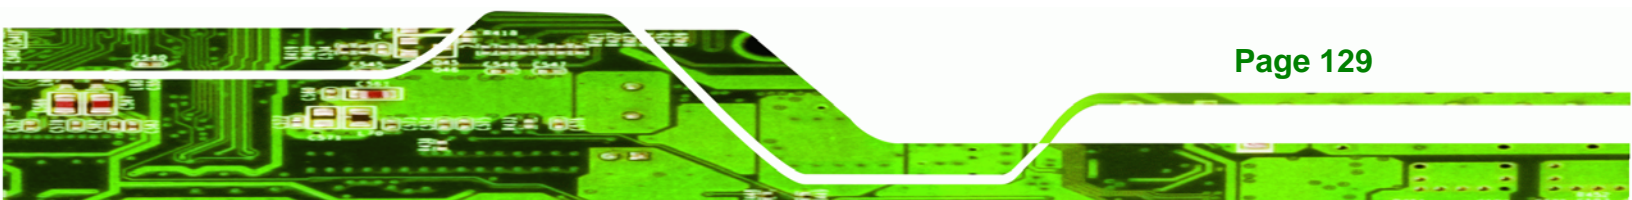

7.1 Available Software Drivers



NOTE:

The content of the CD may vary throughout the life cycle of the product and is subject to change without prior notice. Visit the our website or contact technical support for the latest updates.

The following drivers can be installed on the system:

- Chipset
- VGA
- LAN
- Audio

Installation instructions are given below.

7.2 Starting the Driver Program

To access the driver installation programs, please do the following.

Step 1: Insert the CD-ROM that came with the system into a CD-ROM drive attached to the system.

Step 2: Locate the directory for the KINO-945GSE.

7.3 Chipset Driver Installation

To install the chipset driver, please do the following.

Step 3: Access the Drivers directory

Step 4: Select the **Chipset Driver**

Step 5: When the setup files are completely extracted the **Welcome Screen** in Figure 7-1 appears.

KINO-945GSE Motherboard



Figure 7-1: Chipset Driver Welcome Screen

Step 6: Click **Next** to continue.

Step 7: The license agreement in Figure 7-2 appears.



Figure 7-2: Chipset Driver License Agreement

Step 8: Read the **License Agreement**.

Step 9: Click the **YES** button to accept the license agreement and continue.

Step 10: The Read Me file in Figure 7-3 appears.



Figure 7-3: Chipset Driver Read Me File

Step 11: Click **NEXT** to continue.

Step 12: **Setup Operations** are performed as shown in Figure 7-4.

KINO-945GSE Motherboard

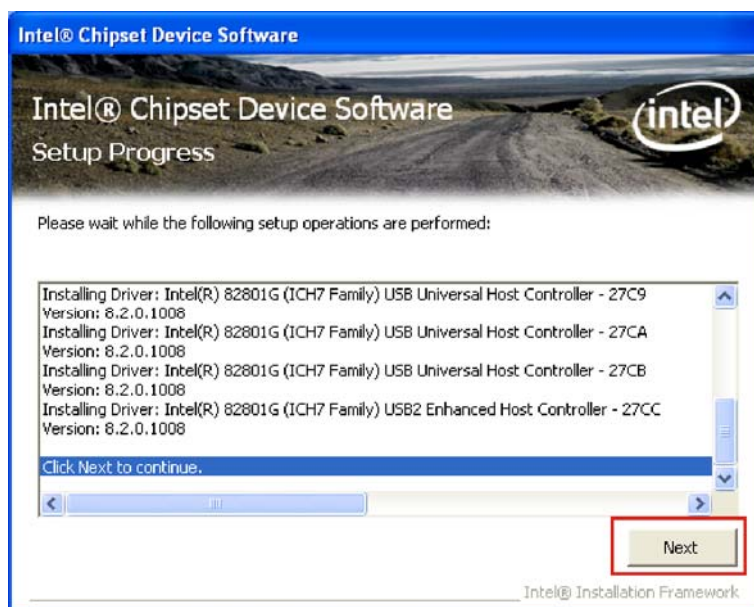


Figure 7-4: Chipset Driver Setup Operations

Step 13: Once the **Setup Operations** are complete, click the **NEXT** icon to continue.

Step 14: The **Finish** screen appears.



Figure 7-5: Chipset Driver Installation Finish Screen

Step 15: Select “Yes, I want to restart the computer now” and click the **Finish** icon.

See Figure 7-5.

7.4 VGA Driver Installation

To install the VGA driver, please do the following.

Step 16: Access the Drivers directory

Step 17: Select the **VGA driver**

Step 18: The VGA Read Me file in Figure 7-6 appears.

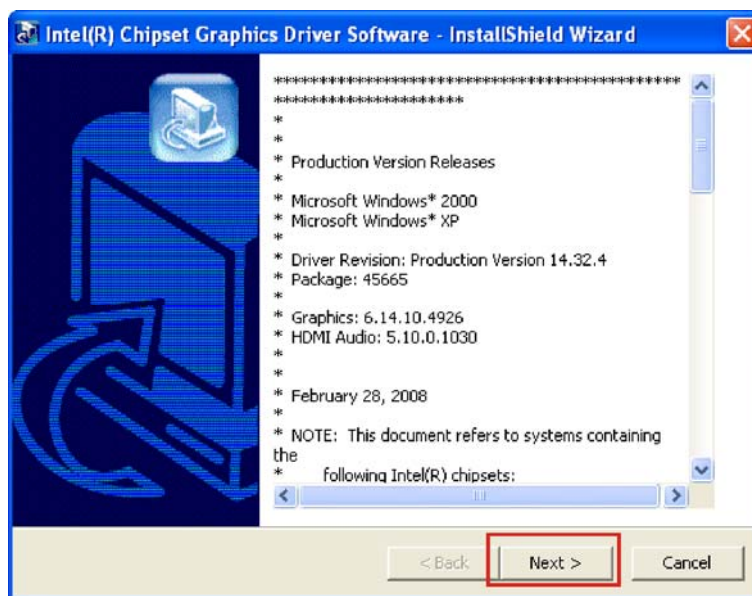


Figure 7-6: VGA Driver Read Me File

Step 19: Click **NEXT** to continue.

Step 20: The installation files are extracted. See Figure 7-7.

KINO-945GSE Motherboard

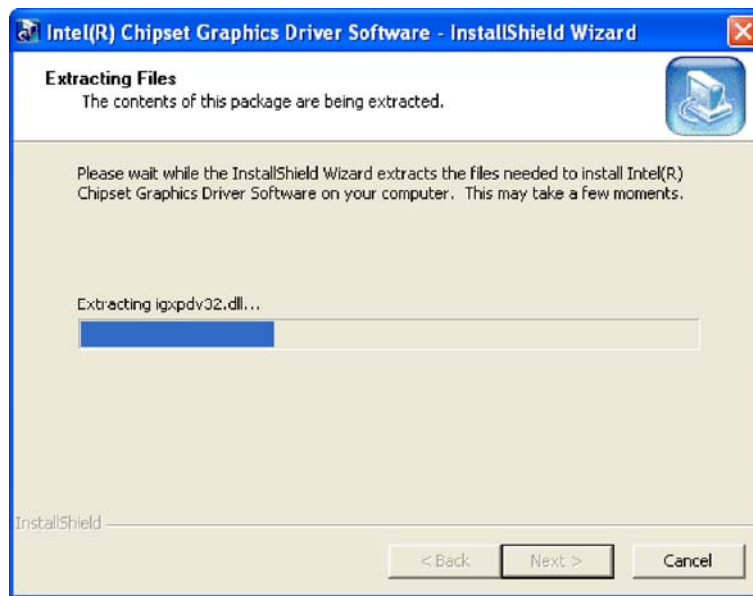


Figure 7-7: VGA Driver Setup Files Extracted

Step 21: The **Welcome Screen** in Figure 7-8 appears.



Figure 7-8: VGA Driver Welcome Screen

Step 22: Click **NEXT** to continue.

Step 23: The license agreement in Figure 7-9 appears.

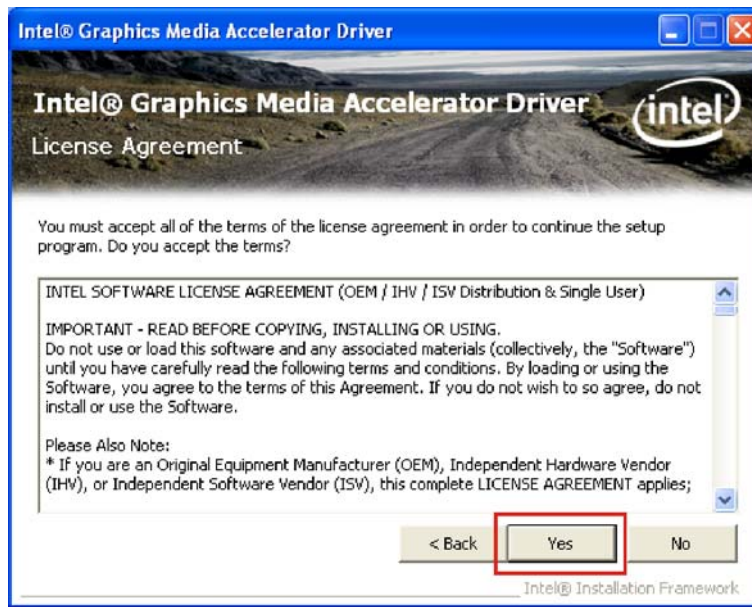


Figure 7-9: VGA Driver License Agreement

Step 24: Read the License Agreement.

Step 25: Click **YES** to accept the license agreement and continue.

Step 26: The Readme file in Figure 7-10 appears.

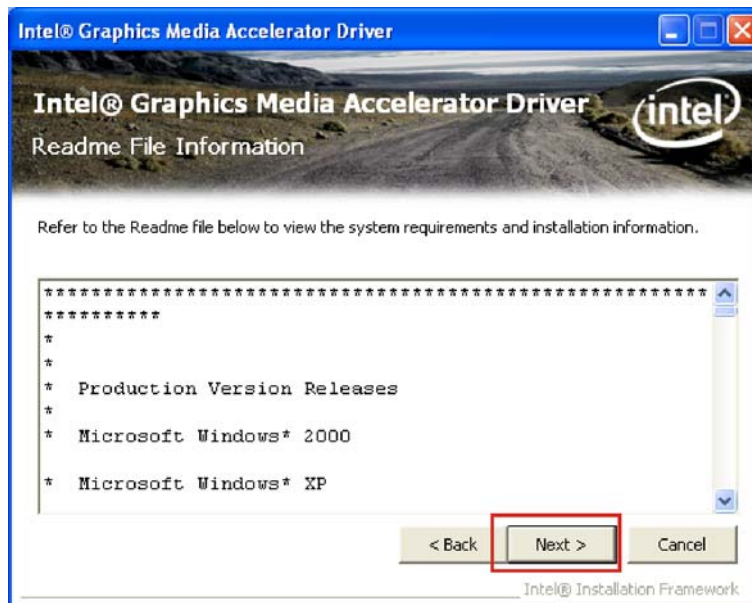


Figure 7-10: VGA Driver Read Me File

KINO-945GSE Motherboard

Step 27: Click **NEXT** to continue.

Step 28: **Setup Operations** are performed as shown in Figure 7-11.



NOTE:

The “Found New Hardware Wizard” will appear and then disappear during this step. Do not adjust any settings in the “Found New Hardware Wizard” window.

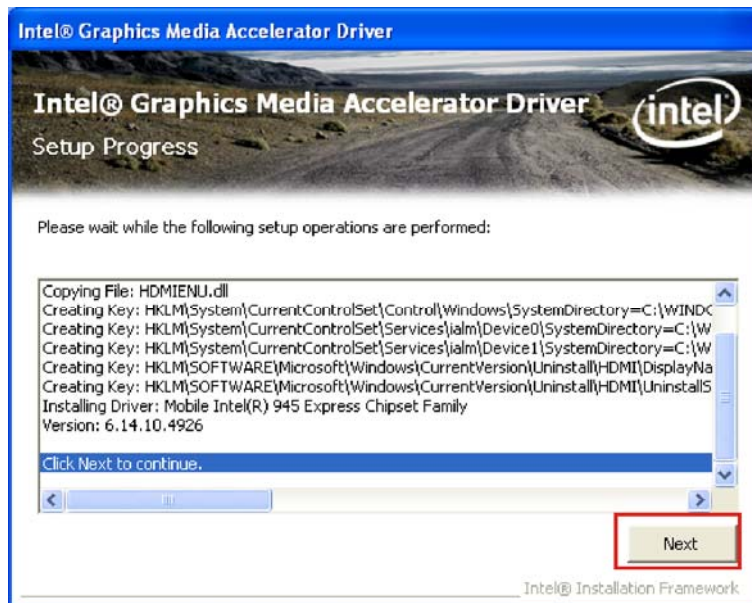


Figure 7-11: VGA Driver Setup Operations

Step 29: Once the **Setup Operations** are complete, click **NEXT** to continue.

Step 30: The **Finish** screen appears.

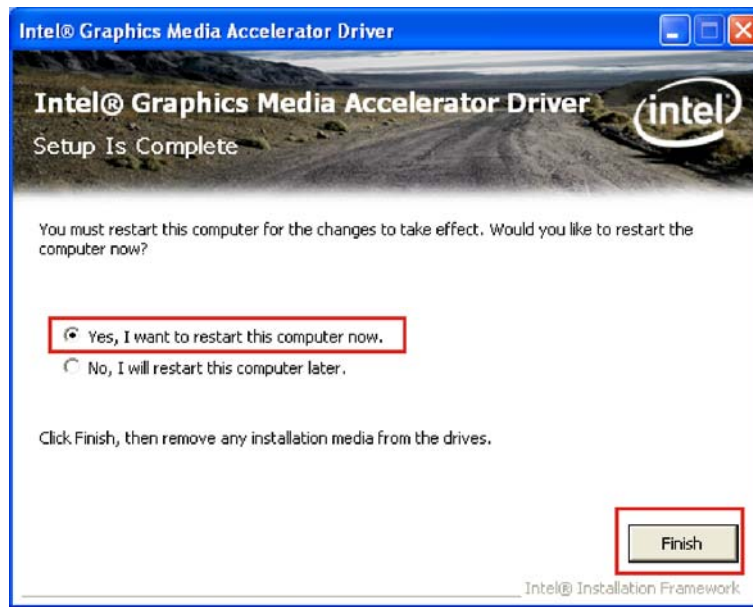


Figure 7-12: VGA Driver Installation Finish Screen

Step 31: Select “Yes, I want to restart the computer now” and click **FINISH**. See Figure 7-12.

7.5 LAN Driver Installation

To install the chipset driver, please do the following.

Step 32: Access the Drivers directory

Step 33: Select the **LAN driver**

Step 34: The **Welcome** screen in Figure 7-13 appears.

KINO-945GSE Motherboard

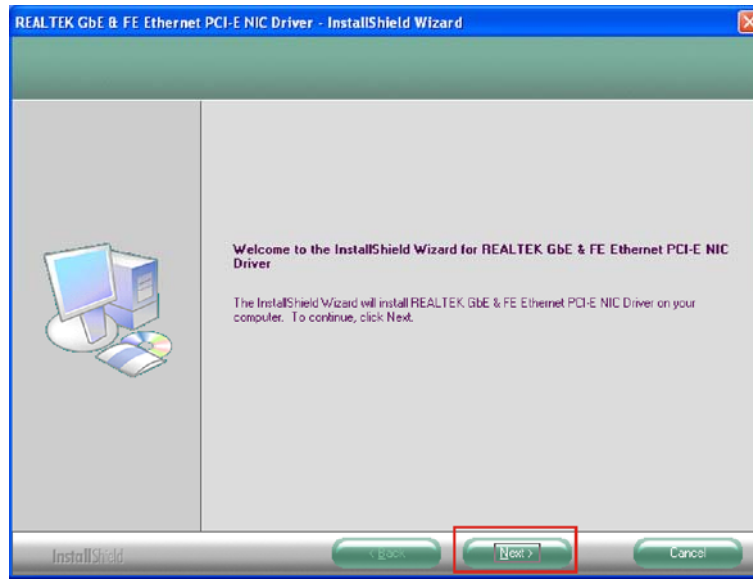


Figure 7-13: LAN Driver Welcome Screen

Step 35: Click **NEXT** to continue.

Step 36: The **Ready to Install** screen in Figure 7-14 appears.

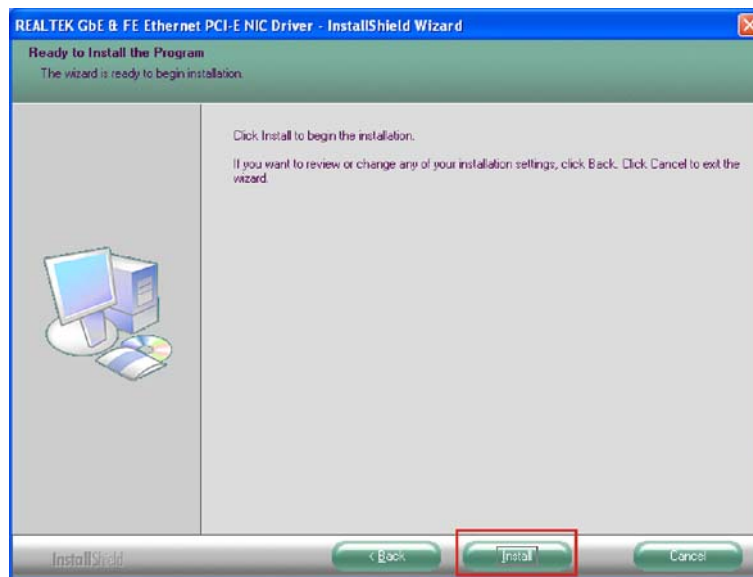


Figure 7-14: LAN Driver Welcome Screen

Step 37: Click **NEXT** to proceed with the installation.

Step 38: The program begins to install.

Step 39: The installation progress can be monitored in the progress bar shown in Figure 7-15.

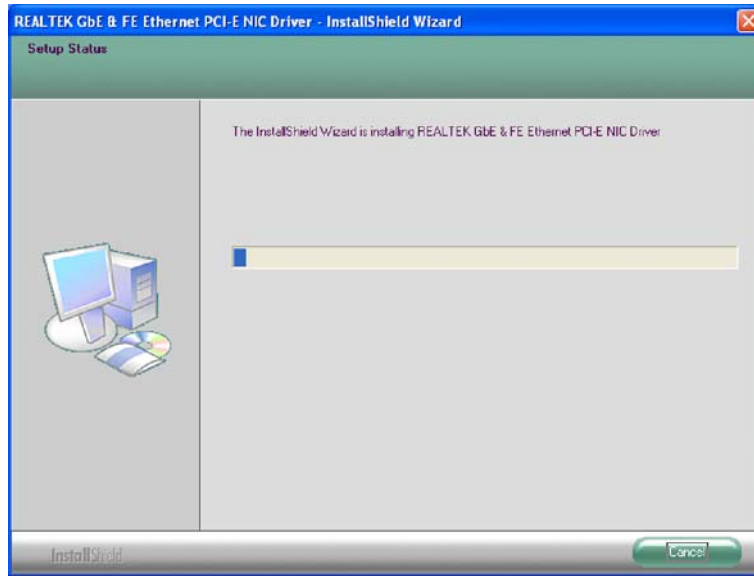


Figure 7-15: LAN Driver Installation

Step 40: When the driver installation is complete, the screen in Figure 7-16 appears.

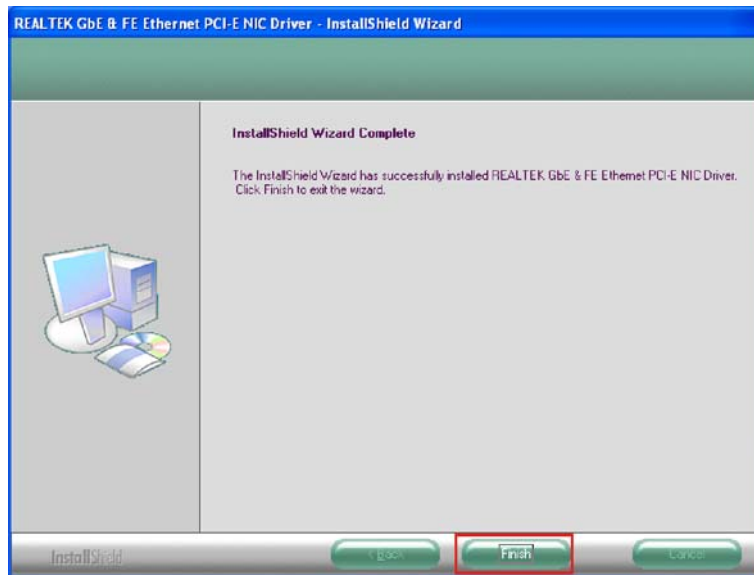


Figure 7-16: LAN Driver Installation Complete

Step 41: Click **FINISH** to exit the InstallShield Wizard (Figure 7-16).

7.6 Audio Driver Installation

To install the chipset driver, please do the following.

Step 42: Access the Drivers directory

Step 43: Select the **AC'97 Audio** driver

Step 44: Browse for “4-Audio\Windows\Windows 98Gold, 98se, Me, 2000, XP, 2003(32,64 bits)\A3.84” Double-click the installation file in Figure 7-17.

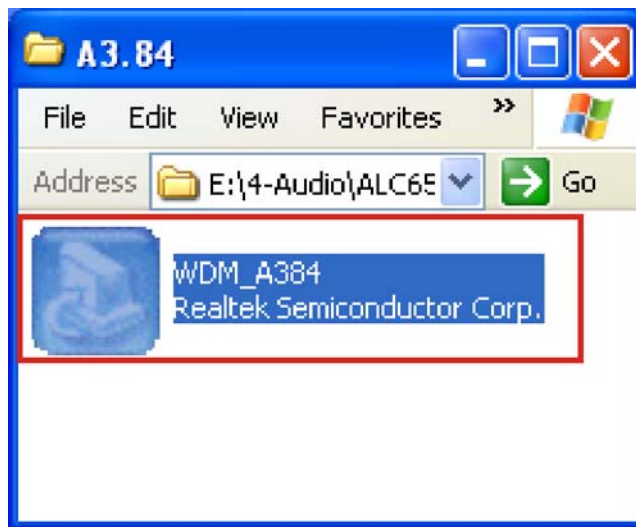


Figure 7-17: Audio Driver Options

Step 45: The AC'97 Driver Installation screen in Figure 7-18 appears.

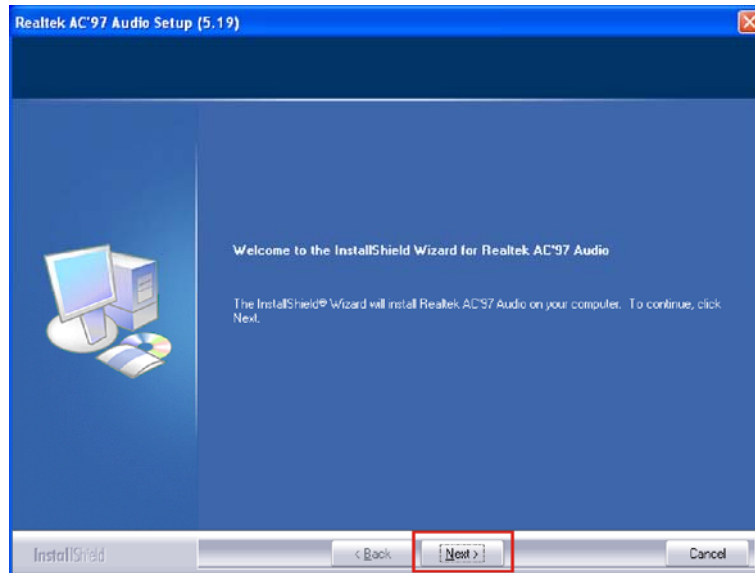


Figure 7-18: AC'97 Driver Installation Welcome Screen

Step 46: Click **NEXT** to continue.

Step 47: The Verification window in Figure 7-19 may appear.



Figure 7-19: AC'97 Driver Installation Verification

Step 48: Click **CONTINUE ANYWAY**.

KINO-945GSE Motherboard

Step 49: When the driver is installed, the driver installation finish screen in Figure 7-20 appears.

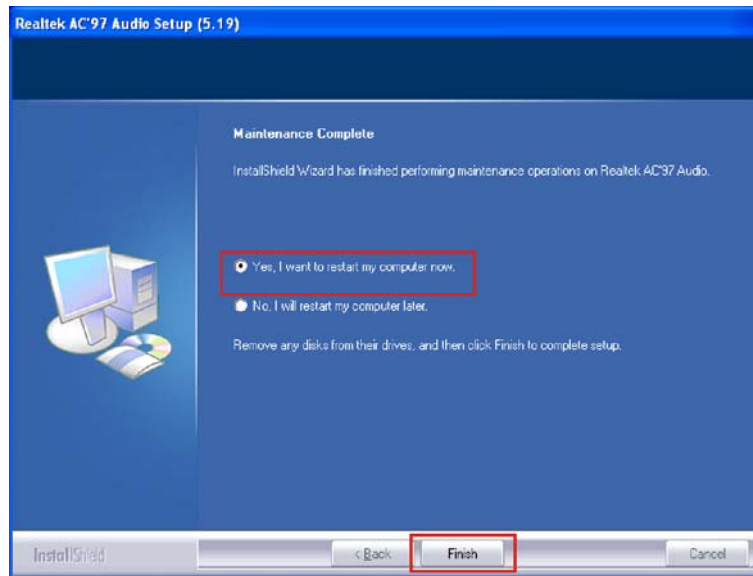


Figure 7-20: AC'97 Driver Installation Complete

Step 50: Select “Yes, I wish to restart my computer now” And click **FINISH** to exit the InstallShield Wizard and restart the computer.

Appendix

A

BIOS Options




KINO-945GSE Motherboard

Below is a list of BIOS configuration options in the BIOS chapter.


▪ System Overview	87
▪ System Time [xx:xx:xx]	88
▪ System Date [xx/xx/xx]	88
▪ ATA/IDE Configurations [Compatible]	91
▪ Legacy IDE Channels [PATA Pri, SATA Sec]	92
▪ IDE Master and IDE Slave	92
▪ Auto-Detected Drive Parameters	93
▪ Type [Auto]	94
▪ LBA/Large Mode [Auto]	95
▪ Block (Multi Sector Transfer) [Auto]	95
▪ PIO Mode [Auto]	95
▪ DMA Mode [Auto]	96
▪ S.M.A.R.T [Auto]	97
▪ 32Bit Data Transfer [Enabled]	97
▪ Serial Port1 Address [3F8/IRQ4]	98
▪ Serial Port1 Mode [Normal]	98
▪ Serial Port2 Address [2F8/IRQ3]	99
▪ Serial Port2 Mode [Normal]	99
▪ Serial Port3 Address [3E8]	99
▪ Serial Port 3 IRQ [11]	99
▪ Select RS232 or RS422/RS485 [RS232]	100
▪ Serial Port4 Address [2E8]	100
▪ Serial Port 4 IRQ [10]	100
▪ CPU FAN Mode Setting [Full On Mode]	101
▪ CPU Temp. Limit of OFF [000]	102
▪ CPU Temp. Limit of Start [020]	102
▪ CPU Fan Start PWM [070]	103
▪ Slope PWM [0.5 PWM]	103
▪ Select AT/ATX Power [ATX Power]	105
▪ Current Jumper Setting [ATX Power]	105
▪ Restore on AC Power Loss [Last State]	106
▪ Power Button Mode [On/Off]	107
▪ Resume on Keyboard/Mouse [Disabled]	107

▪ Resume on Ring [Disabled]	107
▪ Resume on PCI-Express WAKE# [Enabled]	107
▪ Resume On RTC Alarm [Disabled]	108
▪ Remote Access [Disabled]	109
▪ Serial Port Number [COM1]	110
▪ Base Address, IRQ [2F8h,3]	110
▪ Serial Port Mode [115200 8,n,1]	110
▪ Flow Control [None]	111
▪ Redirection After BIOS POST [Always]	111
▪ Terminal Type [ANSI]	111
▪ VT-UTF8 Combo Key Support [Disabled]	112
▪ Sredir Memory Display Delay [Disabled]	112
▪ USB Functions [Enabled]	113
▪ USB 2.0 Controller [Enabled]	113
▪ USB2.0 Controller Mode [HiSpeed]	114
▪ Legacy USB Support [Enabled]	114
▪ IRQ# [Available]	115
▪ DMA Channel# [Available]	116
▪ Reserved Memory Size [Disabled]	116
▪ Quick Boot [Enabled]	118
▪ Quiet Boot [Disabled]	118
▪ AddOn ROM Display Mode [Force BIOS]	119
▪ Bootup Num-Lock [Off]	119
▪ Boot From LAN Support [Disabled]	119
▪ Change Supervisor Password	121
▪ Change User Password	121
▪ Memory Hole [Disabled]	123
▪ Internal Graphics Mode Select [Enable, 8 MB]	124
▪ DVMT Mode Select [DVMT Mode]	124
▪ DVMT/FIXED Memory	124
▪ Boot Display Device [Auto]	125
▪ LVDS1 Panel Type	125
▪ LCD Brightness Control	125
▪ TV Standard	125
▪ Audio Controller [All Disabled]	126

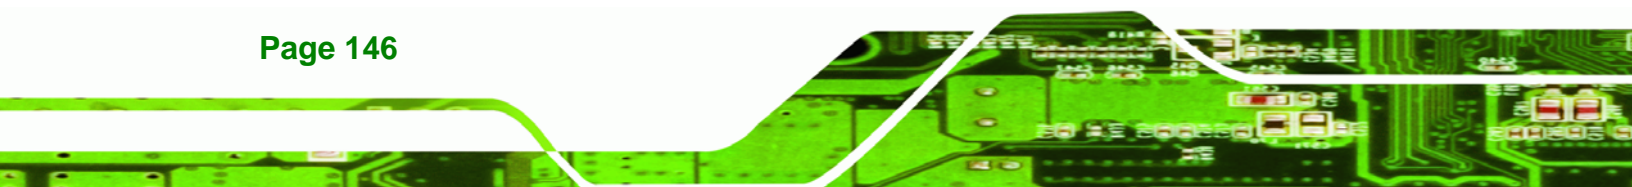

KINO-945GSE Motherboard

▪ Save Changes and Exit	127
▪ Discard Changes and Exit	127
▪ Discard Changes.....	128
▪ Load Optimal Defaults.....	128
▪ Load Failsafe Defaults.....	128

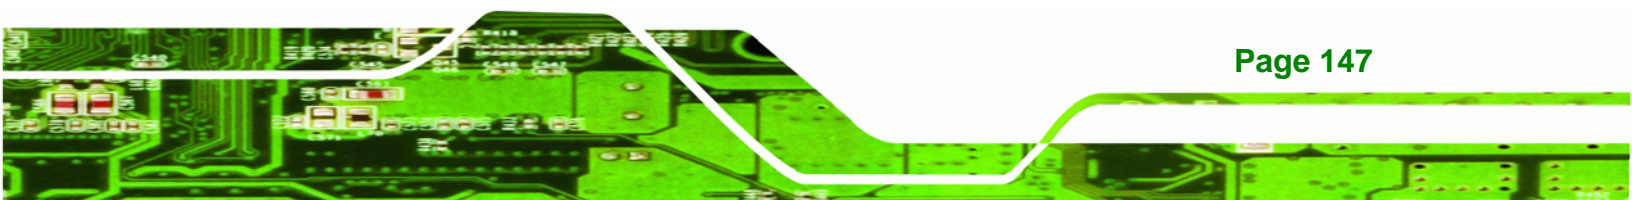

Appendix


B

Terminology




KINO-945GSE Motherboard

AC '97	Audio Codec 97 (AC'97) refers to a codec standard developed by Intel® in 1997.
ACPI	Advanced Configuration and Power Interface (ACPI) is an OS-directed configuration, power management, and thermal management interface.
AHCI	Advanced Host Controller Interface (AHCI) is a SATA Host controller register-level interface.
ATA	The Advanced Technology Attachment (ATA) interface connects storage devices including hard disks and CD-ROM drives to a computer.
ARMD	An ATAPI Removable Media Device (ARMD) is any ATAPI device that supports removable media, besides CD and DVD drives.
ASKIR	Amplitude Shift Keyed Infrared (ASKIR) is a form of modulation that represents a digital signal by varying the amplitude ("volume") of the signal. A low amplitude signal represents a binary 0, while a high amplitude signal represents a binary 1.
BIOS	The Basic Input/Output System (BIOS) is firmware that is first run when the computer is turned on and can be configured by the end user
CODEC	The Compressor-Decompressor (CODEC) encodes and decodes digital audio data on the system.
CompactFlash®	CompactFlash® is a solid-state storage device. CompactFlash® devices use flash memory in a standard size enclosure. Type II is thicker than Type I, but a Type II slot can support both types.
CMOS	Complimentary metal-oxide-conductor is an integrated circuit used in chips like static RAM and microprocessors.
COM	COM refers to serial ports. Serial ports offer serial communication to expansion devices. The serial port on a personal computer is usually a male DB-9 connector.
DAC	The Digital-to-Analog Converter (DAC) converts digital signals to analog signals.
DDR	Double Data Rate refers to a data bus transferring data on both the rising and falling edges of the clock signal.

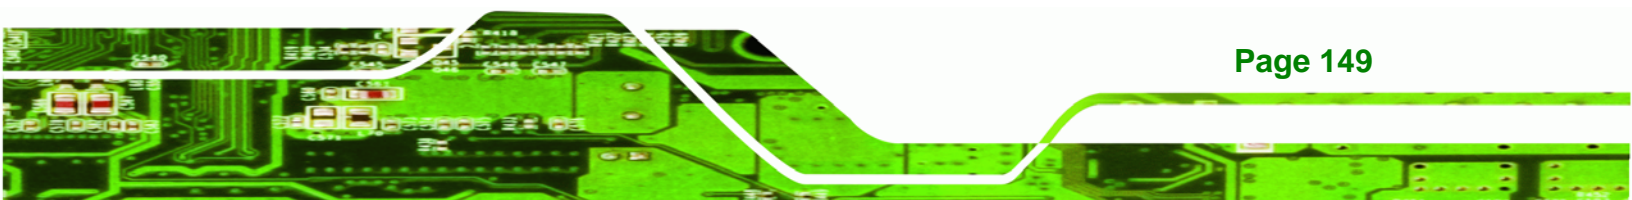


DMA	Direct Memory Access (DMA) enables some peripheral devices to bypass the system processor and communicate directly with the system memory.
DIMM	Dual Inline Memory Modules are a type of RAM that offer a 64-bit data bus and have separate electrical contacts on each side of the module.
DIO	The digital inputs and digital outputs are general control signals that control the on/off circuit of external devices or TTL devices. Data can be read or written to the selected address to enable the DIO functions.
EHCI	The Enhanced Host Controller Interface (EHCI) specification is a register-level interface description for USB 2.0 Host Controllers.
EIDE	Enhanced IDE (EIDE) is a newer IDE interface standard that has data transfer rates between 4.0 MB/s and 16.6 MB/s.
EIST	Enhanced Intel® SpeedStep Technology (EIST) allows users to modify the power consumption levels and processor performance through application software. The application software changes the bus-to-core frequency ratio and the processor core voltage.
FSB	The Front Side Bus (FSB) is the bi-directional communication channel between the processor and the Northbridge chipset.
GbE	Gigabit Ethernet (GbE) is an Ethernet version that transfers data at 1.0 Gb/s and complies with the IEEE 802.3-2005 standard.
GPIO	General purpose input
HDD	Hard disk drive (HDD) is a type of magnetic, non-volatile computer storage device that stores digitally encoded data.
ICH	The Input/Output Control Hub (ICH) is an Intel® Southbridge chipset.
IrDA	Infrared Data Association (IrDA) specify infrared data transmission protocols used to enable electronic devices to wirelessly communicate with each other.
L1 Cache	The Level 1 Cache (L1 Cache) is a small memory cache built into the system processor.
L2 Cache	The Level 2 Cache (L2 Cache) is an external processor memory cache.

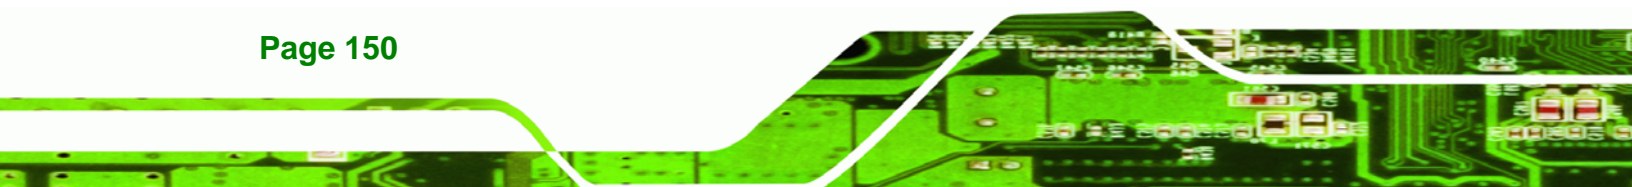

KINO-945GSE Motherboard

LCD	Liquid crystal display (LCD) is a flat, low-power display device that consists of two polarizing plates with a liquid crystal panel in between.
LVDS	Low-voltage differential signaling (LVDS) is a dual-wire, high-speed differential electrical signaling system commonly used to connect LCD displays to a computer.
POST	The Power-on Self Test (POST) is the pre-boot actions the system performs when the system is turned-on.
RAM	Random Access Memory (RAM) is volatile memory that loses data when power is lost. RAM has very fast data transfer rates compared to other storage like hard drives.
SATA	Serial ATA (SATA) is a serial communications bus designed for data transfers between storage devices and the computer chipsets. The SATA bus has transfer speeds up to 1.5 Gb/s and the SATA II bus has data transfer speeds of up to 3.0 Gb/s.
S.M.A.R.T	Self Monitoring Analysis and Reporting Technology (S.M.A.R.T) refers to automatic status checking technology implemented on hard disk drives.
UART	Universal Asynchronous Receiver-transmitter (UART) is responsible for asynchronous communications on the system and manages the system's serial communication (COM) ports.
UHCI	The Universal Host Controller Interface (UHCI) specification is a register-level interface description for USB 1.1 Host Controllers.
USB	The Universal Serial Bus (USB) is an external bus standard for interfacing devices. USB 1.1 supports 12 Mb/s data transfer rates and USB 2.0 supports 480 Mb/s data transfer rates.
VGA	The Video Graphics Array (VGA) is a graphics display system developed by IBM.

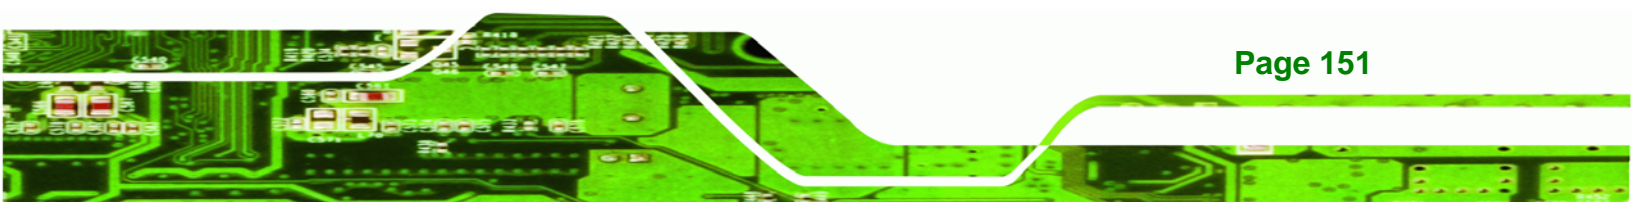

Appendix

C

Digital I/O Interface



C.1 Introduction

The DIO connector on the KINO-945GSE is interfaced to GPIO ports on the Super I/O chipset. The DIO has both 4-bit digital inputs and 4-bit digital outputs. The digital inputs and digital outputs are generally control signals that control the on/off circuit of external devices or TTL devices. Data can be read or written to the selected address to enable the DIO functions.



NOTE:

For further information, please refer to the datasheet for the Super I/O chipset.

C.2 DIO Connector Pinouts

The following table describes how the DIO connector pins are connected to the Digital I/O port.

Pin	Description	Super I/O Pin	Super I/O Pin Description
1	Ground	N/A	N/A
2	VCC	N/A	N/A
3	Output 3	24	General Purpose I/O 23
4	Output 2	25	General Purpose I/O 22
5	Output 1	26	General Purpose I/O 21
6	Output 0	27	General Purpose I/O 20
7	Input 3	16	General Purpose I/O 33
8	Input 2	17	General Purpose I/O 32
9	Input 1	18	General Purpose I/O 31
10	Input 0	19	General Purpose I/O 30

Table C-1: Digital I/O Connector Pinouts

C.3 Assembly Language Samples

C.3.1 Enable the DIO Input Function

The BIOS interrupt call INT 15H controls the digital I/O. An assembly program to enable digital I/O input functions is listed below.

MOV	AX, 6F08H	Sets the digital port as input
INT	15H	Initiates the INT 15H BIOS call

C.3.2 Enable the DIO Output Function

The BIOS interrupt call INT 15H controls the digital I/O. An assembly program to enable digital I/O output functions is listed below.


MOV	AX, 6F09H	Sets the digital port as output
MOV	BL, 09H	
INT	15H	Initiates the INT 15H BIOS call



Appendix

D

Watchdog Timer

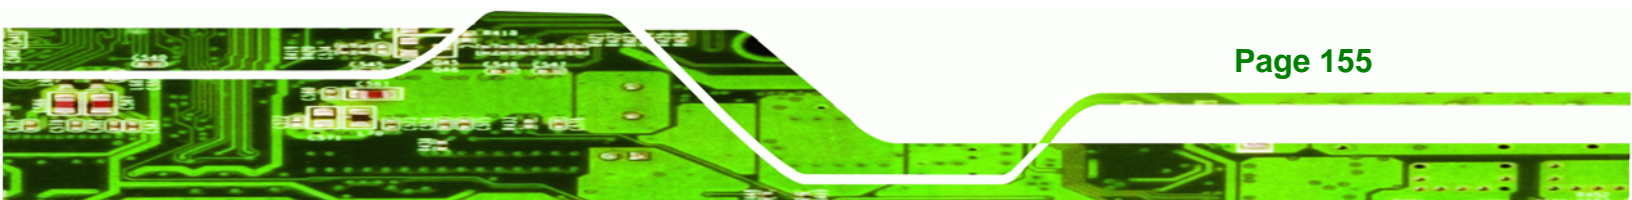

**NOTE:**

The following discussion applies to DOS environment. Contact your support representative for specific drivers for more sophisticated operating systems, e.g., Windows and Linux.

The Watchdog Timer is provided to ensure that standalone systems can always recover from catastrophic conditions that cause the CPU to crash. This condition may have occurred by external EMIs or a software bug. When the CPU stops working correctly, Watchdog Timer either performs a hardware reset (cold boot) or a Non-Maskable Interrupt (NMI) to bring the system back to a known state.

A BIOS function call (INT 15H) is used to control the Watchdog Timer.

INT 15H:

AH – 6FH Sub-function:	
AL – 2:	Sets the Watchdog Timer's period.
BL:	Time-out value (Its unit-second is dependent on the item "Watchdog Timer unit select" in CMOS setup).

Table D-1: AH-6FH Sub-function

Call sub-function 2 to set the time-out period of Watchdog Timer first. If the time-out value is not zero, the Watchdog Timer starts counting down. When the timer value reaches zero, the system resets. To ensure that this reset condition does not occur, calling sub-function 2 must periodically refresh the Watchdog Timer. However, the watchdog timer is disabled if the time-out value is set to zero.

A tolerance of at least 10% must be maintained to avoid unknown routines within the operating system (DOS), such as disk I/O that can be very time-consuming.



NOTE:

When exiting a program it is necessary to disable the Watchdog Timer, otherwise the system resets.

EXAMPLE PROGRAM:

; INITIAL TIMER PERIOD COUNTER

;

W_LOOP:

;

```
MOV      AX, 6F02H      ;setting the time-out value
MOV      BL, 30          ;time-out value is 48 seconds
INT      15H
```

;

; ADD THE APPLICATION PROGRAM HERE

;

```
CMP      EXIT_AP, 1      ;is the application over?
JNE      W_LOOP          ;No, restart the application
```

```
MOV      AX, 6F02H      ;disable Watchdog Timer
MOV      BL, 0           ;
INT      15H
```

;

; EXIT ;

Appendix

E

Address Mapping



E.1 Direct Memory Access (DMA)




Figure E-1: Direct Memory Access (DMA)

E.2 Input/Output (IO)

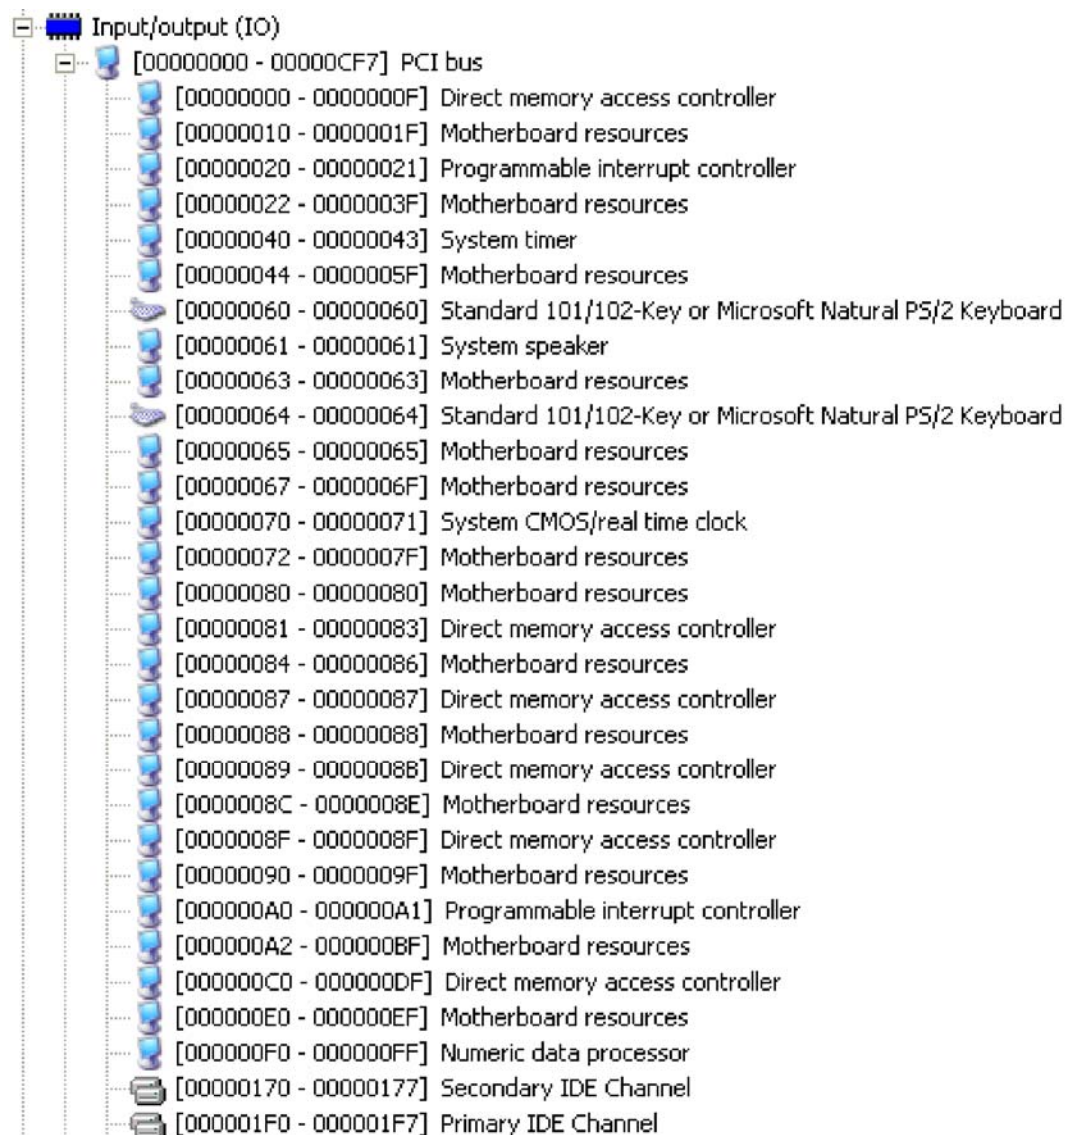


Figure E-2: Input/Output (1 of 2)

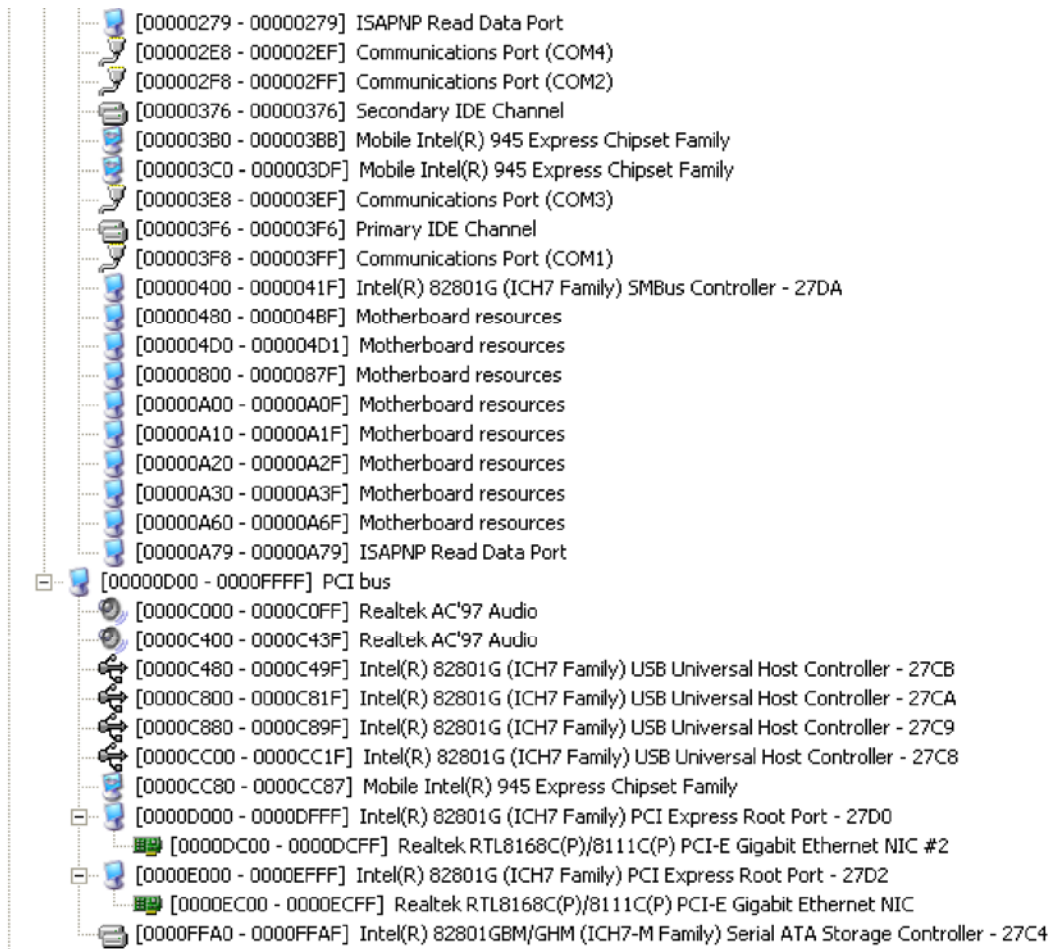


Figure E-3: Input/Output (2 of 2)

E.3 Interrupt Request (IRQ)

Interrupt request (IRQ)		
(ISA) 0	System timer	
(ISA) 1	Standard 101/102-Key or Microsoft Natural PS/2 Keyboard	
(ISA) 3	Communications Port (COM2)	
(ISA) 4	Communications Port (COM1)	
(ISA) 8	System CMOS/real time clock	
(ISA) 9	Microsoft ACPI-Compliant System	
(ISA) 10	Communications Port (COM4)	
(ISA) 11	Communications Port (COM3)	
(ISA) 12	Microsoft PS/2 Mouse	
(ISA) 13	Numeric data processor	
(ISA) 14	Primary IDE Channel	
(ISA) 15	Secondary IDE Channel	
(PCI) 5	Intel(R) 82801G (ICH7 Family) SMBus Controller - 27DA	
(PCI) 16	Intel(R) 82801G (ICH7 Family) PCI Express Root Port - 27D0	
(PCI) 16	Intel(R) 82801G (ICH7 Family) USB Universal Host Controller - 27CB	
(PCI) 16	Mobile Intel(R) 945 Express Chipset Family	
(PCI) 16	Realtek RTL8168C(P)/8111C(P) PCI-E Gigabit Ethernet NIC #2	
(PCI) 17	Intel(R) 82801G (ICH7 Family) PCI Express Root Port - 27D2	
(PCI) 17	Realtek AC'97 Audio	
(PCI) 17	Realtek RTL8168C(P)/8111C(P) PCI-E Gigabit Ethernet NIC	
(PCI) 18	Intel(R) 82801G (ICH7 Family) USB Universal Host Controller - 27CA	
(PCI) 19	Intel(R) 82801G (ICH7 Family) USB Universal Host Controller - 27C9	
(PCI) 23	Intel(R) 82801G (ICH7 Family) USB Universal Host Controller - 27C8	
(PCI) 23	Intel(R) 82801G (ICH7 Family) USB2 Enhanced Host Controller - 27CC	

Figure E-4: Interrupt Request (IRQ)

E.4 Memory


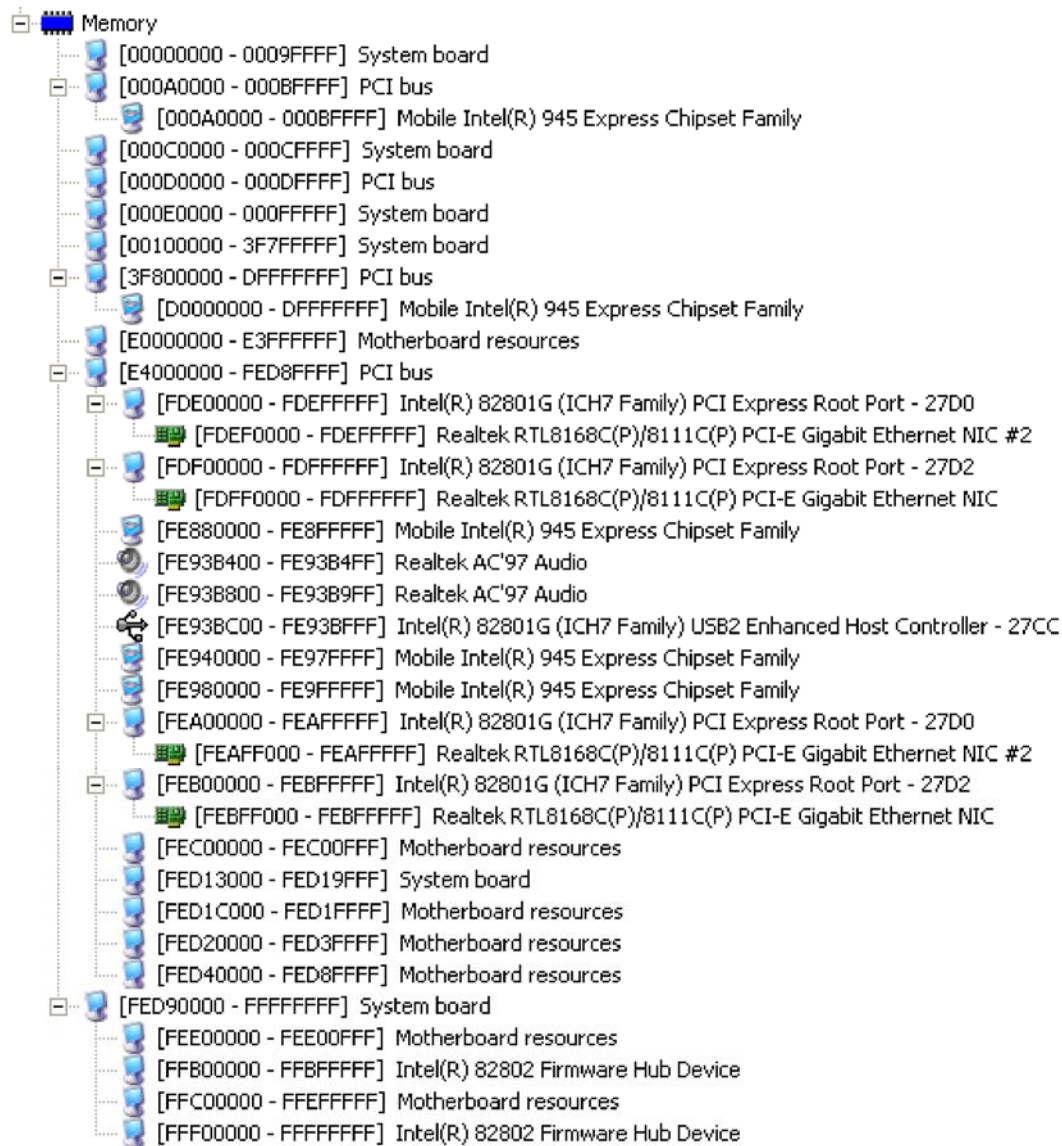


Figure E-5: Memory

Appendix

F

Hazardous Materials Disclosure

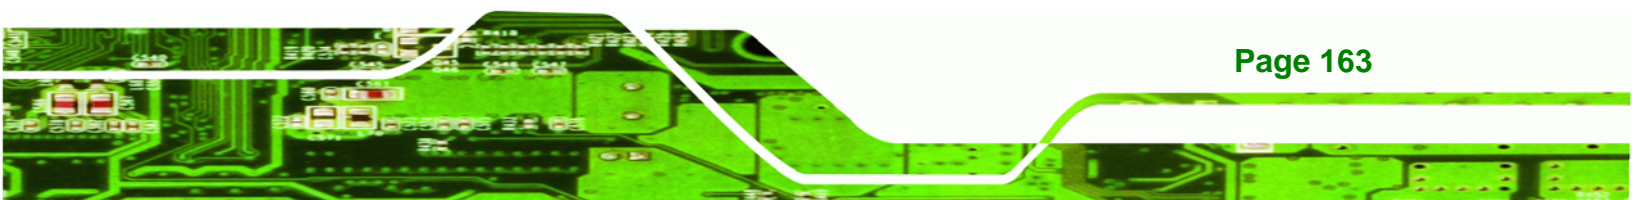

F.1 Hazardous Materials Disclosure Table for IPB Products Certified as RoHS Compliant Under 2002/95/EC Without Mercury

The details provided in this appendix are to ensure that the product is compliant with the Peoples Republic of China (China) RoHS standards. The table below acknowledges the presences of small quantities of certain materials in the product, and is applicable to China RoHS only.

A label will be placed on each product to indicate the estimated “Environmentally Friendly Use Period” (EFUP). This is an estimate of the number of years that these substances would “not leak out or undergo abrupt change.” This product may contain replaceable sub-assemblies/components which have a shorter EFUP such as batteries and lamps. These components will be separately marked.

Please refer to the table on the next page.



KINO-945GSE Motherboard

Part Name	Toxic or Hazardous Substances and Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (CR(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Housing	X	O	O	O	O	X
Display	X	O	O	O	O	X
Printed Circuit Board	X	O	O	O	O	X
Metal Fasteners	X	O	O	O	O	O
Cable Assembly	X	O	O	O	O	X
Fan Assembly	X	O	O	O	O	X
Power Supply Assemblies	X	O	O	O	O	X
Battery	O	O	O	O	O	O
<p>O: This toxic or hazardous substance is contained in all of the homogeneous materials for the part is below the limit requirement in SJ/T11363-2006</p> <p>X: This toxic or hazardous substance is contained in at least one of the homogeneous materials for this part is above the limit requirement in SJ/T11363-2006</p>						

KINO-945GSE Motherboard

此附件旨在确保本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符合中国 RoHS 标准规定的限量要求。

本产品上会附有“环境友好使用期限”的标签，此期限是估算这些物质“不会有泄漏或突变”的年限。本产品可能包含有较短的环境友好使用期限的可替换元件，像是电池或灯管，这些元件将会单独标示出来。

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (CR(VI))	多溴联苯 (PBB)	多溴二苯 醚 (PBDE)
壳体	X	O	O	O	O	X
显示	X	O	O	O	O	X
印刷电路板	X	O	O	O	O	X
金属螺帽	X	O	O	O	O	O
电缆组装	X	O	O	O	O	X
风扇组装	X	O	O	O	O	X
电力供应组装	X	O	O	O	O	X
电池	O	O	O	O	O	O
O: 表示该有毒有害物质在该部件所有物质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。						
X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。						

